

SCROLLSAW WORKSHOP

WWW.SCROLLSAWWORKSHOP.BLOGSPOT.COM

Digital Patterns

Designed by Steve Good



Hundreds of free Patterns
Stencil Printer
Jigsaw Puzzle Templates
DVD's
Key Chain Pattern Printer
Video Tutorials
Reviews
Community Forum and more.

If you would like
to donate click
here. No Paypal
account needed.



Note to commercial print employees: I give my permission to print as many of this pattern book as your customer requires.

steve@stevedgood.com

Copyright Steve Good 2017

General Pattern Information



You may use this pattern to make as many of the project as you like. You are free to use any technique including mass production to build the project. The pattern may be copied and given to others provided the entire book is kept intact. You may not sell the pattern or include it in another commercial package of any type.

Steve Good retains the right to the pattern. If you have any questions about the use of this pattern please contact me at steve@stevedgood.com

When printing this pattern it is important to print it full size. When you bring up the print dialog box look in the “Page Sizing & Handling” section. Make sure the “Actual Size” is selected before you hit print.

You also only need to print the page/s you need. After the print dialog opens look for the “Pages to Print” section. You can print the current page or a range of pages. This will help save ink by not printing the title/instruction pages.

Printing Instructions



Page Sizing & Handling ⓘ

Size

Poster

Multiple

Booklet

☐ Fit

☒ Actual size

☐ Shrink oversized pages

☐ Custom Scale: %

☐ Choose paper source by PDF page size

Pages to Print

☒ All


☐ Current page

☐ Pages

▶ More Options

Apple Pencil Charger



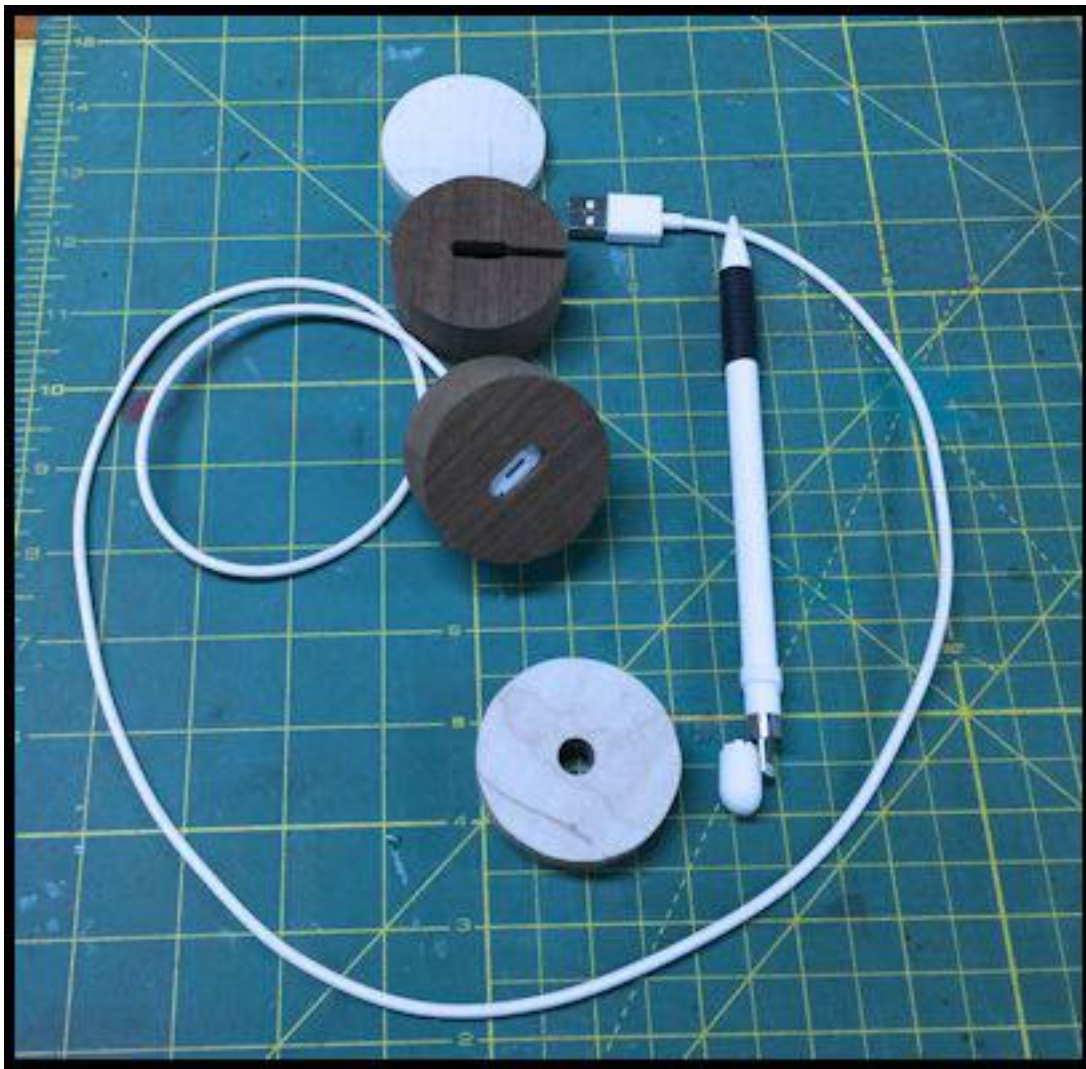

This picture shows the four pieces. The piece with the small hole is the top. The charging cable goes in the next piece. The third piece locks the cable in and let's the cable out. The last piece is the bottom.



You will need an Apple Pencil charging cable. It will be dedicated to this project and not removable.


<http://amzn.to/2ul2uzV>



Use the Apple pencil as a guide when you glue the top on to make sure the pencil lighting plug lines up. Glue just the top three layers together first. Leave the bottom off for now.



Make sure the hole stays lined up while the glue sets.

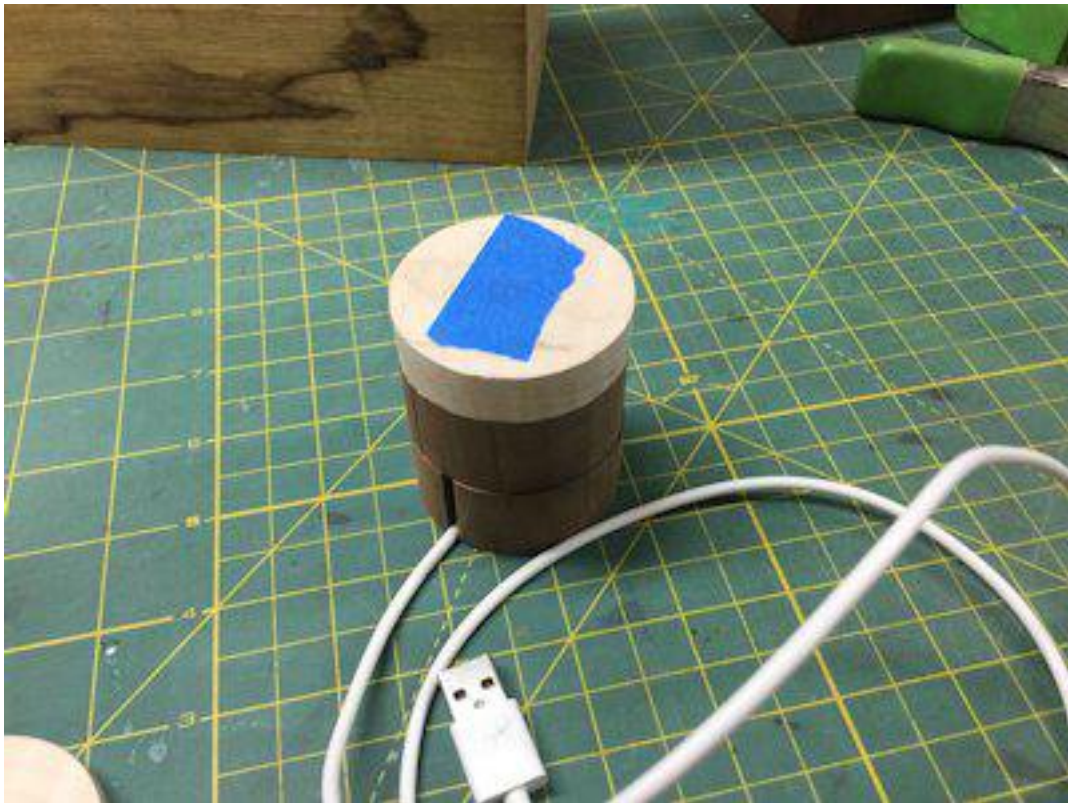


After the glue dries place tape over the hole to prevent dust from getting in the connector.




Sand all the pieces flush. We left the bottom off so we could sand and not have the cable interfering.



We can now move the cable to the side and glue on the bottom.

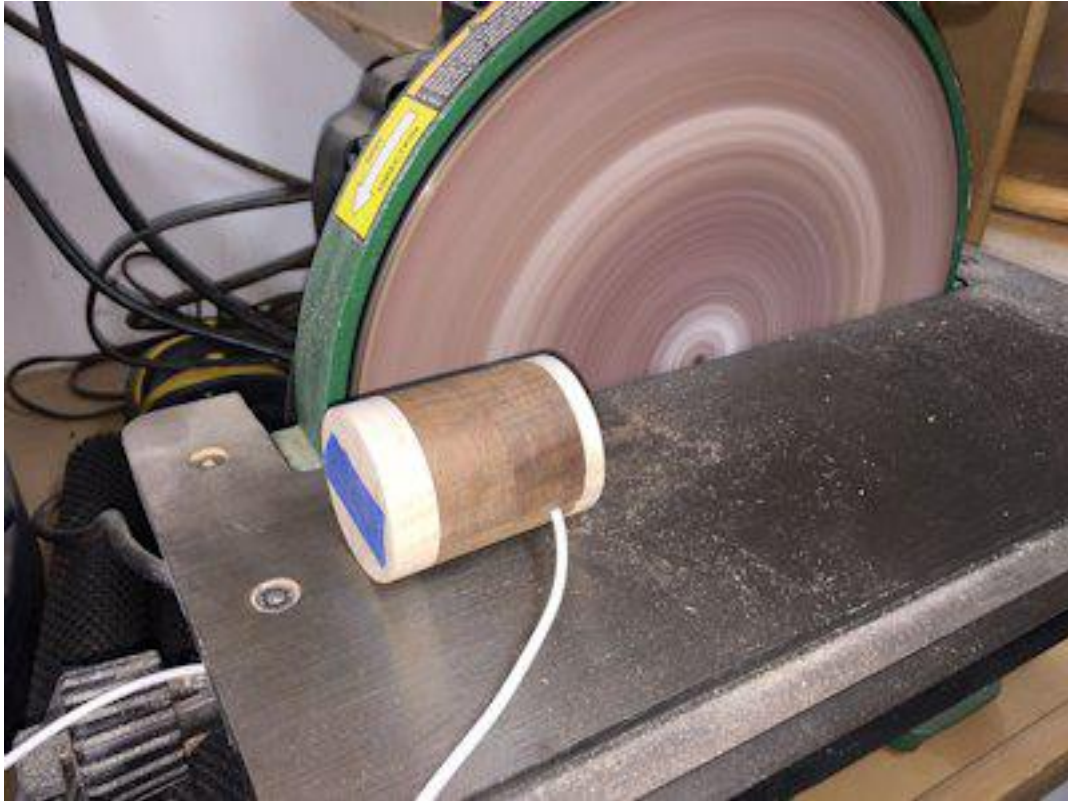

Carefully sand the bottom flush making sure not to snag the cable. You may have to finish sanding by hand.

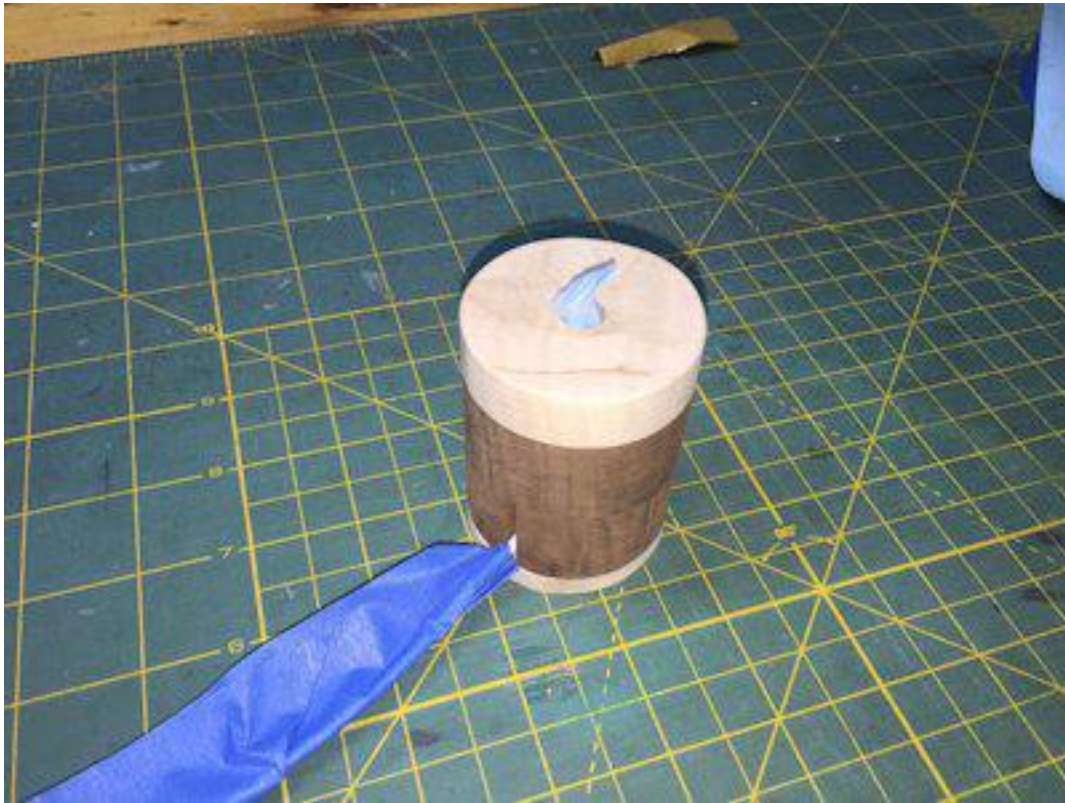

To prepare for sanding, mask off the cable with tape and plug the hole with paper towel.



Give the charger a few coats of spray lacquer, sanding lightly between coats.



Top 1/2" thick with a 3/8" center hole. The hole needs to be drilled accurately so it lines up with the charging cable.



This part holds the cable. Cut slightly inside the line of the center cutout. Test cable for a snug fit and file to a final fit. It does not have to be perfect because the piece above and below will help hold the cable in place.



This part allows the cable to exit the charger and lock the cable in the part above it.



The bottom hold the cable in and gives the charger a finished look.