

SCROLLSAW WORKSHOP

WWW.SCROLLSAWWORKSHOP.BLOGSPOT.COM

Digital Patterns

Designed by Steve Good



Hundreds of free Patterns
Stencil Printer
Jigsaw Puzzle Templates
DVD's
Key Chain Pattern Printer
Video Tutorials
Reviews
Community Forum and more.

If you would like
to donate click
here. No Paypal
account needed.



Note to commercial print employees: I give my permission to print as many of this pattern book as your customer requires.

steve@stevedgood.com

Copyright Steve Good 2018



General Pattern Information


You may use this pattern to make as many of the project as you like. You are free to use any technique including mass production to build the project. The pattern may be copied and given to others provided the entire book is kept intact. You may not sell the pattern or include it in another commercial package of any type.

Steve Good retains the right to the pattern. If you have any questions about the use of this pattern please contact me at steve@stevedgood.com

When printing this pattern it is important to print it full size. When you bring up the print dialog box look in the “Page Sizing & Handling” section. Make sure the “Actual Size” is selected before you hit print.

You also only need to print the page/s you need. After the print dialog opens look for the “Pages to Print” section. You can print the current page or a range of pages. This will help save ink by not printing the title/instruction pages.

Printing Instructions

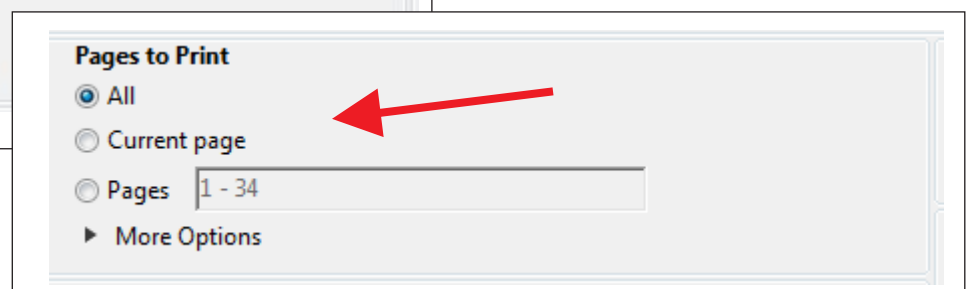



This is a quick project that you could build with a child. There are only four parts and two interior cuts.





Here are the four parts. I used MDF for all the parts except the trigger. I used Baltic birch plywood for the trigger so it would have more strength.

Below is a cutaway of the slide trigger. You need to make sure the trigger slide freely when assembled. Do whatever sanding is need to make it free.





Carefully glue the pieces together so you don't glue the trigger in place. It needs to slide smoothly.





Notice how I slightly rounded over the rear of the gun. This allows the rubber band to release smoothly when the trigger is pulled.

1/4" Thick

