SCROLLSAW WORKSHO

Digital Patterns Designed by Steve Good








Hundreds of free Patterns Stencil Printer **Jigsaw Puzzle Templates** Key Chain Pattern Printer Video Tutorials Reviews Community Forum and more.

If you would like to donate click here. No Paypal account needed.







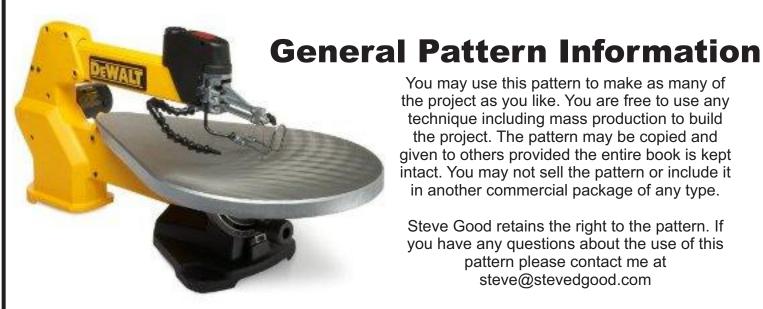

You may use this pattern to make as many of the project as you like. You are free to use any technique including mass production to build the project. The pattern may be copied and given to others provided the entire book is kept intact. You may not sell the pattern or include it in another commercial package of any type.


Steve Good retains the right to the pattern. If you have any questions about the use of this pattern please contact me at steve@stevedgood.com

When printing this pattern it is important to print it full size. When you bring up the print dialog box look in the "Page Sizing & Handling" section. Make sure the "Actual Size" is selected before you hit print.

You also only need to print the page/s you need. After the print dialog opens look for the "Pages to Print" section. You can print the current page or a range of pages. This will help save ink by not printing the title/instruction pages.

Printing Instructions



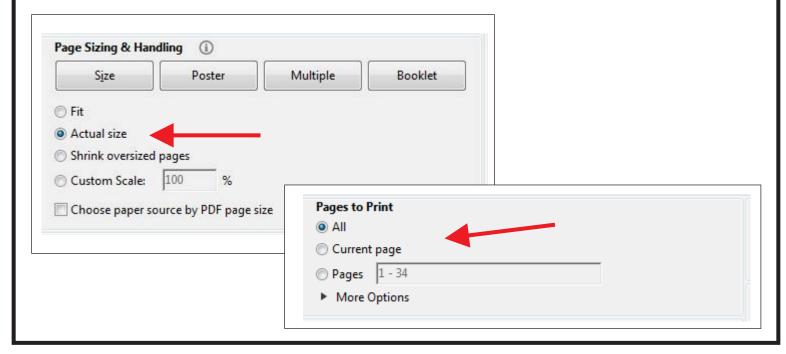

Easter Egg Box




The inner and outer walls are cut from one block of wood. This saves wood and guarantees a perfect fit. When you drill the starter hole for the cut that separates the walls use a small 1/16" drill bit. The hole will not be visible from the outside of the box but it's still best to hide it as much as possible




After you glue the bottom to the inner walls and the top to the outer walls, sand everything flush.

It has a better egg appearance if you round over the edges with a router. I rounded over the top and bottom.

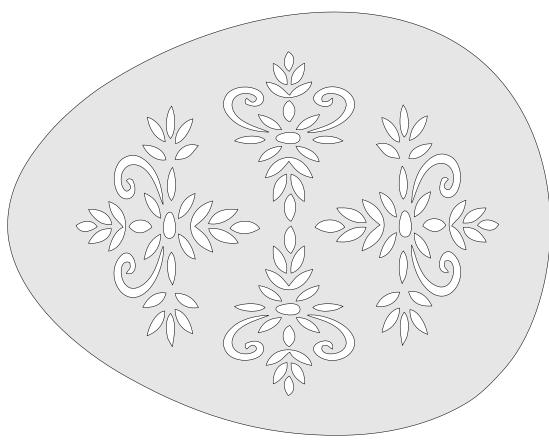

1/4" Thick

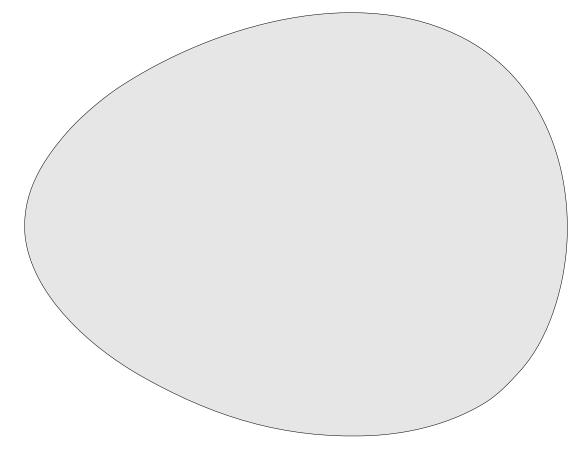

At least 1" thick.

