## SCROLLSAW WORKSHOP

## Digital Patterns Designed by Steve Good










Hundreds of free Patterns Stencil Printer **Jigsaw Puzzle Templates** DVD's **Key Chain Pattern Printer** Video Tutorials Reviews Community Forum and more.

If you would like to donate click here. No Paypal account needed.





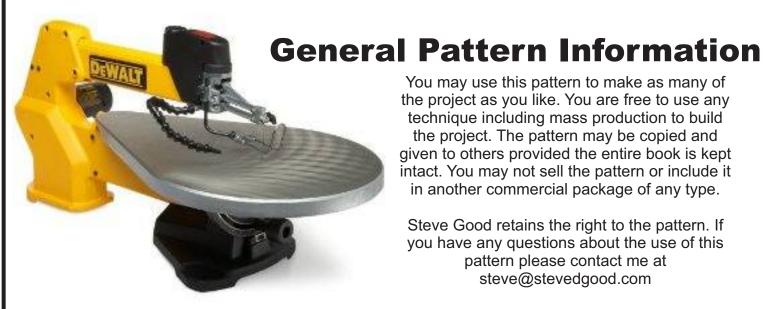

You may use this pattern to make as many of the project as you like. You are free to use any technique including mass production to build the project. The pattern may be copied and given to others provided the entire book is kept intact. You may not sell the pattern or include it in another commercial package of any type.


Steve Good retains the right to the pattern. If you have any questions about the use of this pattern please contact me at steve@stevedgood.com

When printing this pattern it is important to print it full size. When you bring up the print dialog box look in the "Page Sizing & Handling" section. Make sure the "Actual Size" is selected before you hit print.

You also only need to print the page/s you need. After the print dialog opens look for the "Pages to Print" section. You can print the current page or a range of pages. This will help save ink by not printing the title/instruction pages.

## **Printing Instructions**



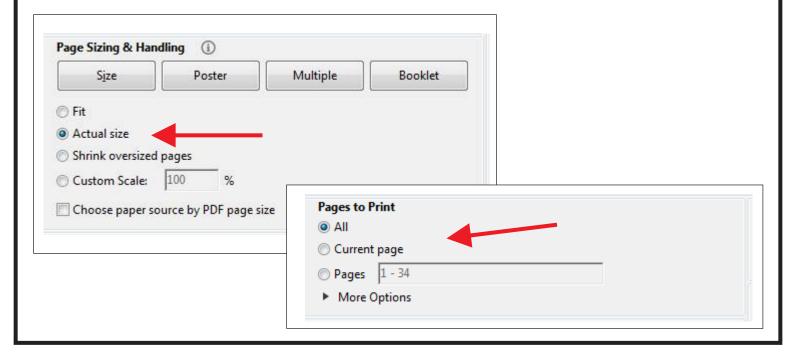

## No Fishing Sign Clock




Project requires a 2 3/4" Clock insert with a 2 3/8" diameter mounting hole.

Buy confidently from Bear Woods by clicking this link.

www.bearwood.com

The hole for the clock insert is 2 3/8" diameter. You can use a 2 3/8" forstner bit or cut the hole with your scroll saw.

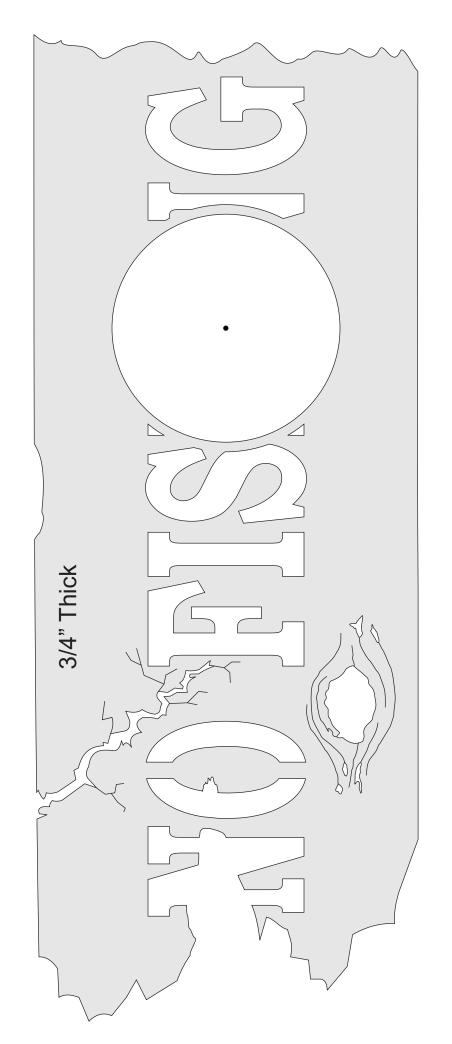

fit. It's better to make the hole too small than too large. do the other interior cuts. If you use your scroll saw cut just inside the line to make sure you get a good If you use a forstner bit, cut the hole before you