SCROLLSAW WORKSH

Digital Patterns Designed by Steve Good







Hundreds of free Patterns Stencil Printer **Jigsaw Puzzle Templates** Key Chain Pattern Printer Video Tutorials Reviews Community Forum and more.


Click to Donate.



Scan to Donate





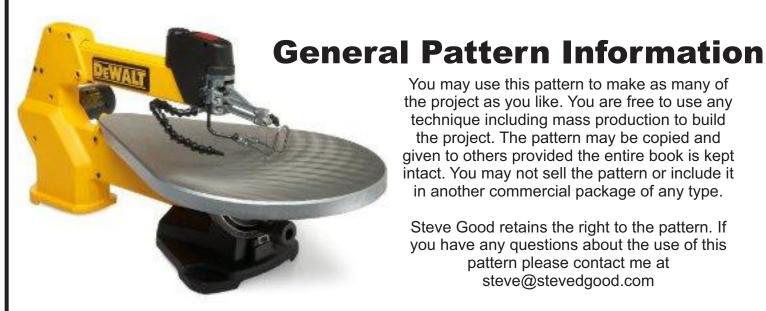

You may use this pattern to make as many of the project as you like. You are free to use any technique including mass production to build the project. The pattern may be copied and given to others provided the entire book is kept intact. You may not sell the pattern or include it in another commercial package of any type.


Steve Good retains the right to the pattern. If you have any questions about the use of this pattern please contact me at steve@stevedgood.com

When printing this pattern it is important to print it full size. When you bring up the print dialog box look in the "Page Sizing & Handling" section. Make sure the "Actual Size" is selected before you hit print.

You also only need to print the page/s you need. After the print dialog opens look for the "Pages to Print" section. You can print the current page or a range of pages. This will help save ink by not printing the title/instruction pages.

Printing Instructions



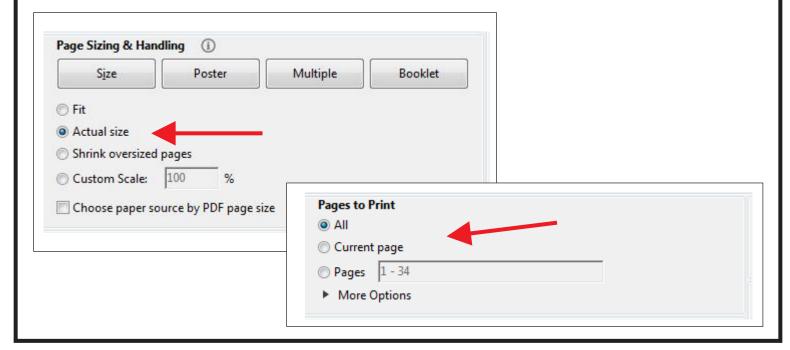






First cut out the rose fretwork and the oval backer board.

Print the rose color map on high quality photo paper.


Carefully align and glue the color map to the backer board.


Glue the rose fretwork on top of the color map.

Repeat for all three roses.

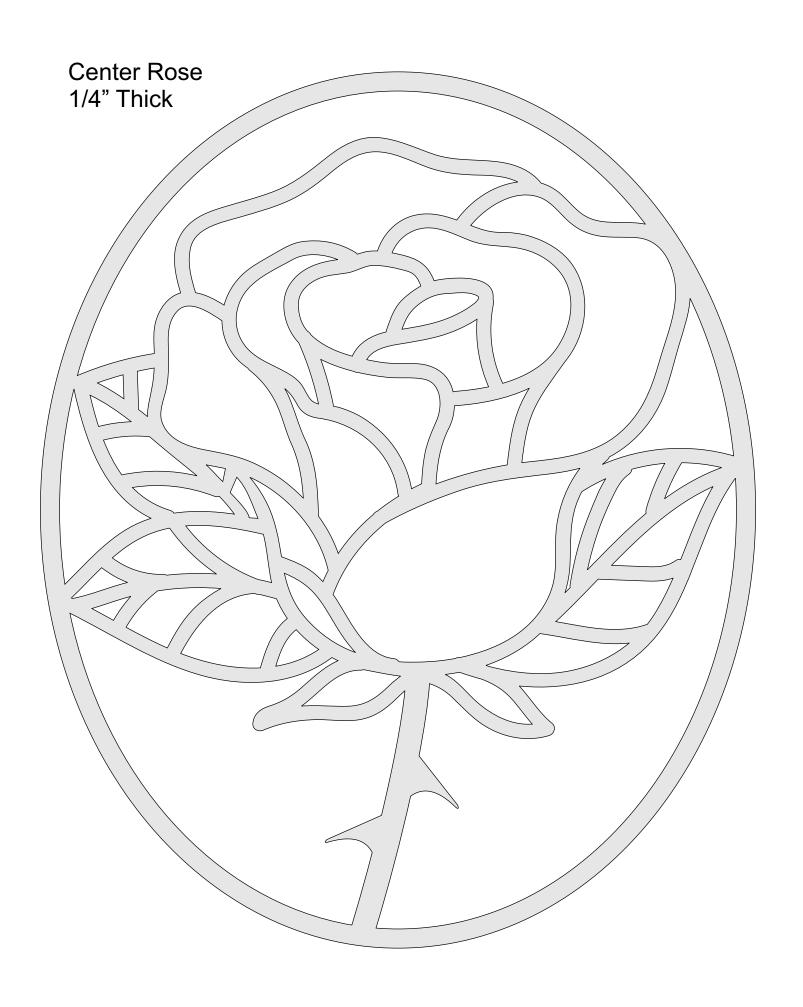



Center Rose Color Print on high quality photo paper. Cut out and glue to backer board.

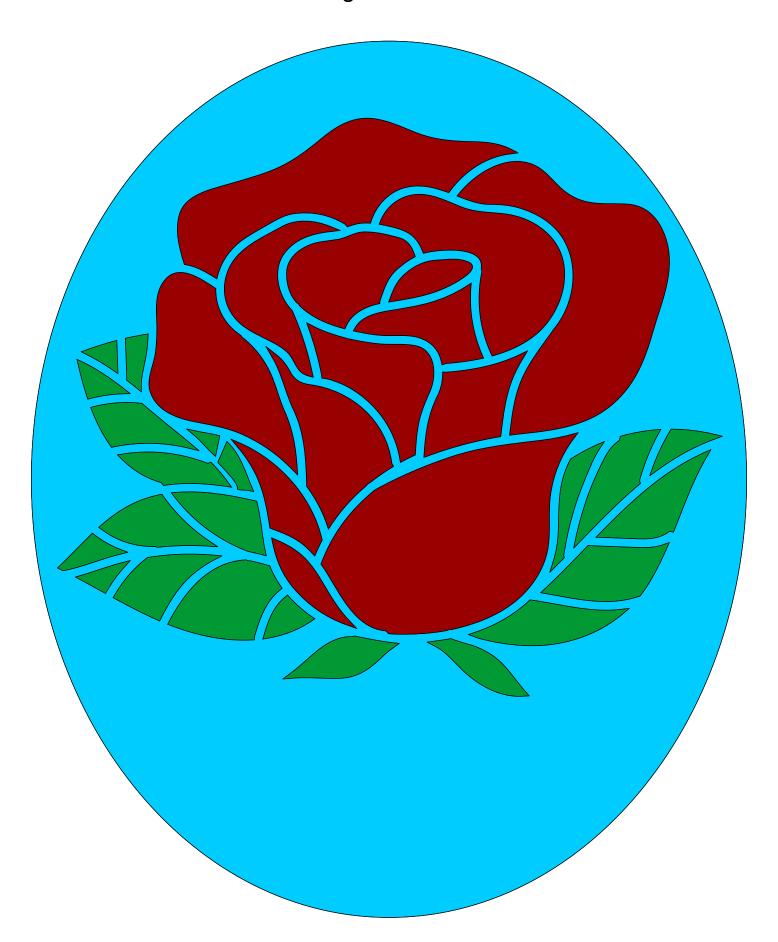

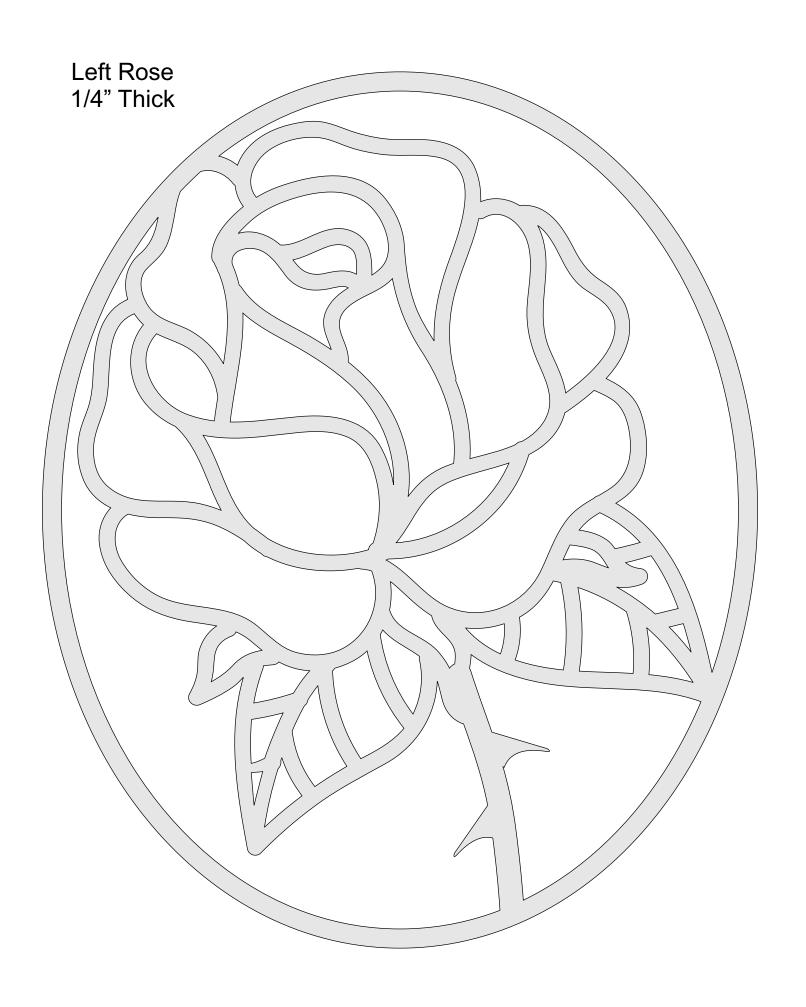


Left Rose Color Print on high quality photo paper. Cut out and glue to backer board.

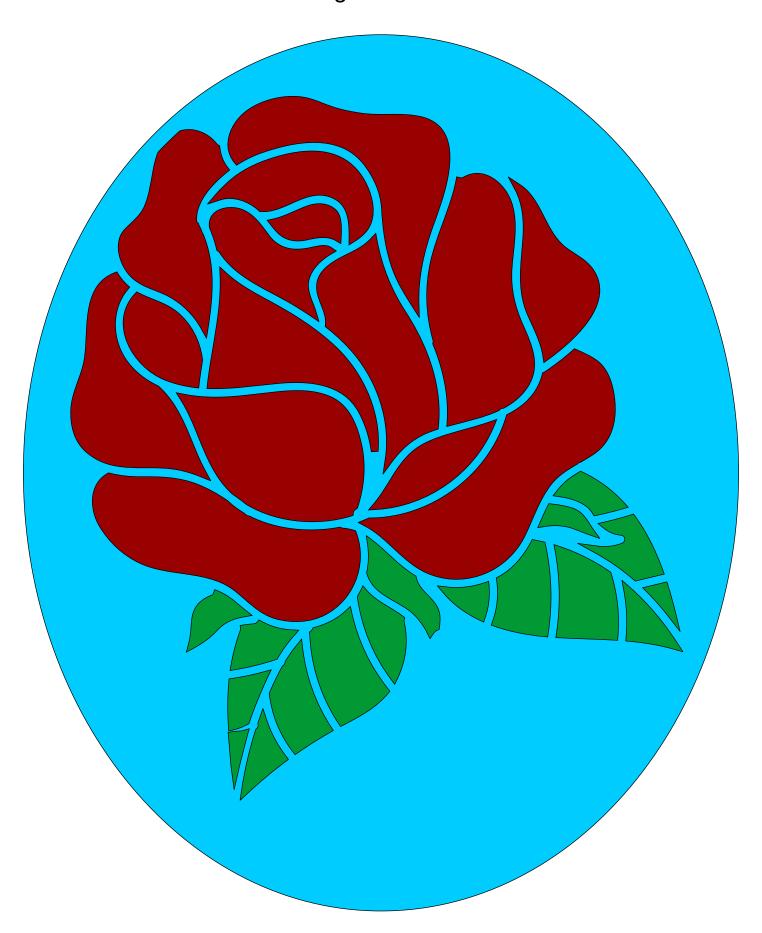

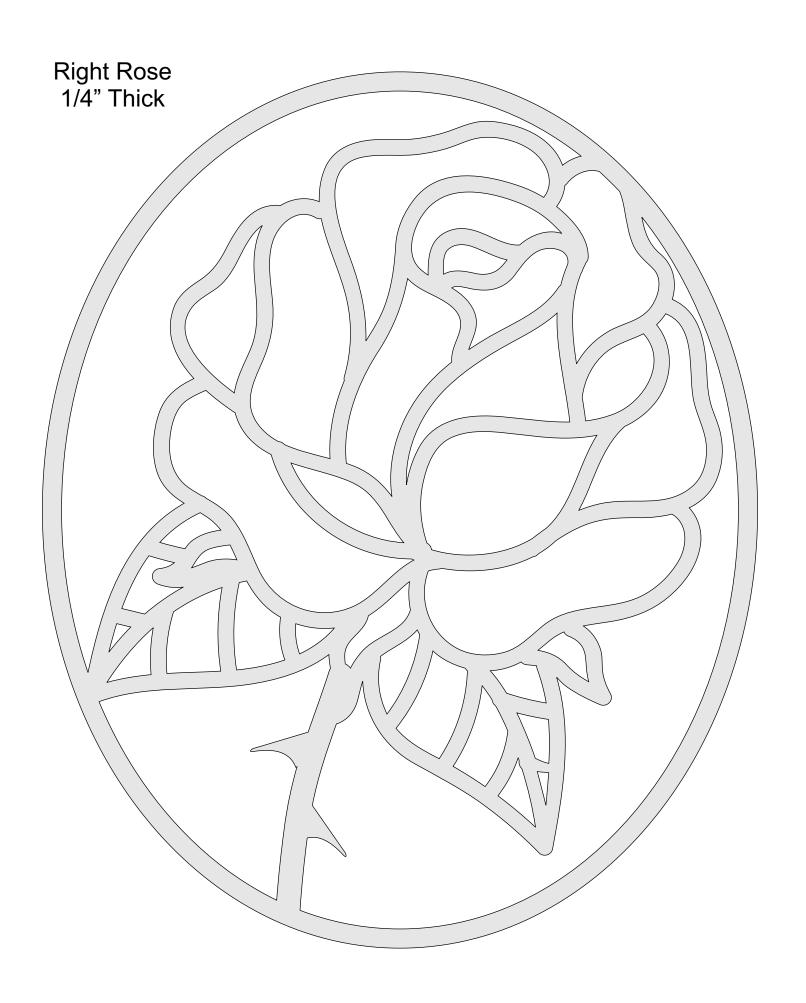

Right Rose Color Print on high quality photo paper. Cut out and glue to backer board.

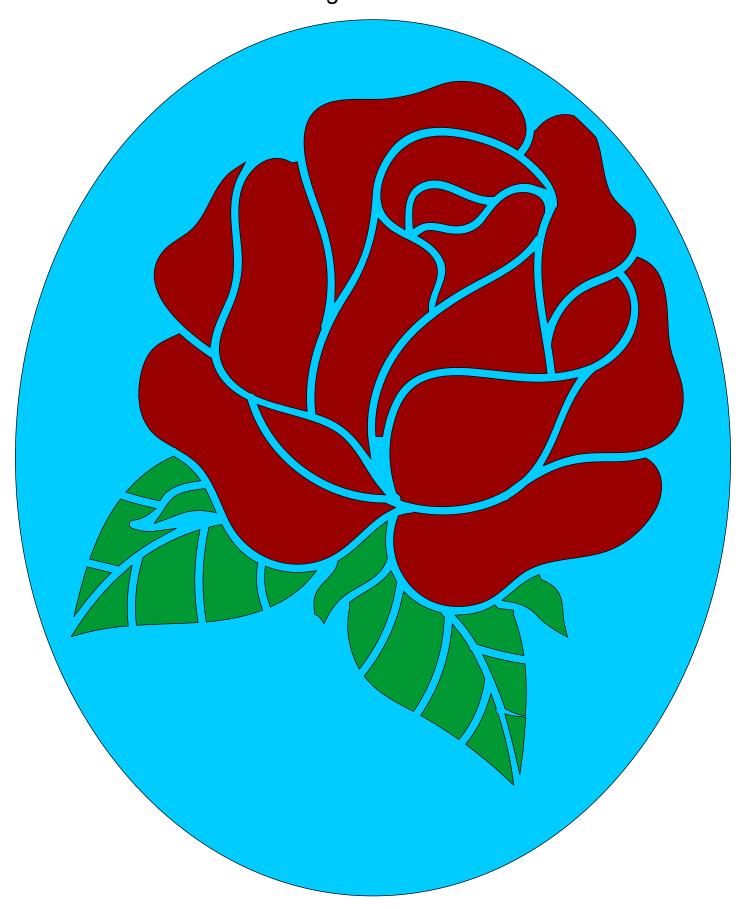

Backer Board 1/8" Thick Cut three