SCROLLSAWWORKSHOP.BLOGSPOT.COM


Digital Patterns Designed by Steve Good



Hundreds of free Patterns Stencil Printer Jigsaw Puzzle Templates DVD's Key Chain Pattern Printer Video Tutorials Reviews Community Forum and more.

If you would like to donate click here. No Paypal account needed.



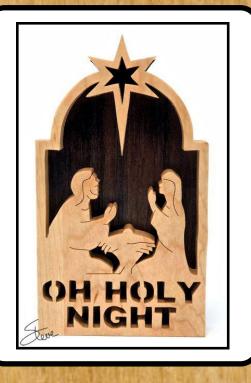

steve@stevedgood.com

VISA

General Pattern Information

You may use this pattern to make as many of the project as you like. You are free to use any technique including mass production to build the project. The pattern may be copied and given to others provided the entire book is kept intact. You may not sell the pattern or include it in another commercial package of any type.

Steve Good retains the right to the pattern. If you have any questions about the use of this pattern please contact me at steve@stevedgood.com


When printing this pattern it is important to print it full size. When you bring up the print dialog box look in the "Page Sizing & Handling" section. Make sure the "Actual Size" is selected before you hit print.


You also only need to print the page/s you need. After the print dialog opens look for the "Pages to Print" section. You can print the current page or a range of pages. This will help save ink by not printing the title/instruction pages.


Printing Instructions



S <u>i</u> ze	Poster	Multiple	Booklet		
🔿 Fit					
Actual size	◀				
Shrink oversized	d pages				
Custom Scale:	100 %				
Choose paper s	ource by PDF page s		nt		
		All		-	
		Current	age		
		Pages	L - 34		

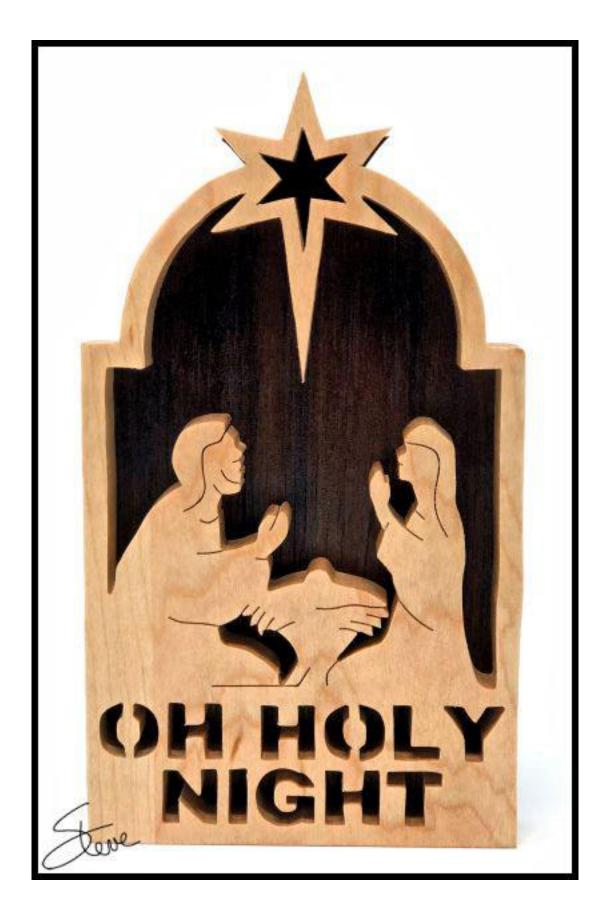

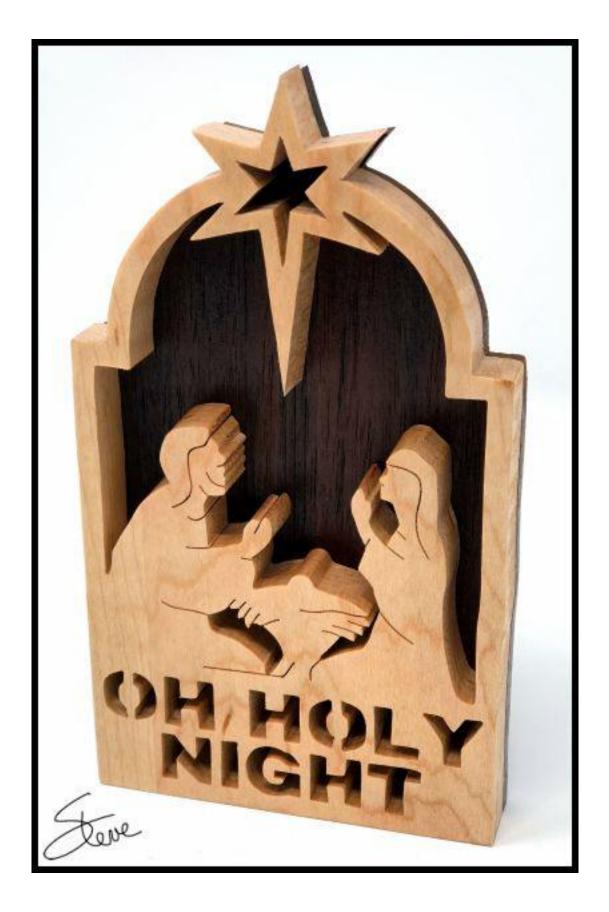


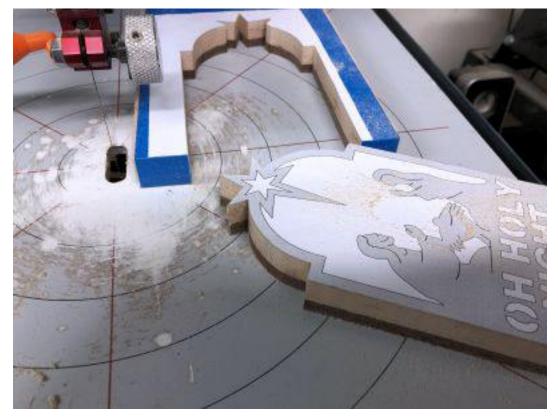

To get a perfect fit for the backer board you can stack cut the outside of the Nativity first.

Remove the backer from the stack.

Drill the interior holes and cut the fretwork.

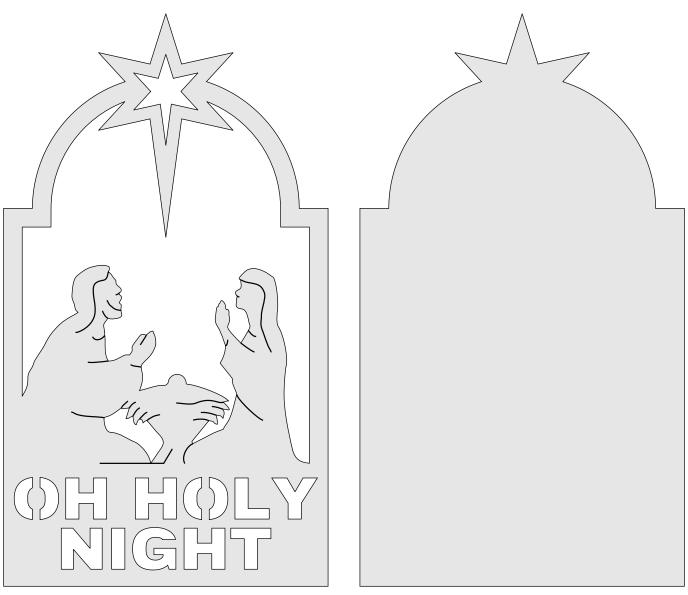




1/4" Thick

 Alternative Spelling.





1/4" Thick

Use the same pattern for a Christmas ornament.

