SCROLLSAW WORKSHO

Digital Patterns Designed by Steve Good








Hundreds of free Patterns Stencil Printer **Jigsaw Puzzle Templates** Key Chain Pattern Printer Video Tutorials Reviews Community Forum and more.

If you would like to donate click here. No Paypal account needed.



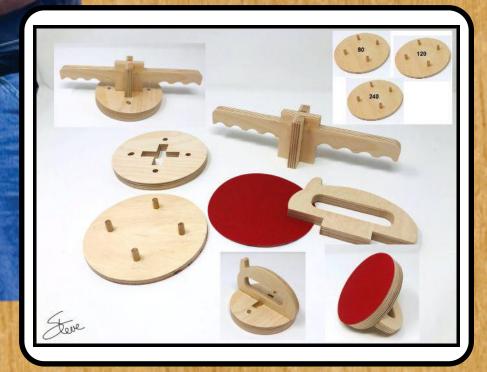



You may use this pattern to make as many of the project as you like. You are free to use any technique including mass production to build the project. The pattern may be copied and given to others provided the entire book is kept intact. You may not sell the pattern or include it in another commercial package of any type.


Steve Good retains the right to the pattern. If you have any questions about the use of this pattern please contact me at steve@stevedgood.com

When printing this pattern it is important to print it full size. When you bring up the print dialog box look in the "Page Sizing & Handling" section. Make sure the "Actual Size" is selected before you hit print.

You also only need to print the page/s you need. After the print dialog opens look for the "Pages to Print" section. You can print the current page or a range of pages. This will help save ink by not printing the title/instruction pages.

Printing Instructions



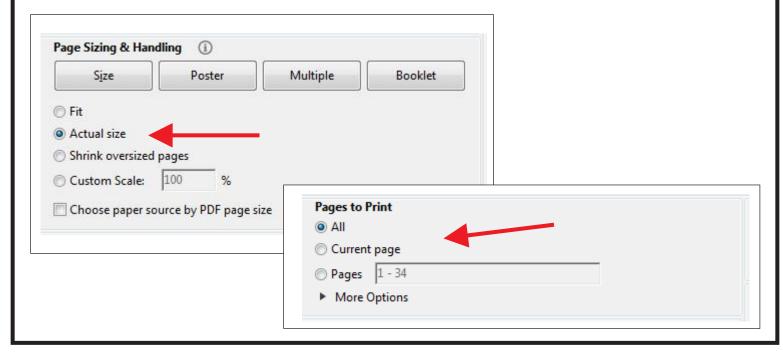

Sanding System






Quick swap handles.



Quick Saw Sanding Pad



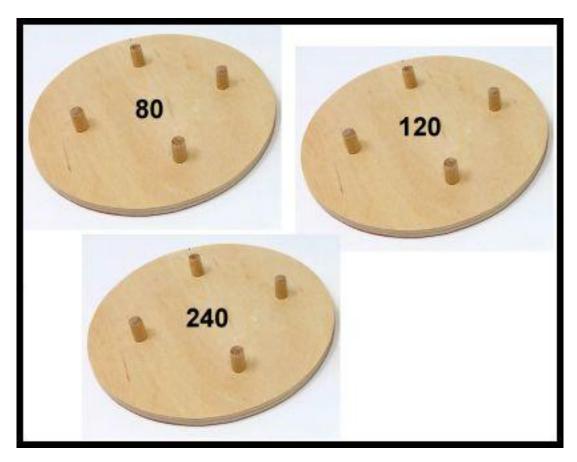


You can make multiple pads for different grits or just change the sand paper on a single pad.

Use 5" or 6" self sticking sand discs




Drill these holes a little larger than the 1/4" dowels you use in the sanding pads for easy assembly.

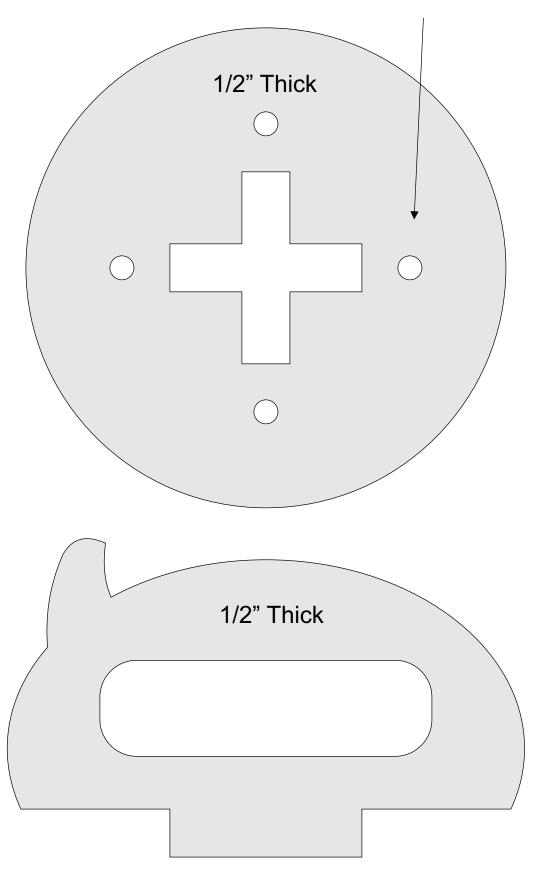



Round over al edges for a comfortable touch.

Drill 1/4" holes for the dowels.
Cut four 1/4" wood dowels 3/4" long
for each pad you make.

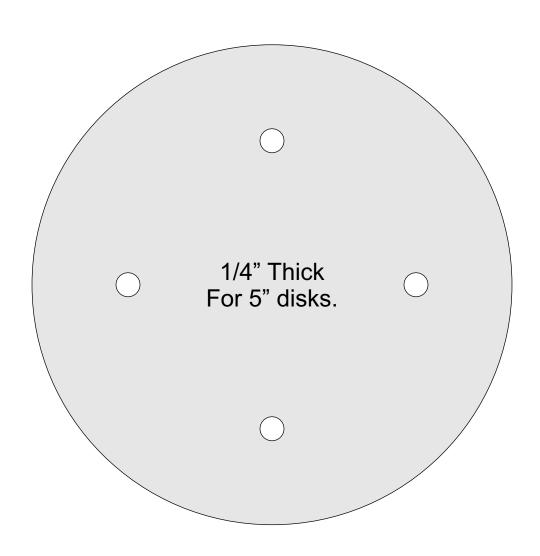

Drill 1/4" holes for the dowels.
Cut four 1/4" wood dowels 3/4" long
for each pad you make.

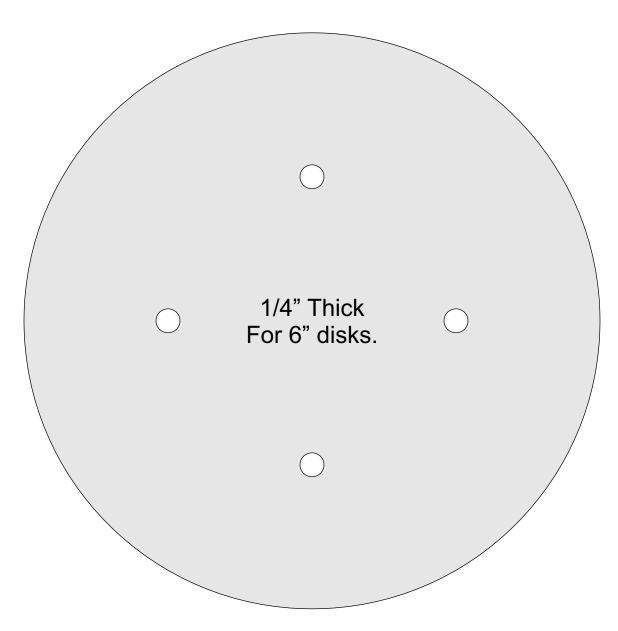

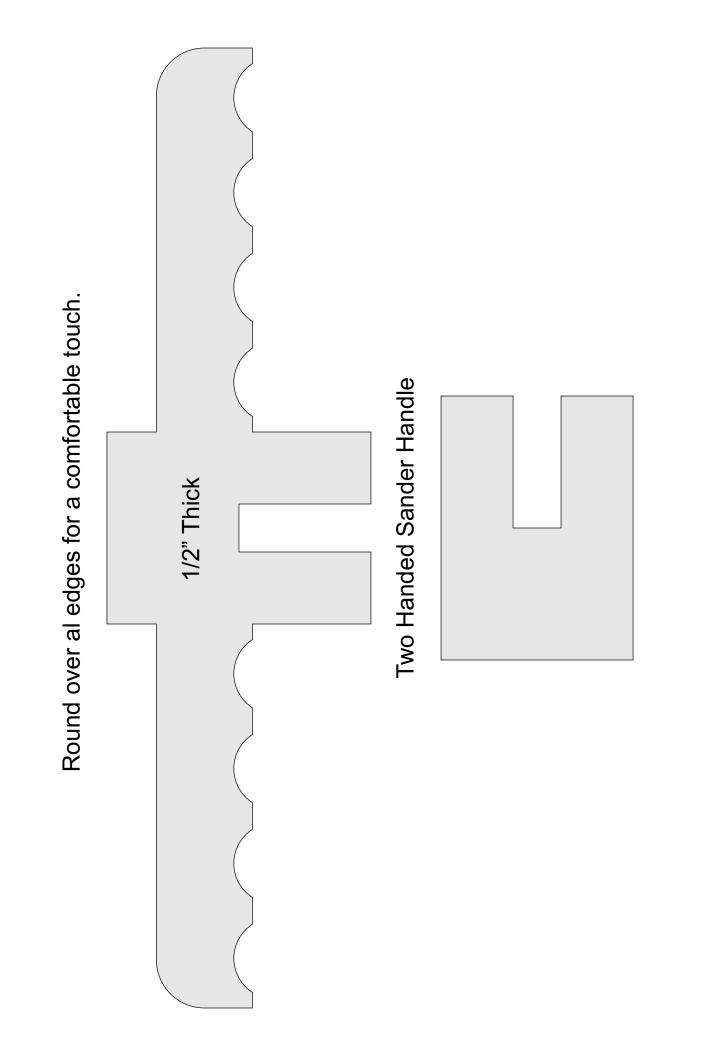

Different shape pads 1/4" Thick

