## SCROLLS/IWWO

# Digital Patterns Designed by Steve Good








**Hundreds of free Patterns** Stencil Printer **Jigsaw Puzzle Templates** Key Chain Pattern Printer Video Tutorials Reviews Community Forum and more.

If you would like to donate click here. No Paypal account needed.





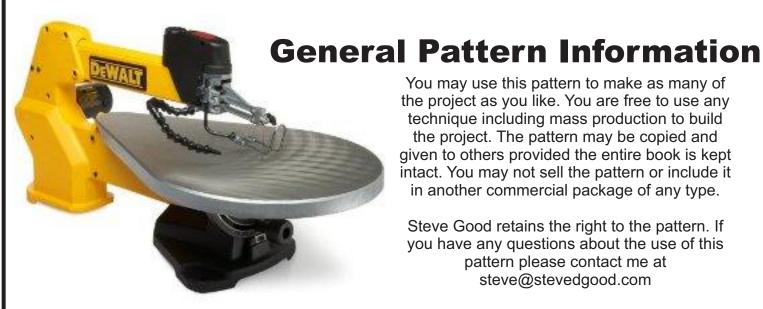

You may use this pattern to make as many of the project as you like. You are free to use any technique including mass production to build the project. The pattern may be copied and given to others provided the entire book is kept intact. You may not sell the pattern or include it in another commercial package of any type.


Steve Good retains the right to the pattern. If you have any questions about the use of this pattern please contact me at steve@stevedgood.com

When printing this pattern it is important to print it full size. When you bring up the print dialog box look in the "Page Sizing & Handling" section. Make sure the "Actual Size" is selected before you hit print.

You also only need to print the page/s you need. After the print dialog opens look for the "Pages to Print" section. You can print the current page or a range of pages. This will help save ink by not printing the title/instruction pages.

#### **Printing Instructions**



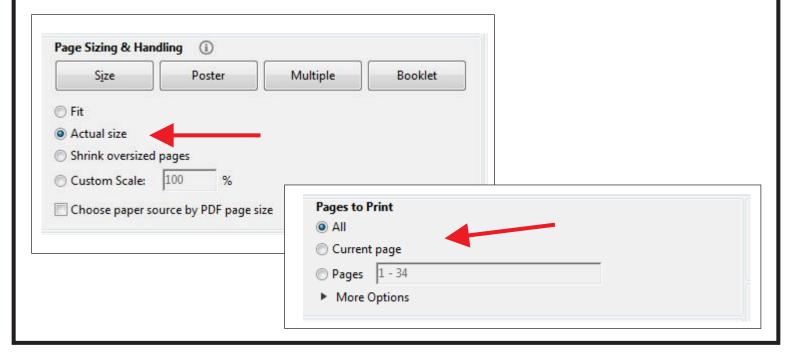

#### Snowman Clock




Requires a 2 3/4" Clock Insert



For this project we will replace the original clock dial. Print the included new dial on photo paper.

Disassemble the clock insert carefully. Remove the bezel and the hands. You don't need to remove the original clock dial.

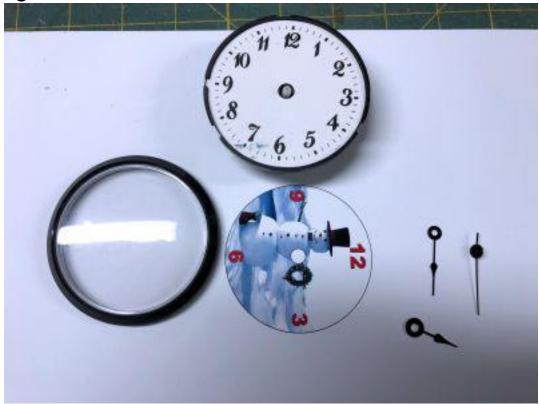



Cut the outside of the dial with sharp scissors.


I use an Exacto knife to cut an X in the center of the dial. I then remove the pieces by carefully cutting along the circle.





Use a small amount of spray adhesive on the back of the new dial. Apply it over the original dial and reassemble the clock.



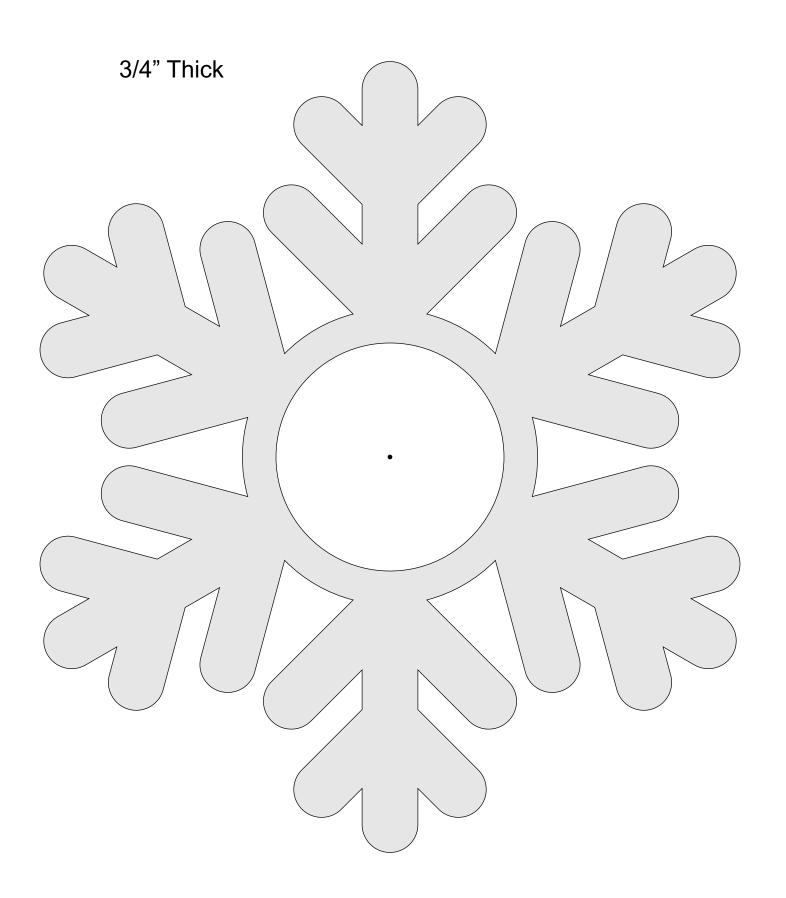

### Print on photo paper/



