## SCROLLSAW WORKSHOP

WWW SCROLL SAWWORKSHOP BLOGSPOT COM

## Digital Patterns

Designed by Steve Good









Hundreds of free Patterns
Stencil Printer
Jigsaw Puzzle Templates
DVD's
Key Chain Pattern Printer
Video Tutorials
Reviews
Community Forum and more.

If you would like to donate click here. No Paypal account needed.







You may use this pattern to make as many of the project as you like. You are free to use any technique including mass production to build the project. The pattern may be copied and given to others provided the entire book is kept intact. You may not sell the pattern or include it in another commercial package of any type.

Steve Good retains the right to the pattern. If you have any questions about the use of this pattern please contact me at steve@stevedgood.com

When printing this pattern it is important to print it full size. When you bring up the print dialog box look in the "Page Sizing & Handling" section. Make sure the "Actual Size" is selected before you hit print.

You also only need to print the page/s you need. After the print dialog opens look for the "Pages to Print" section. You can print the current page or a range of pages. This will help save ink by not printing the title/instruction pages.

## **Printing Instructions**












Stack cut the parts so you make both sides of the bowl at the same time.


All parts are cut from 1/4" Baltic birch plywood and stacked in the following order.

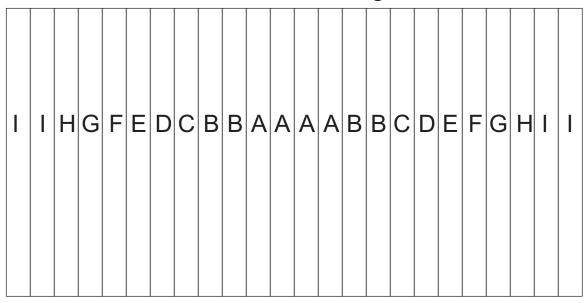


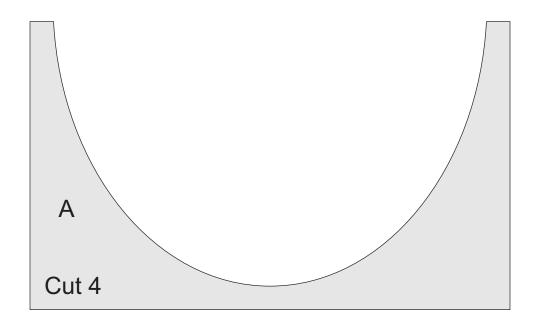



Make four of each of these parts.

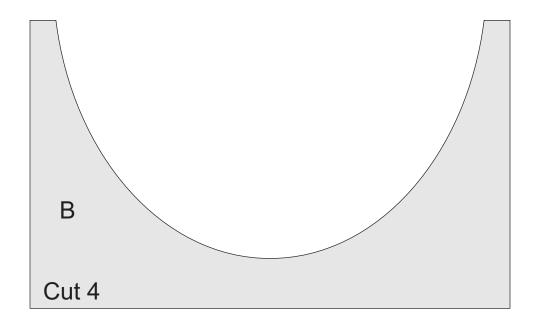


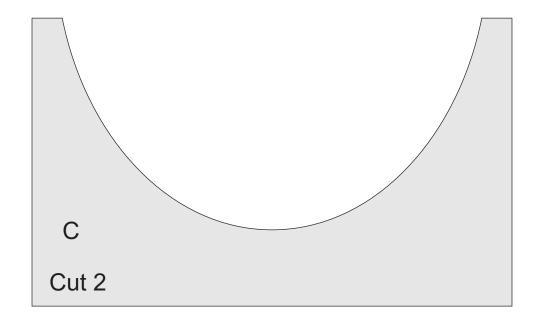


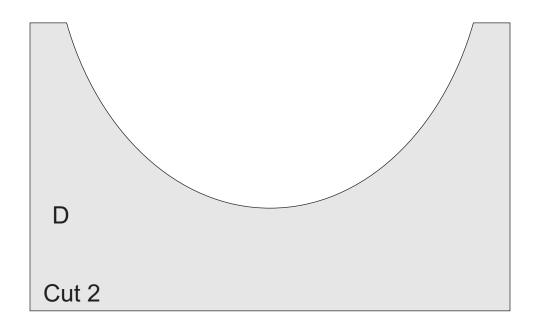

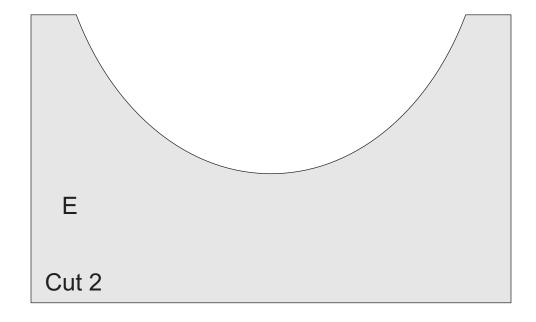

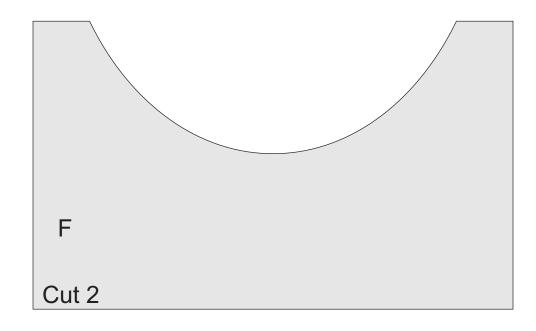

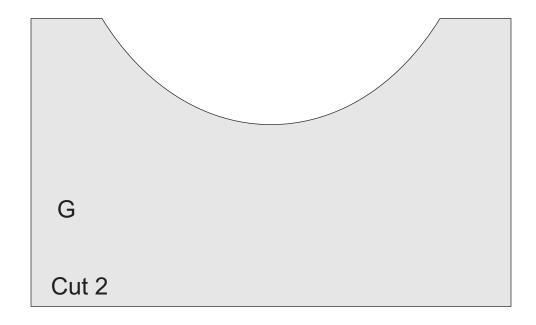

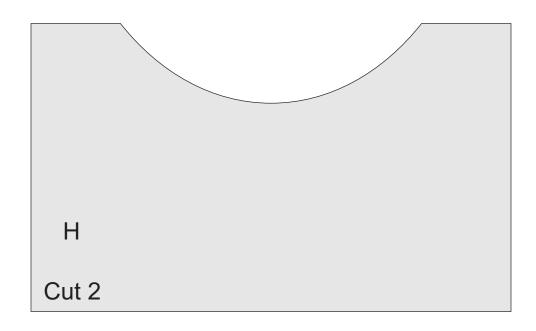

I Cut 4

Make four of this part. Two for each end of the bowl.