SCROLLSAW!

Digital Patterns Designed by Steve Good







Hundreds of free Patterns Stencil Printer **Jigsaw Puzzle Templates** DVD's Key Chain Pattern Printer Video Tutorials Reviews Community Forum and more.






Scan to Donate





Note to commercial print employees: I give my permission to print as many of this pattern book as your customer requires.

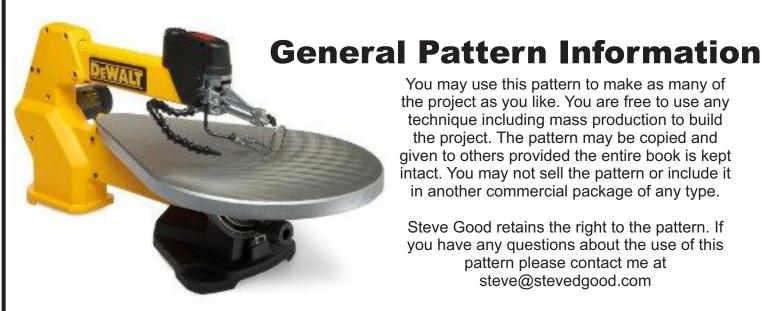

You may use this pattern to make as many of the project as you like. You are free to use any technique including mass production to build the project. The pattern may be copied and given to others provided the entire book is kept intact. You may not sell the pattern or include it in another commercial package of any type.


Steve Good retains the right to the pattern. If you have any questions about the use of this pattern please contact me at steve@stevedgood.com

When printing this pattern it is important to print it full size. When you bring up the print dialog box look in the "Page Sizing & Handling" section. Make sure the "Actual Size" is selected before you hit print.

You also only need to print the page/s you need. After the print dialog opens look for the "Pages to Print" section. You can print the current page or a range of pages. This will help save ink by not printing the title/instruction pages.

Printing Instructions



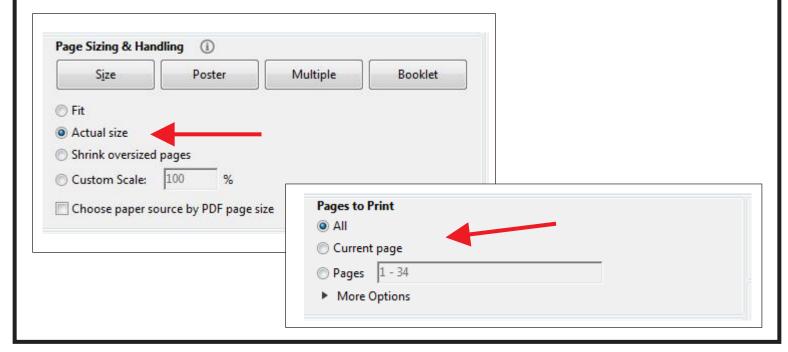



You can use any light bulb but I used this flame light bulb.

LED Flame Effect Light Bulb: E26 Standard Base Flame Bulb - Upside Down Effect - 3W - 200 Lumen Energy Efficient Flickering Fire Lights for Indoor/Outdoor Use - 1 Pack





Buy on Amazon https://amzn.to/3mMWoB7

You will need a lamp kit. I am not going to recommend a specific model because there are so many. You may have to modify the bottom on the lamp to fit your socket.






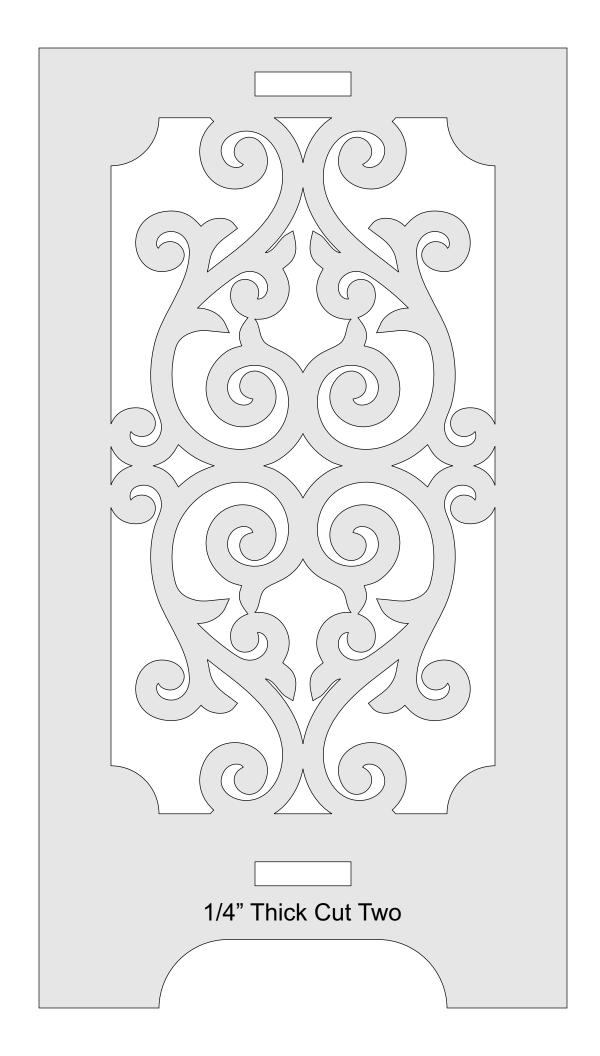


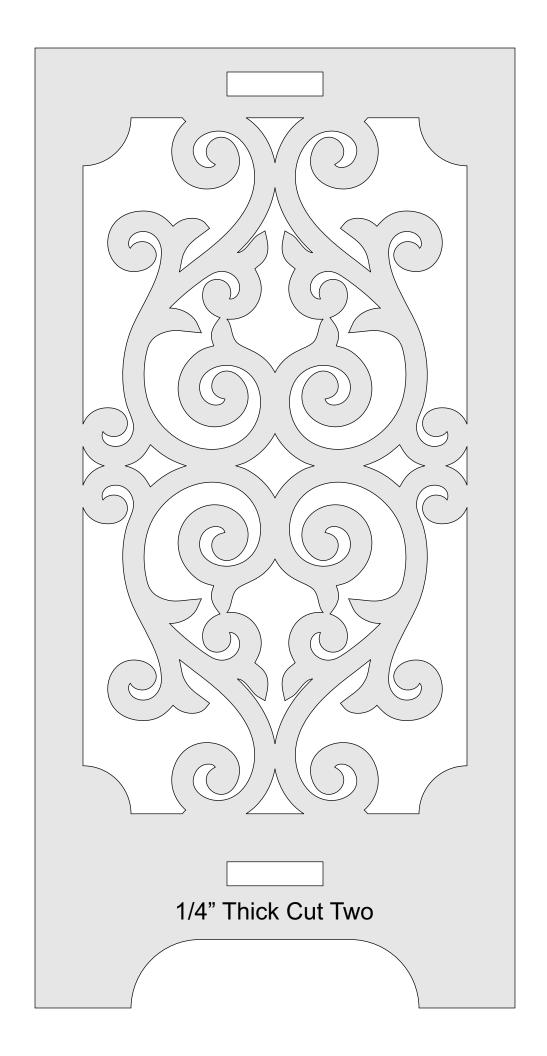



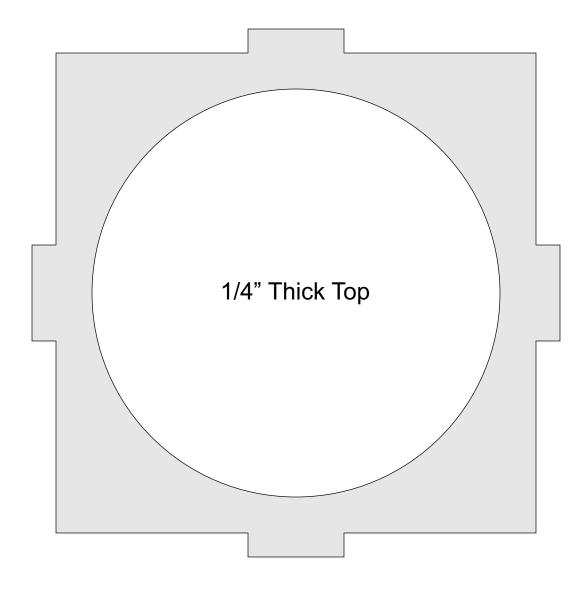

1/4" Thick Top and Bottom Decorations Short Side

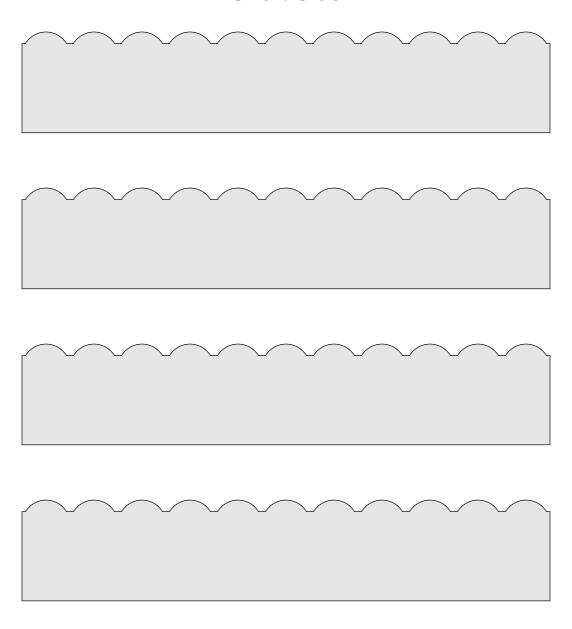

1/4" Thick Top and Bottom Decorations Long Side

