SCROLLSAW WORKSHOP

WWW.SCROLLSAWWORKSHOP.BLOGSPOT.COM

Digital Patterns Designed by Steve Good



Hundreds of free Patterns **Stencil Printer** Jigsaw Puzzle Templates DVD's Key Chain Pattern Printer Video Tutorials Reviews Community Forum and more.



Click to Donate.



Note to commercial print employees: I give my permission to print as many of this pattern book as your customer requires.

steve@stevedgood.com

General Pattern Information

You may use this pattern to make as many of the project as you like. You are free to use any technique including mass production to build the project. The pattern may be copied and given to others provided the entire book is kept intact. You may not sell the pattern or include it in another commercial package of any type.

Steve Good retains the right to the pattern. If you have any questions about the use of this pattern please contact me at steve@stevedgood.com

When printing this pattern it is important to print it full size. When you bring up the print dialog box look in the "Page Sizing & Handling" section. Make sure the "Actual Size" is selected before you hit print.


You also only need to print the page/s you need. After the print dialog opens look for the "Pages to Print" section. You can print the current page or a range of pages. This will help save ink by not printing the title/instruction pages.

Printing Instructions




| S <u>i</u> ze | Poster | Multiple | Booklet | |
|------------------|---------------------|------------------|---------|--|
| 🔿 Fit | | | | |
| Actual size | ◀─── | - | | |
| Shrink oversized | d pages | | | |
| Custom Scale: | 100 % | | | |
| Choose paper s | ource by PDF page s | size Pages to Pr | nt | |
| | | All | | |
| | | O Current p | age | |
| | | Current | -9- | |
| | | O Current | - | |


This backdrop panel is 48" tall but you can add panels to make it as tall as you like.

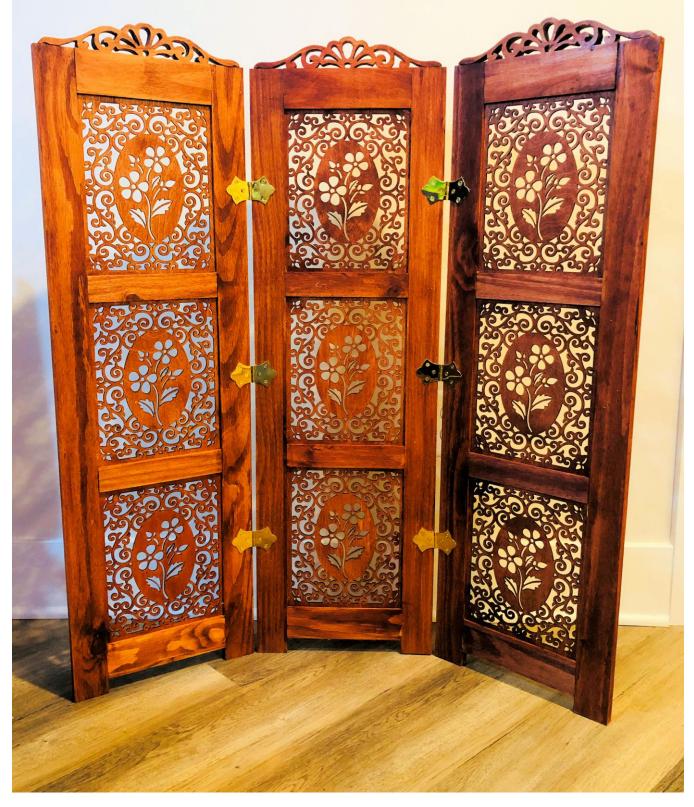

I have installed the hinges so the panel folds forward. I am using it as a backdrop. If you want to use it as a screen then reconfigure the hinges.




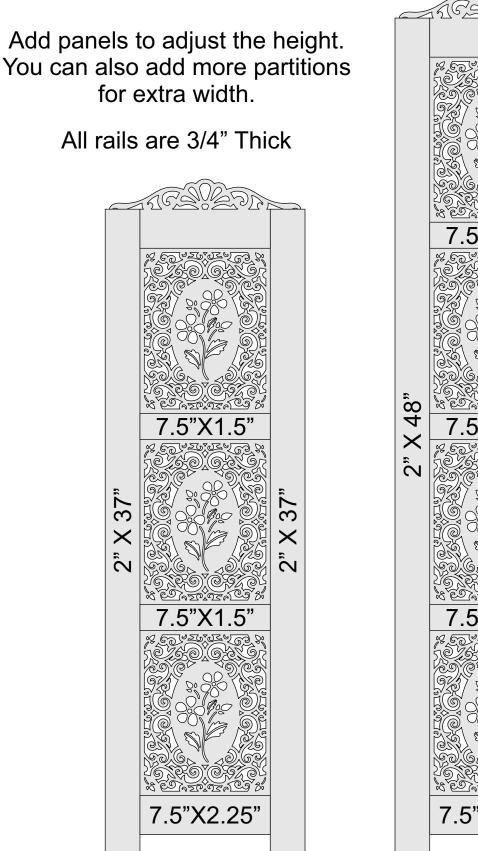

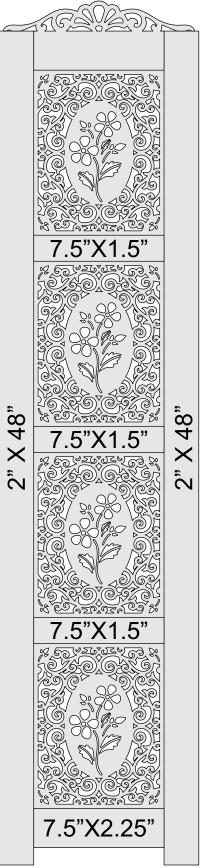


Use a table saw to cut groves for the panels to fit in the rails. The grooves need to be 1/4" deep and as wide as the wood you use for the panels.



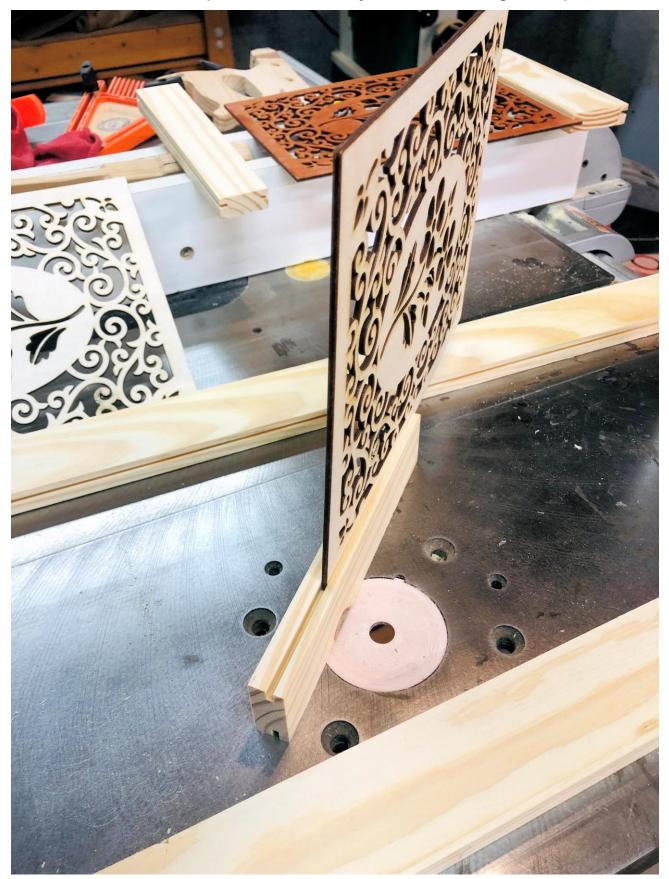

Tesr fit the panels before you start the glue up.

Glue and clamp.

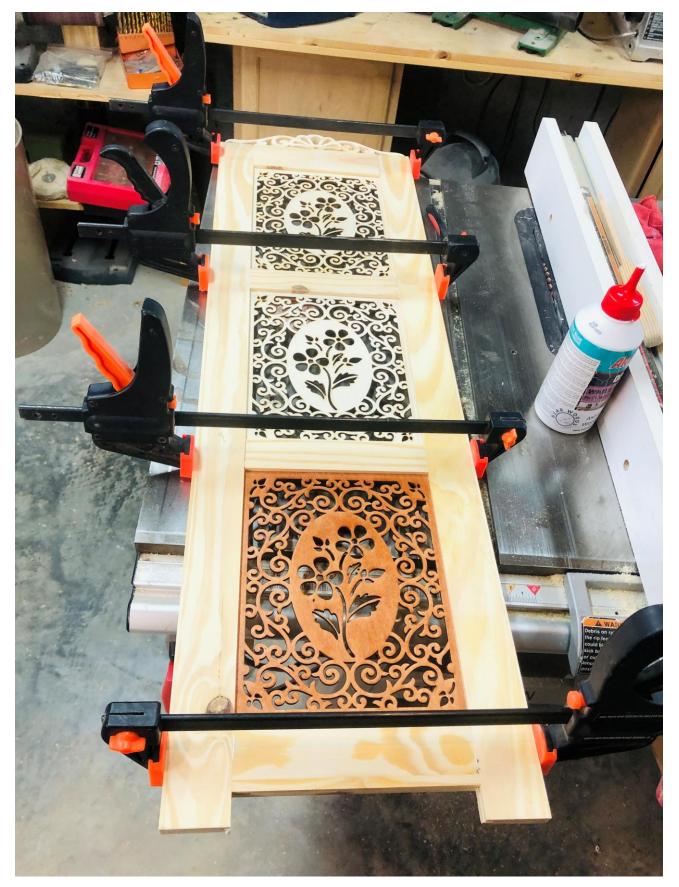



Cut nine for a three panel and add panels for large screens.

