SCROLLSAWW

Digital Patterns Designed by Steve Good







Hundreds of free Patterns Stencil Printer Jigsaw Puzzle Templates DVD's Key Chain Pattern Printer Video Tutorials Reviews Community Forum and more.

Click to Donate.



Scan to Donate





Note to commercial print employees: I give my permission to print as many of this pattern book as your customer requires.



You may use this pattern to make as many of the project as you like. You are free to use any technique including mass production to build the project. The pattern may be copied and given to others provided the entire book is kept intact. You may not sell the pattern or include it in another commercial package of any type.


Steve Good retains the right to the pattern. If you have any questions about the use of this pattern please contact me at steve@stevedgood.com

When printing this pattern it is important to print it full size. When you bring up the print dialog box look in the "Page Sizing & Handling" section. Make sure the "Actual Size" is selected before you hit print.

You also only need to print the page/s you need. After the print dialog opens look for the "Pages to Print" section. You can print the current page or a range of pages. This will help save ink by not printing the title/instruction pages.

Printing Instructions



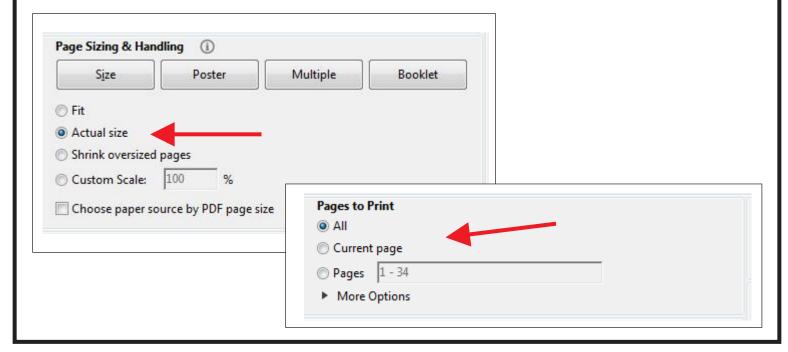

Large Potpourri Box






1/8" Thick





If you struggle cutting the design top from 1/8" thick wood, it should still look okay if you use 1/4" thick wood.

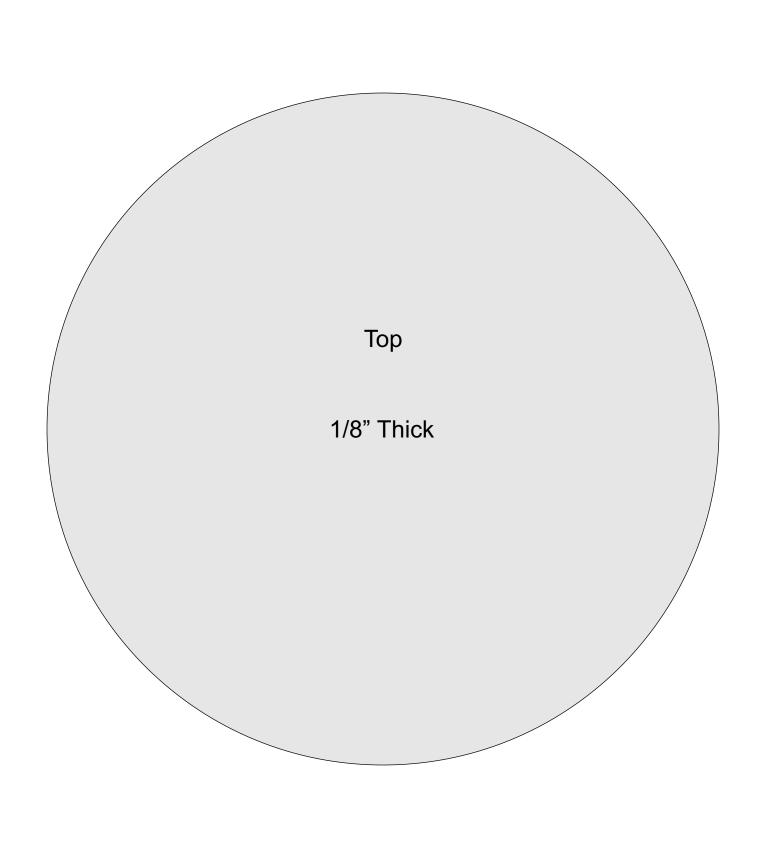


Top Keeper Glues under the top to keep the lid in place.

1/4" Thick

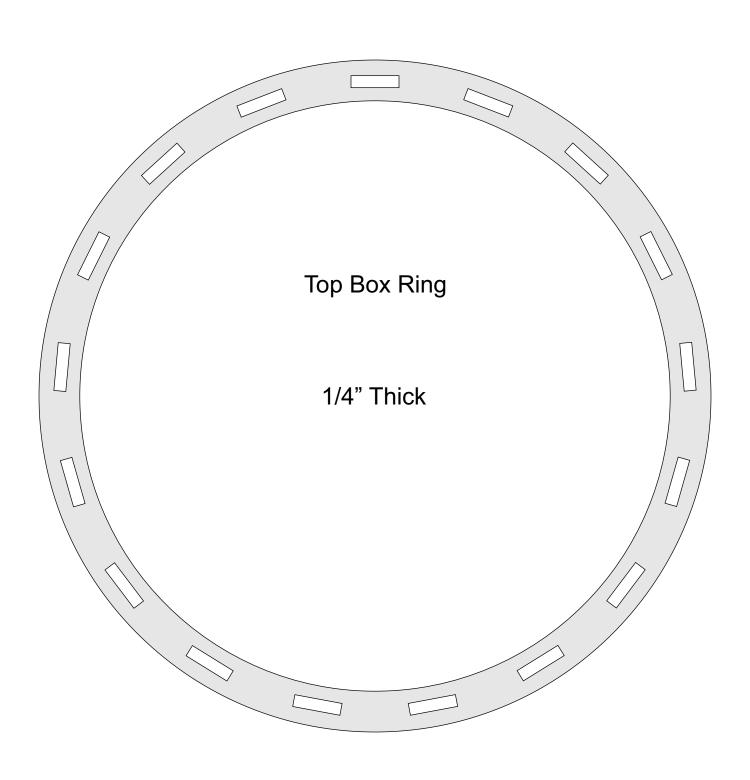


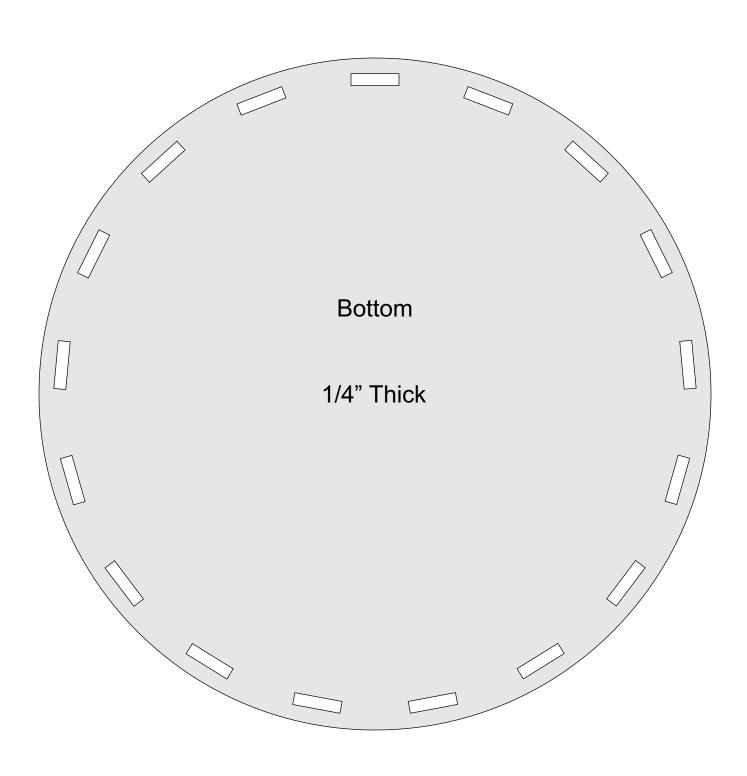

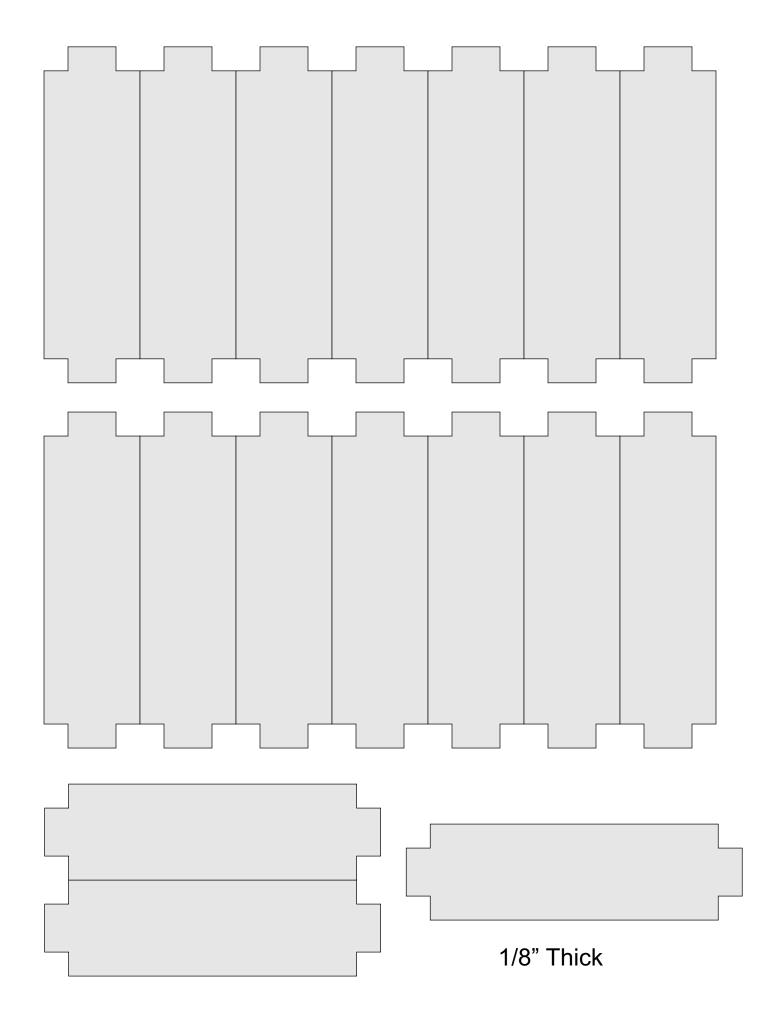

If you wish to use the box to hold something other than potpourri then you can use these slats that are wider. They will reduce the gaps to a small gap.

1/8" Thick

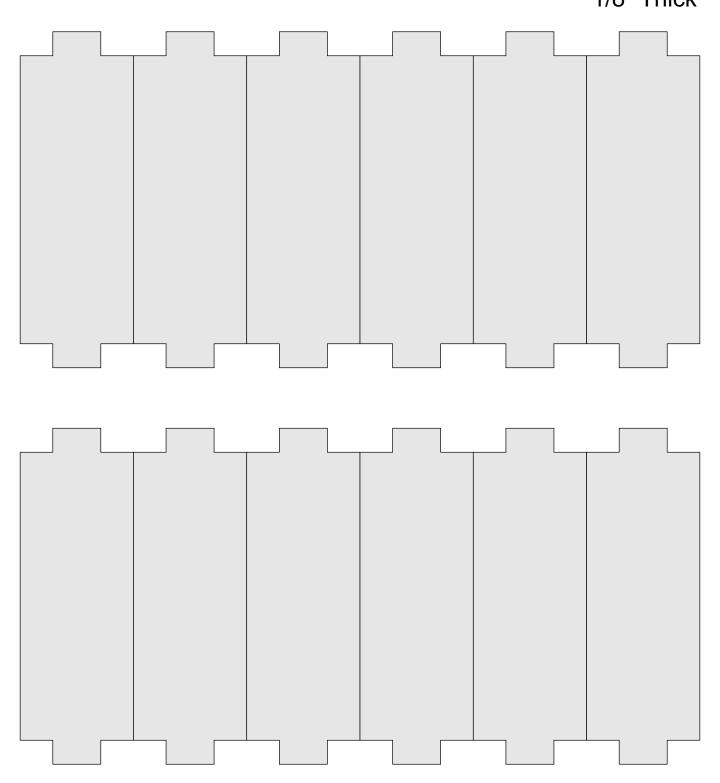

The rest of the large slats are on the next page.

1/8" Thick

