

SCROLLSAW WORKSHOP

WWW.SCROLLSAWWORKSHOP.BLOGSPOT.COM



Digital Patterns

Designed by Steve Good



Hundreds of free Patterns
Stencil Printer
Jigsaw Puzzle Templates
DVD's
Key Chain Pattern Printer
Video Tutorials
Reviews
Community Forum and more.

Click to Donate.



Scan to Donate



Note to commercial print employees: I give my permission to print as many of this pattern book as your customer requires.

steve@stevedgood.com

Copyright Steve Good 2020



General Pattern Information

You may use this pattern to make as many of the project as you like. You are free to use any technique including mass production to build the project. The pattern may be copied and given to others provided the entire book is kept intact. You may not sell the pattern or include it in another commercial package of any type.

Steve Good retains the right to the pattern. If you have any questions about the use of this pattern please contact me at steve@stevedgood.com

When printing this pattern it is important to print it full size. When you bring up the print dialog box look in the “Page Sizing & Handling” section. Make sure the “Actual Size” is selected before you hit print.

You also only need to print the page/s you need. After the print dialog opens look for the “Pages to Print” section. You can print the current page or a range of pages. This will help save ink by not printing the title/instruction pages.

Printing Instructions




Christmas Card Jigsaw Puzzle 4" X 6"



You will need three 4" X 6" X 1/8" Baltic birch plywood.
Blue painters tape.
Spray adhesive.
The card photo printed on high quality photo paper.
The puzzle pattern.



Spray the back of the Christmas card photo.
Also spray the 4" X 6" X 1/8" BB ply for a permanent bond.

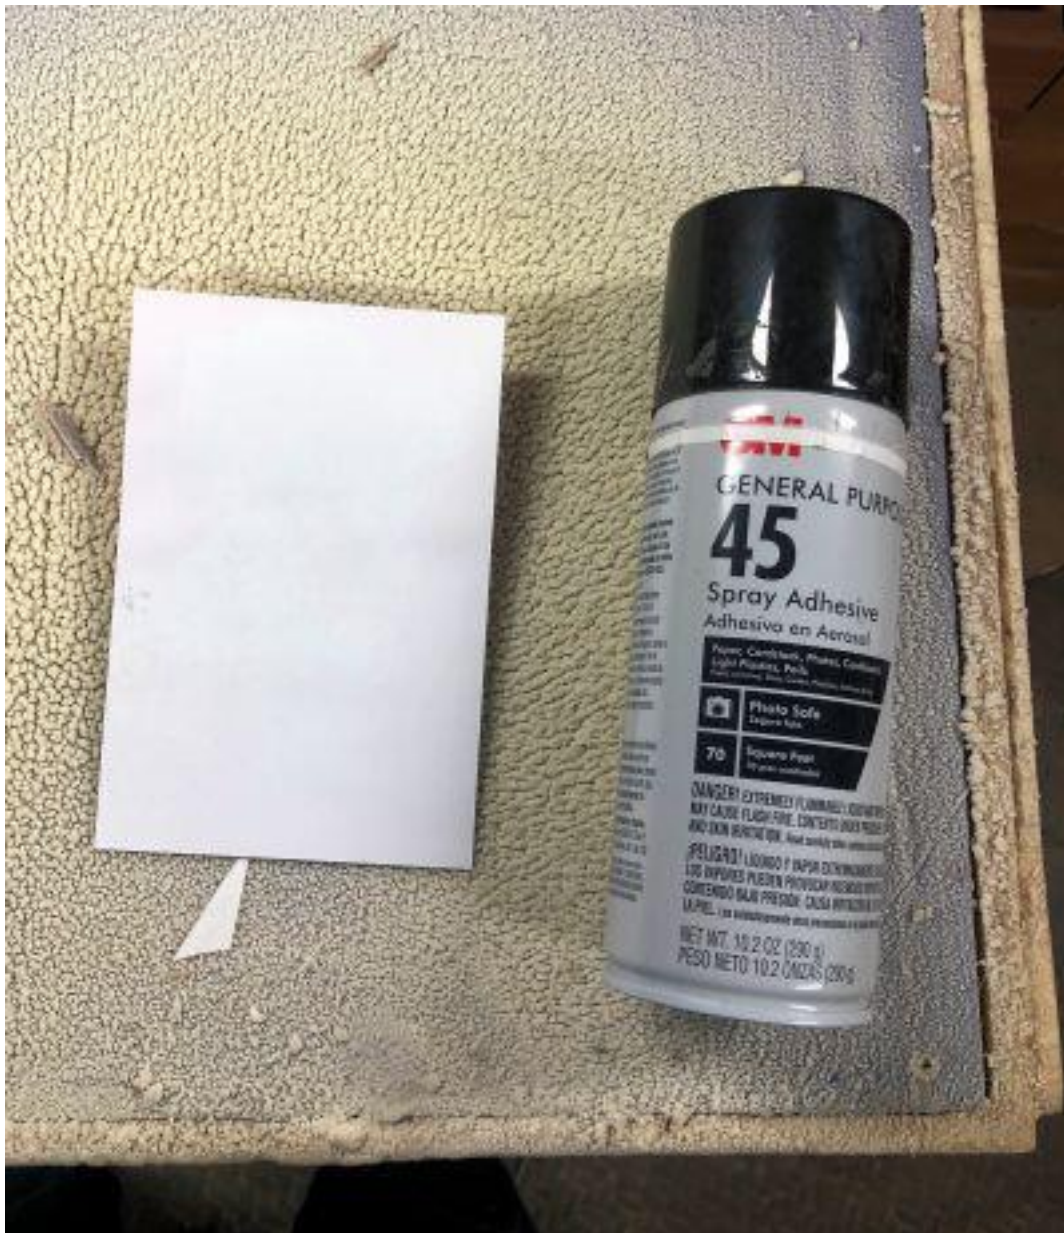

Apply the photo to the BB ply.


It is best to sign the card before you assemble
the sandwich and cut the puzzle



We will make a three layer sandwich of the three boards with the photo board in the middle.



Wrap the sandwiched boards in blue painters tape.

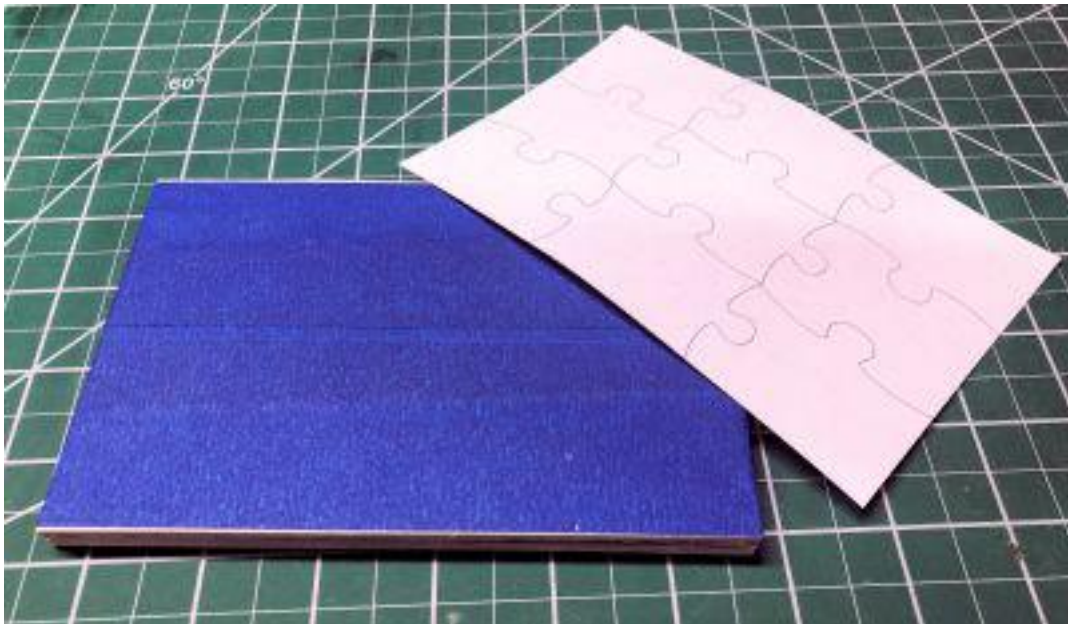


Use spray adhesive to attache the jigsaw template
to the top of the stack.



Use a very small blade so the puzzle pieces fit together snugly. I used a #2/0.



Cut the template one piece at a time.
Remove the center puzzle piece.

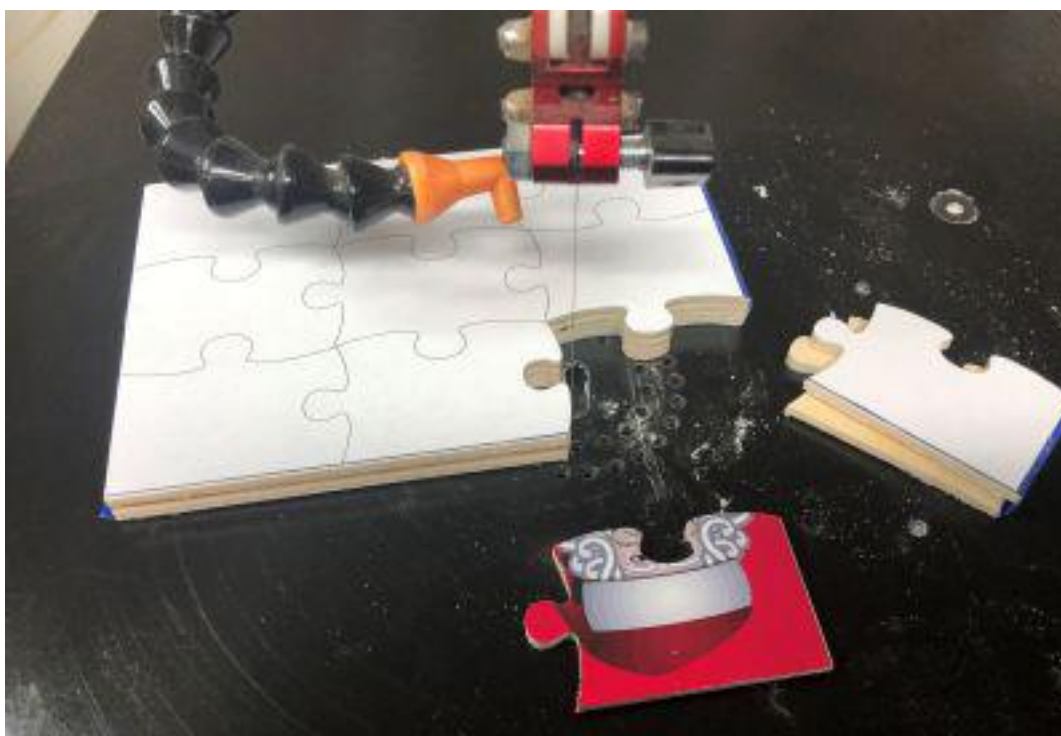

Print on High-Quality Photo Paper



