SCROLLSAW WORKSH

Digital Patterns Designed by Steve Good







Hundreds of free Patterns Stencil Printer Jigsaw Puzzle Templates DVD's Key Chain Pattern Printer Video Tutorials Reviews Community Forum and more.





Scan to Donate







You may use this pattern to make as many of the project as you like. You are free to use any technique including mass production to build the project. The pattern may be copied and given to others provided the entire book is kept intact. You may not sell the pattern or include it in another commercial package of any type.


Steve Good retains the right to the pattern. If you have any questions about the use of this pattern please contact me at steve@stevedgood.com

When printing this pattern it is important to print it full size. When you bring up the print dialog box look in the "Page Sizing & Handling" section. Make sure the "Actual Size" is selected before you hit print.

You also only need to print the page/s you need. After the print dialog opens look for the "Pages to Print" section. You can print the current page or a range of pages. This will help save ink by not printing the title/instruction pages.

Printing Instructions




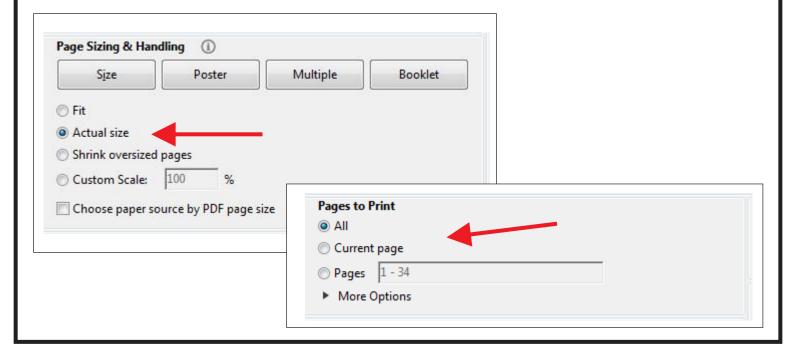

Adjustable Flashlight Stand



3" Bolt and wingnut Tighten until the yoke is tight.

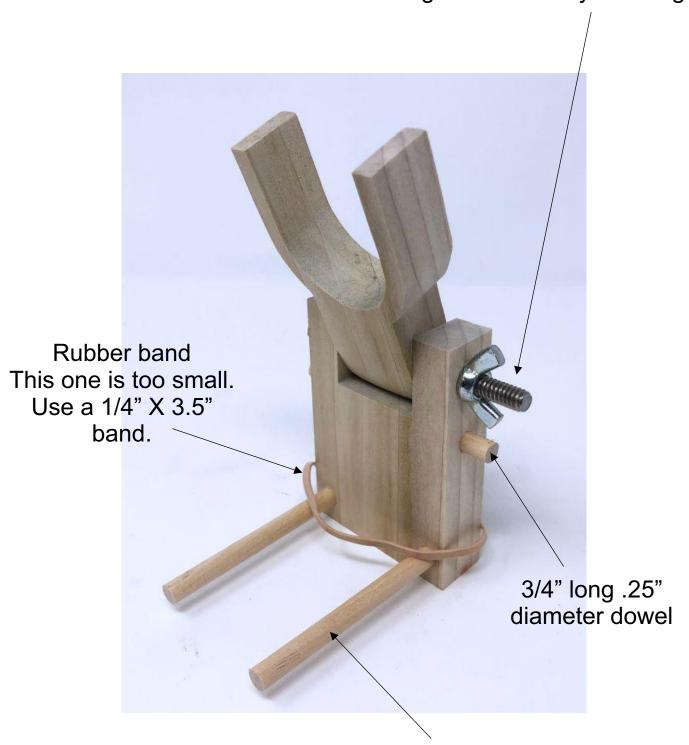


3" long X .25" diameter wooden dowels. Do not glue in place.





The pattern has different size yokes for different size flashlights up to 1.5" diameter. This is not for large flashlights.




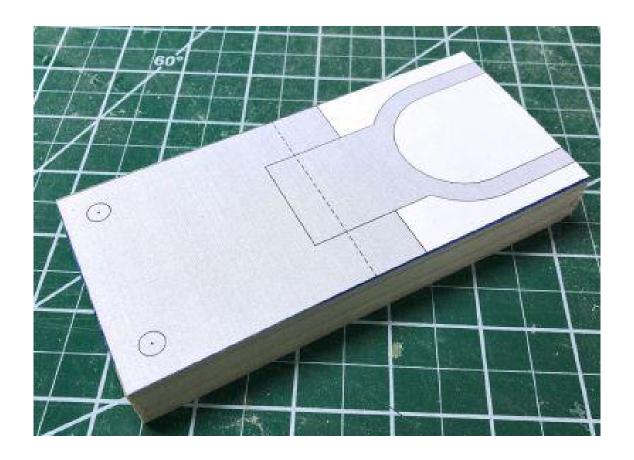


Drill a 1/4" hole at the way through the board. Do this before you cut at the scroll saw. A drill press works best.

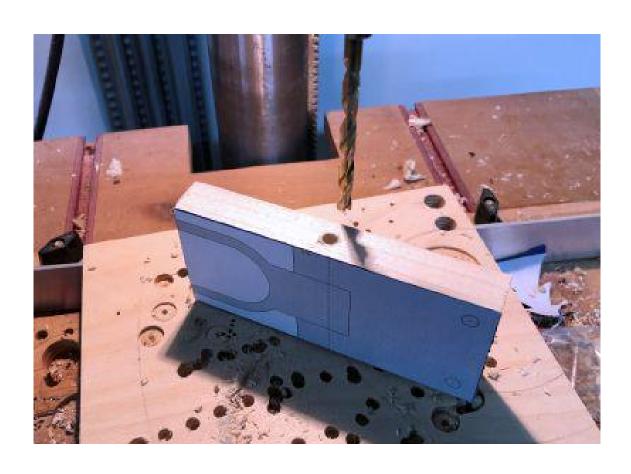

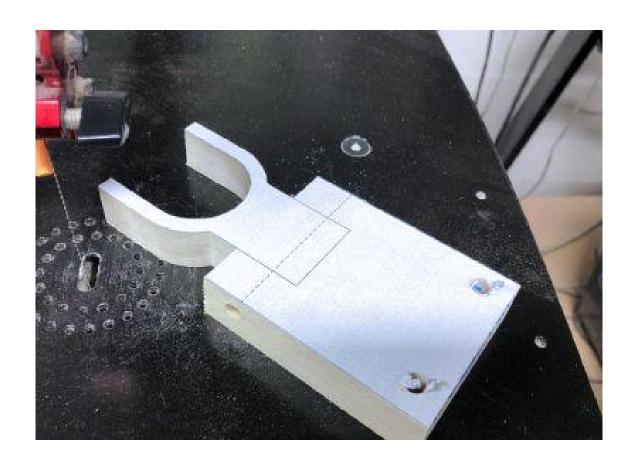


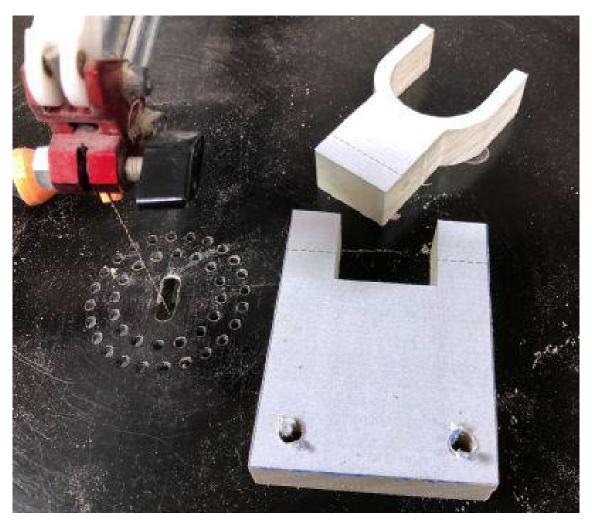

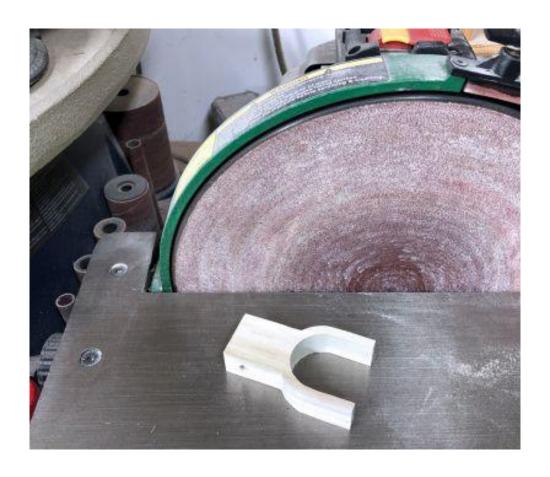

Round over the bottom of the yoke.



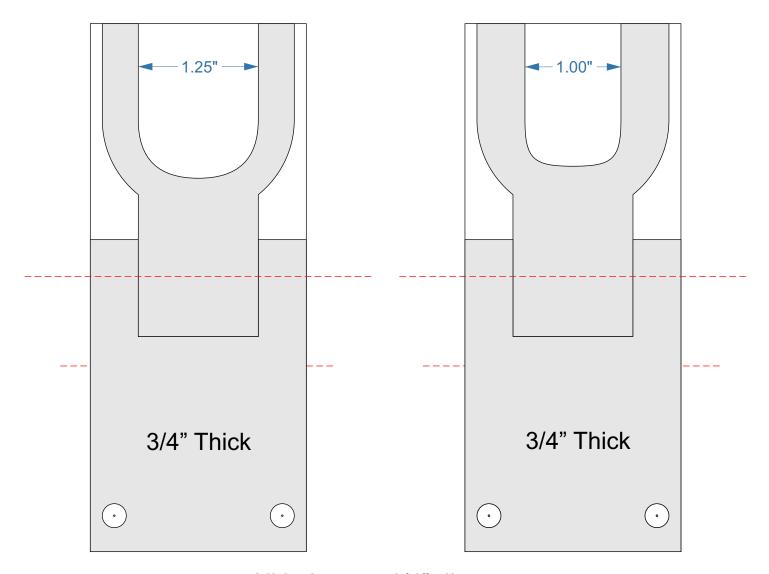

All holes are 1/4" diameter.

