SCROLLSAW WORKSHOP

WWW.SCROLLSAWWORKSHOP.BLOGSPOT.COM
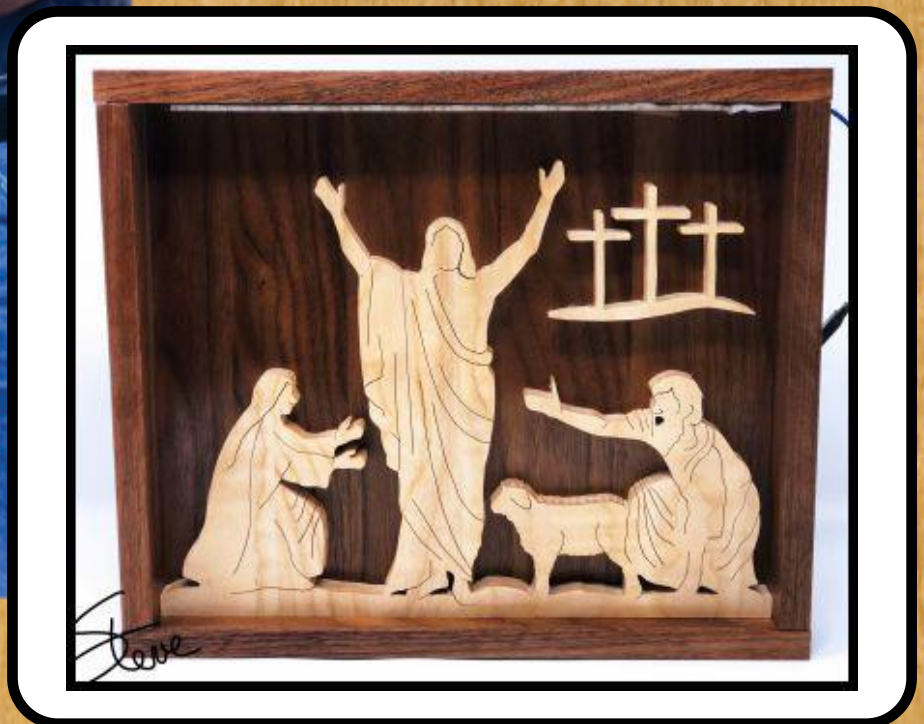
Digital Patterns
Designed by Steve Good

Hundreds of free Patterns
Stencil Printer
Jigsaw Puzzle Templates
DVD's
Key Chain Pattern Printer
Video Tutorials
Reviews
Community Forum and more.

If you would like to donate click here. No Paypal account needed.

PayPal™ Donate Now

VISA | MasterCard | DISCOVER NETWORK | AMERICAN EXPRESS

steve@stevedgood.com

General Pattern Information

Printing Instructions

When printing this pattern it is important to print it full size. When you bring up the print dialog box look in the "Page Sizing & Handling" section. Make sure the "Actual Size" is selected before you hit print.
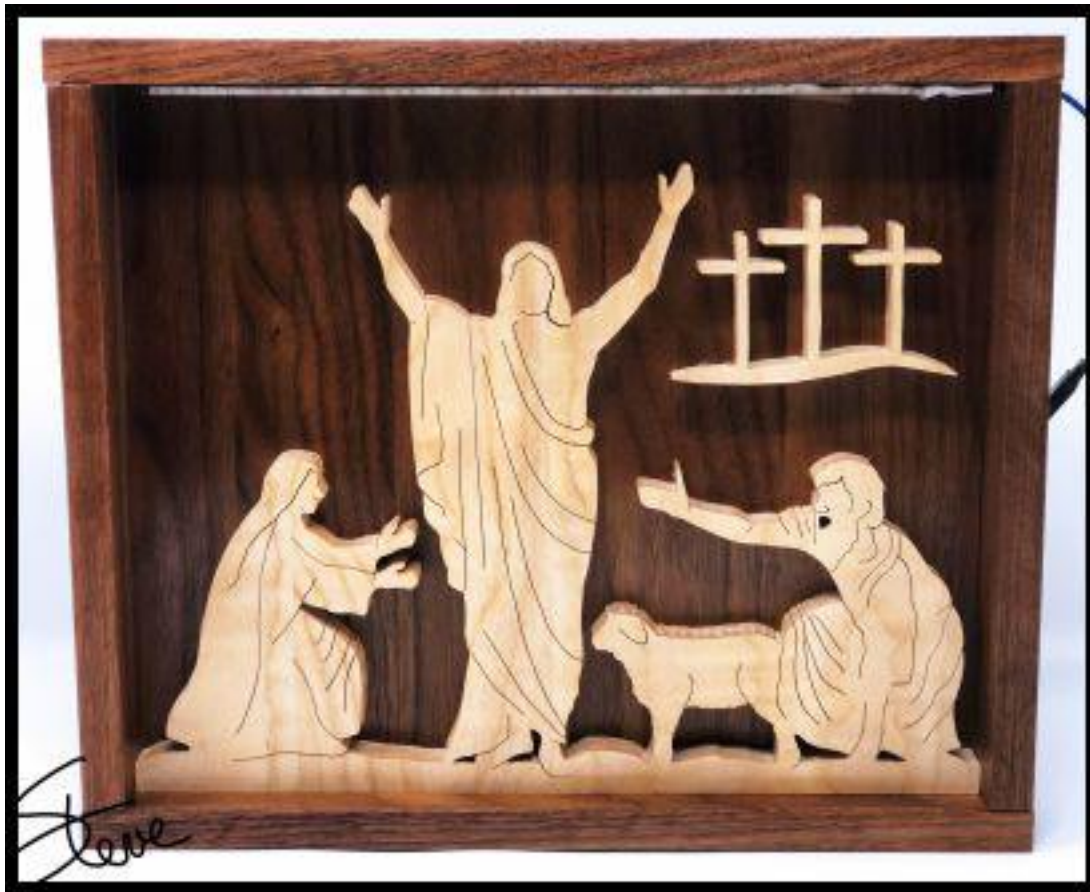
You also only need to print the page/s you need. After the print dialog opens look for the "Pages to Print" section. You can print the current page or a range of pages. This will help save ink by not printing the title/instruction pages.

Page Sizing & Handling ⓘ

Size	Poster	Multiple	Booklet

○ Fit
◉ Actual size
○ Shrink oversized pages
○ Custom Scale: 100 %
☐ Choose paper source by PDF page size

Pages to Print
◉ All
○ Current page
○ Pages 1 - 34
▶ More Options

Lighted Easter Scene

There are many LED light strips sold on Amazon. The one on the left is a battery operated version. If you want to plug it in then search for a light strip that uses a wall wart.
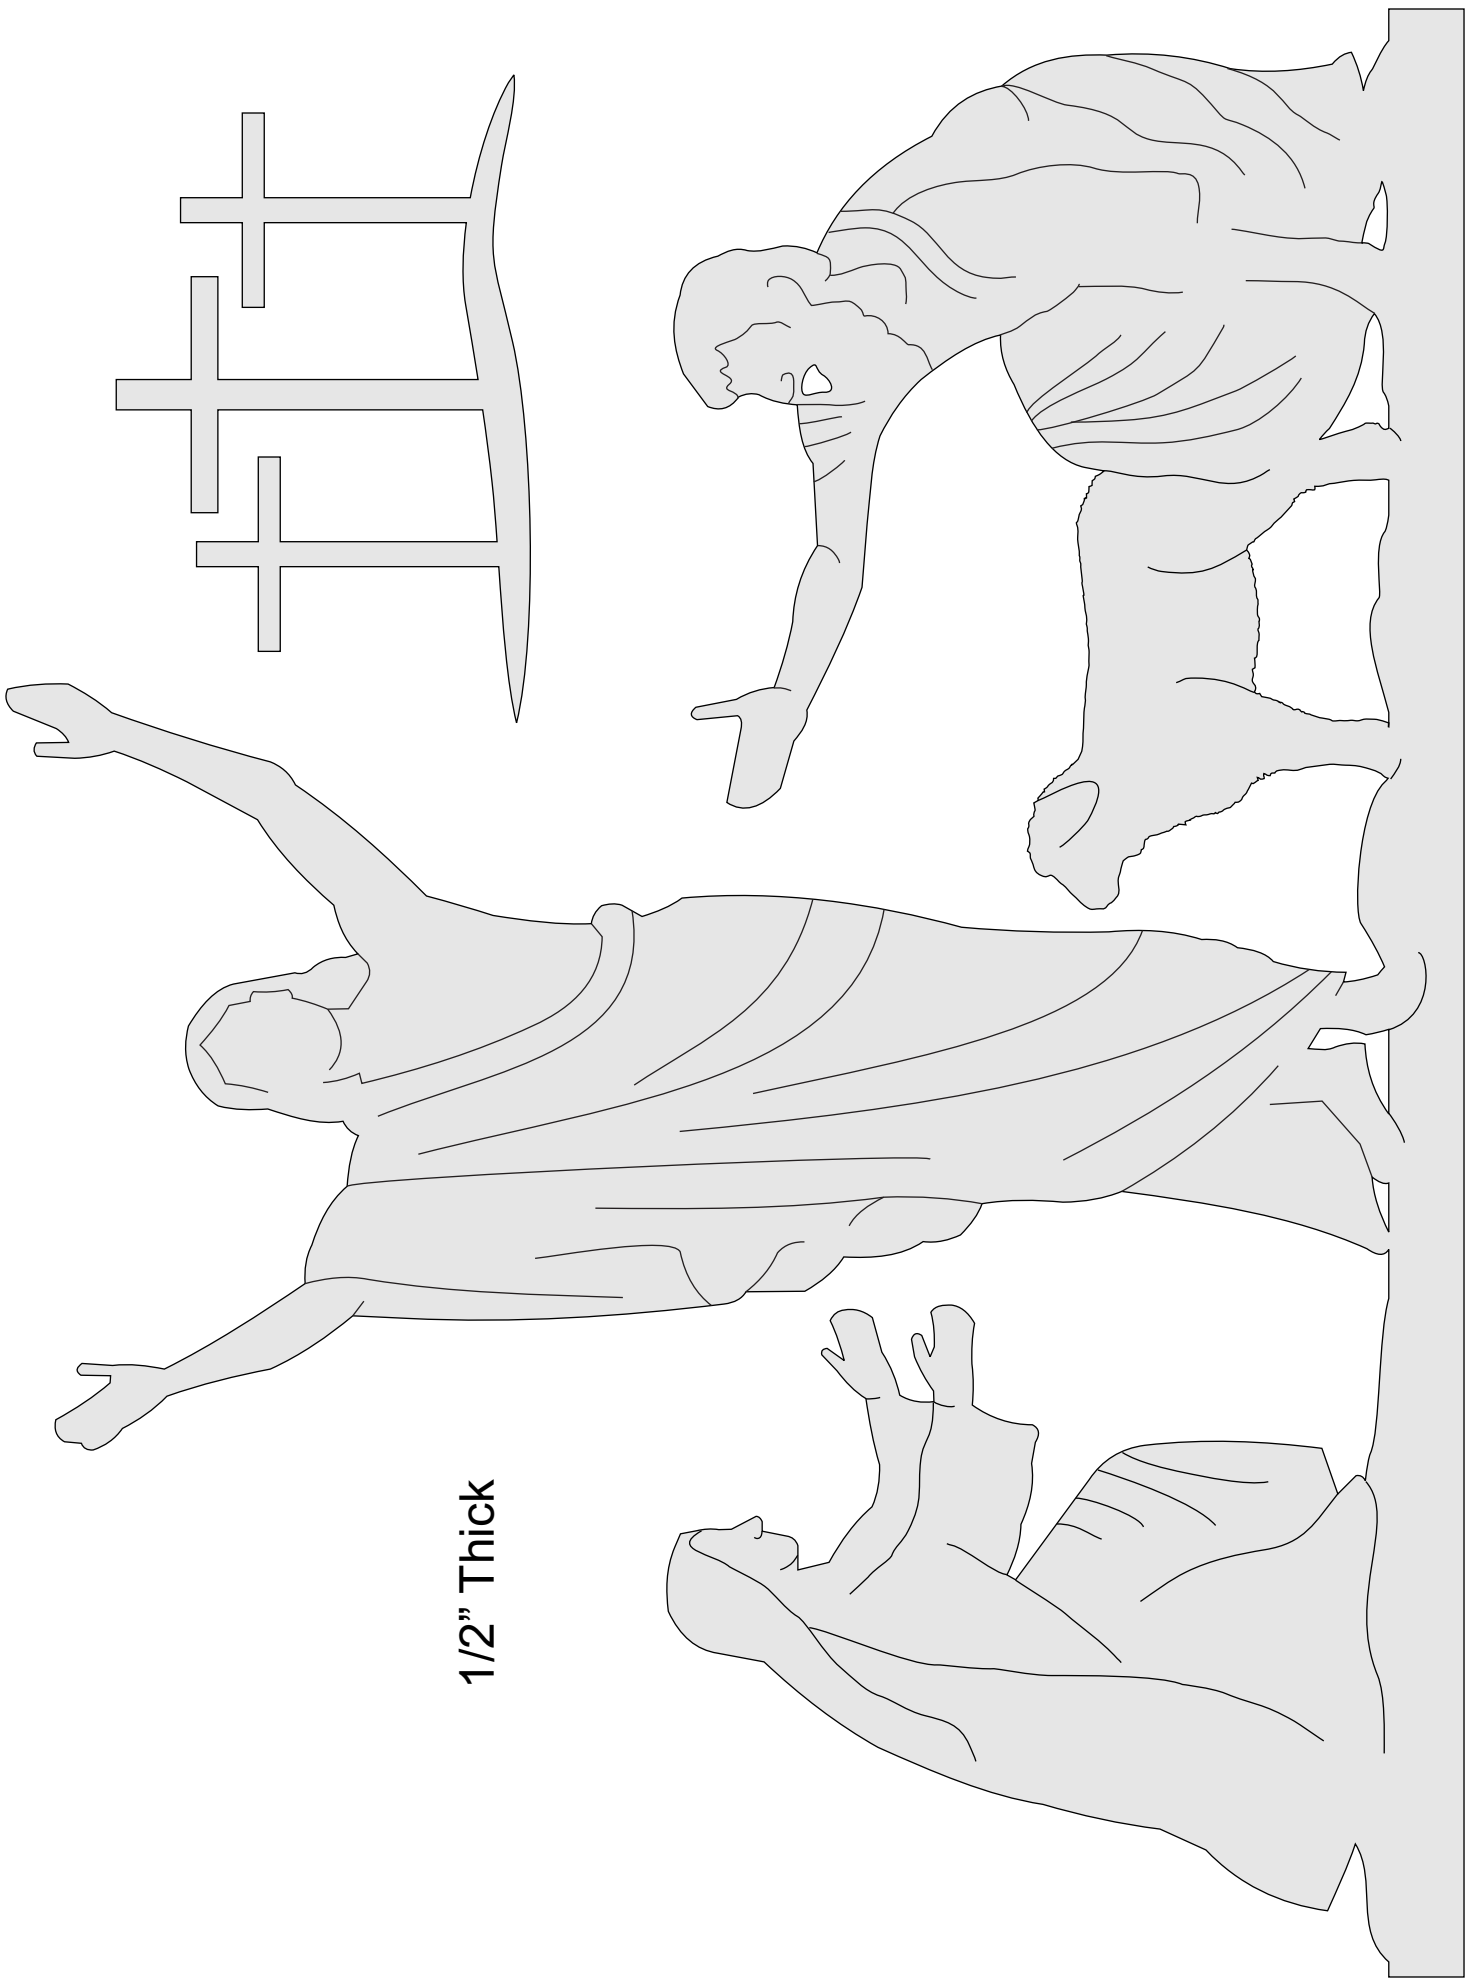
[Buy on Amazon](#)

I only lit the scene from the top. If I were to remake the project I would try to start the LED strip at the bottom/right and wrap it all the way to the bottom/left. That would light scene from the sides also.

I used an LED strip to light the scene. I used a battery power supply but you can also get a wall wart to power the LED strip.

1/2" Thick

NOT FULL SIZE

Frame Box

Sides   8.5" X 1.5" X .5"

Top/Bottom   11.25" X 1.5" X .5"

8.5" X 10.25 X .5"
Back