

SCROLLSAW WORKSHOP


WWW.SCROLLSAWWORKSHOP.BLOGSPOT.COM

Digital Patterns

Designed by Steve Good



Hundreds of free Patterns
Stencil Printer
Jigsaw Puzzle Templates
DVD's
Key Chain Pattern Printer
Video Tutorials
Reviews
Community Forum and more.

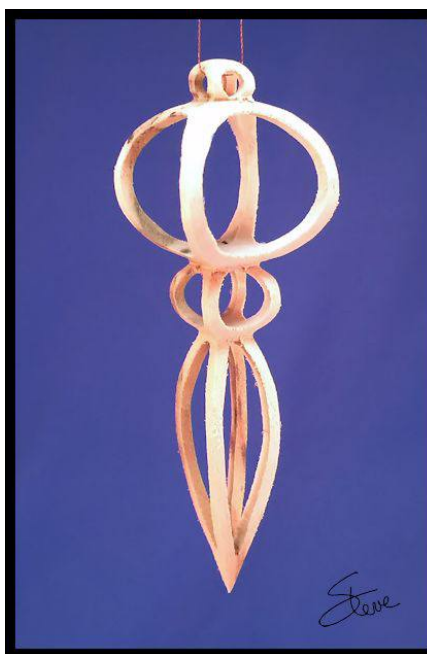



Note to commercial print employees: I give my permission to print as many of this pattern book as your customer requires.

steve@stevedgood.com

Copyright Steve Good 2015


3D Ornament

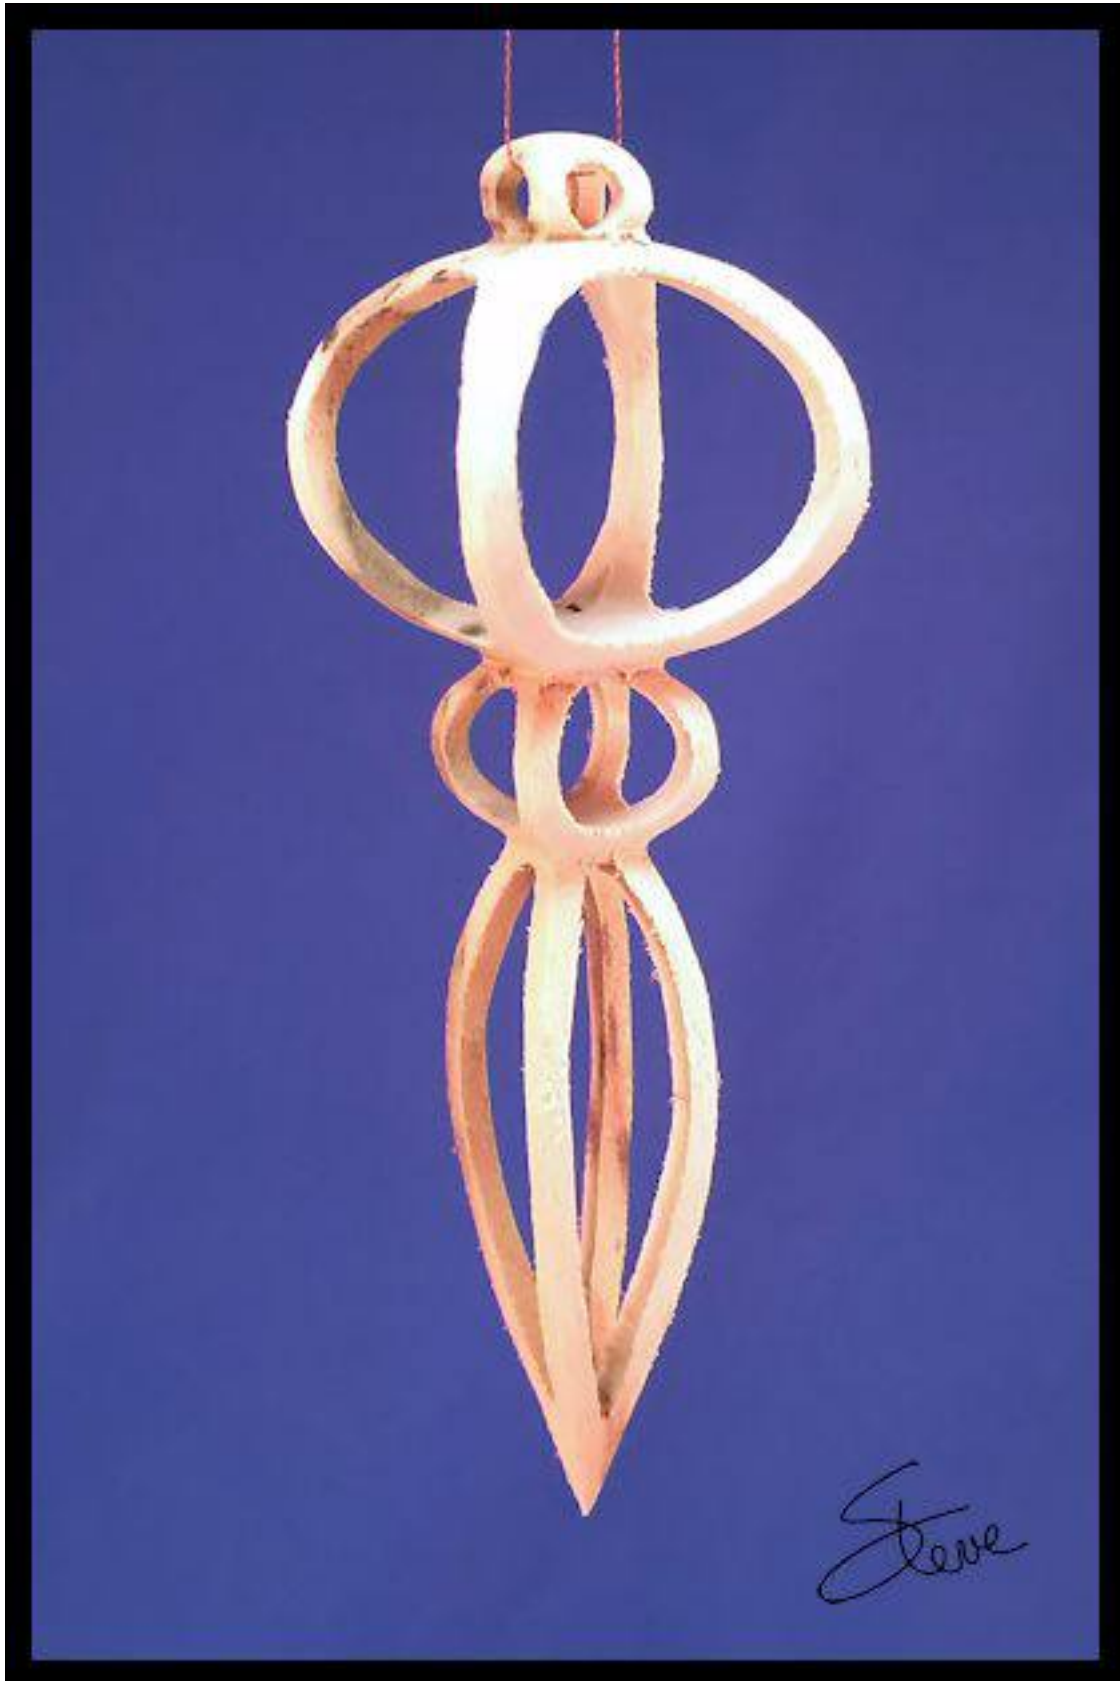

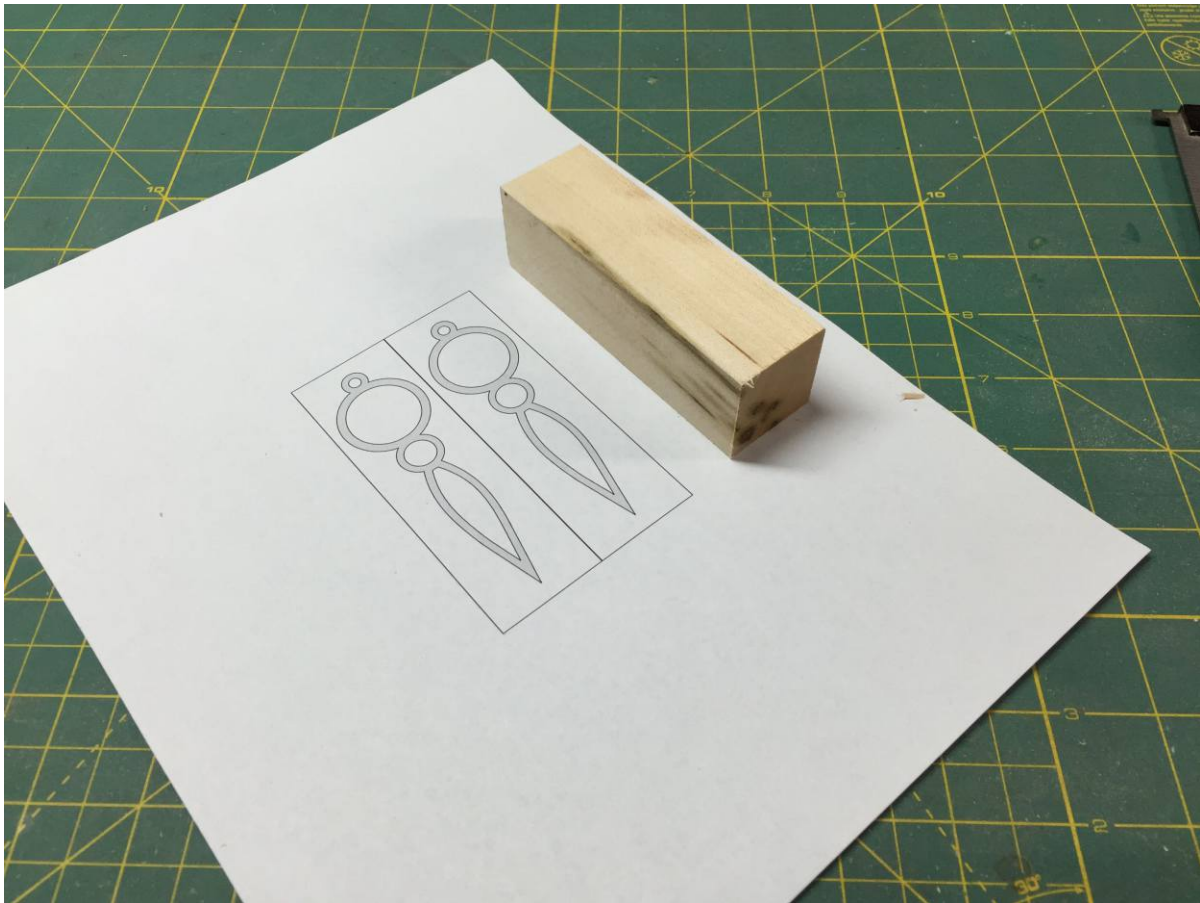

Make a 1.25 X 1.25 X 4 inch blank.
Cut out the pattern and fold on the line.



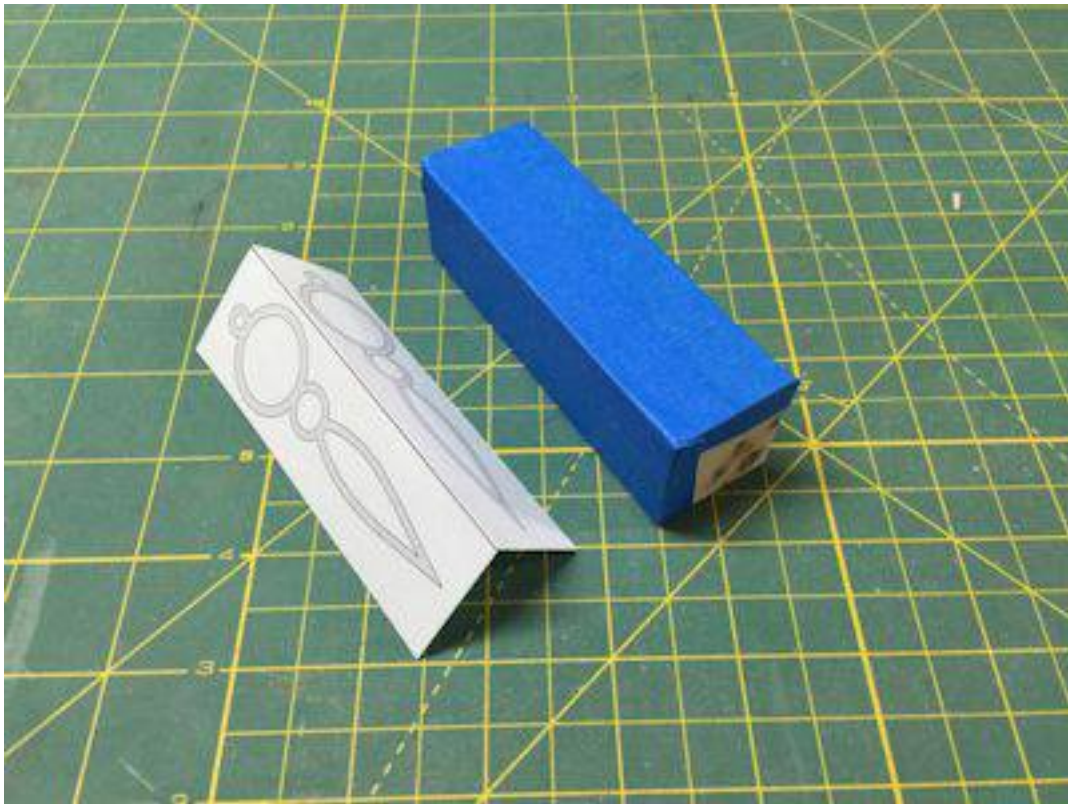


Apply blue painters tape to two sides of the blank.

Apply the pattern with spray adhesive.





I use a jig to hold the blank. You can find the instructions for the clamp in my online catalog in the tools category.

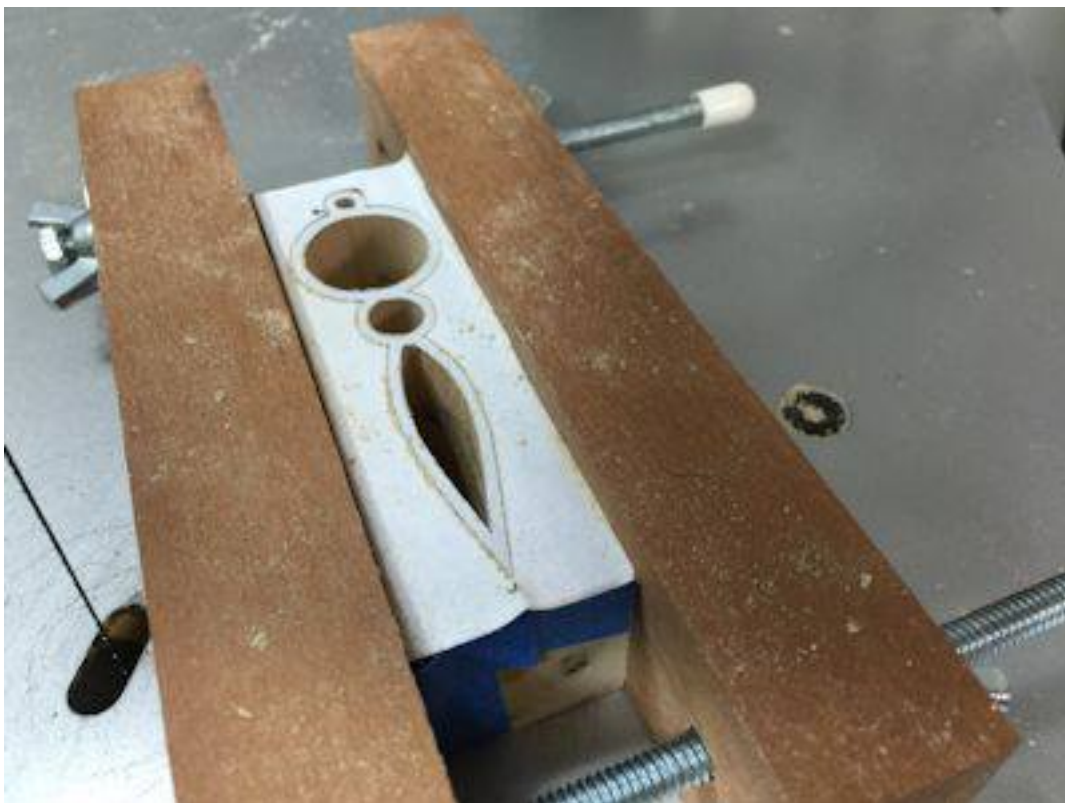


Cut the interior and exterior of side one.



Flip the blank to side two of the pattern. It can help if you keep the waste pieces inside the cuts.



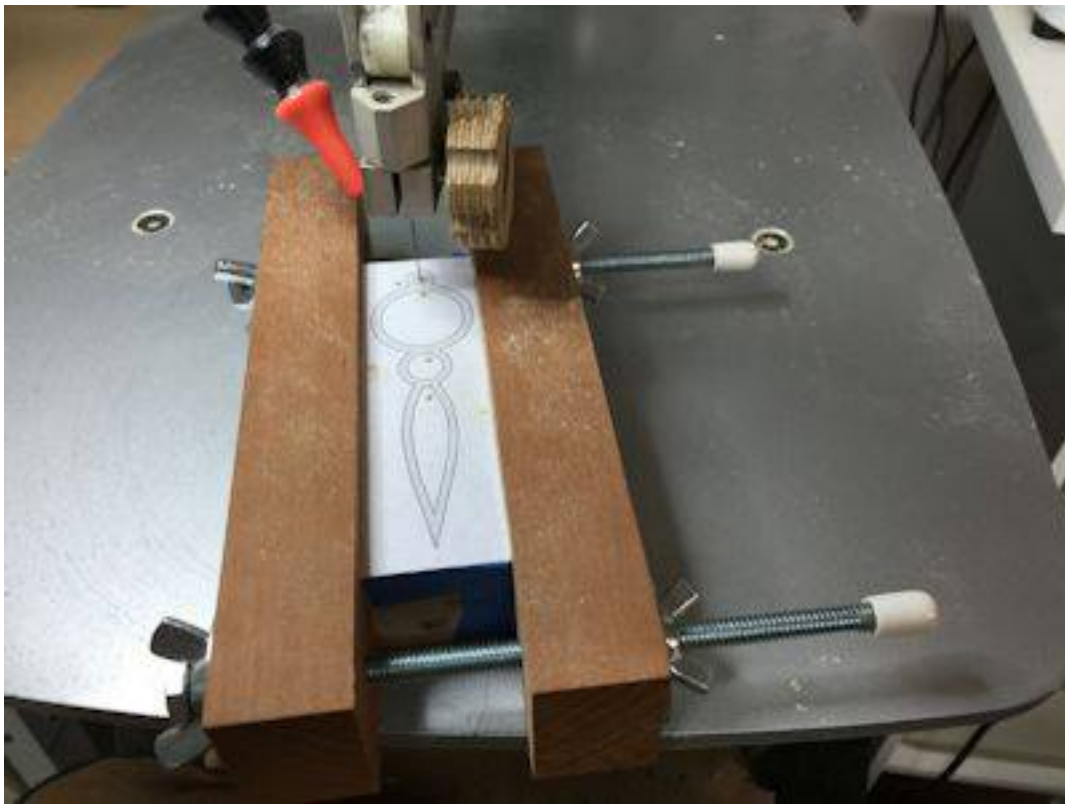

Cut the interior and exterior of side two.



Carefully remove the ornament from the waste. If you have kept the blade straight during the cut the ornament will remove easier.



Tips:

It's best to use a clamp to hold the ornament together while cutting.

Drill larger entry holes to make inserting the blade for side two easier.

Keep the waste inside the ornament after you cut side one. Make sure the blade is tensioned well or it will bend inside the cut and distort the ornament.

Requires a 1.25" X 1.25" X 4" blank.

