



Digital Patterns

Designed by
Steve Good


www.scrollsawworkshop.blogspot.com

Home of Scroll Saw Pattern Printer




Butterfly



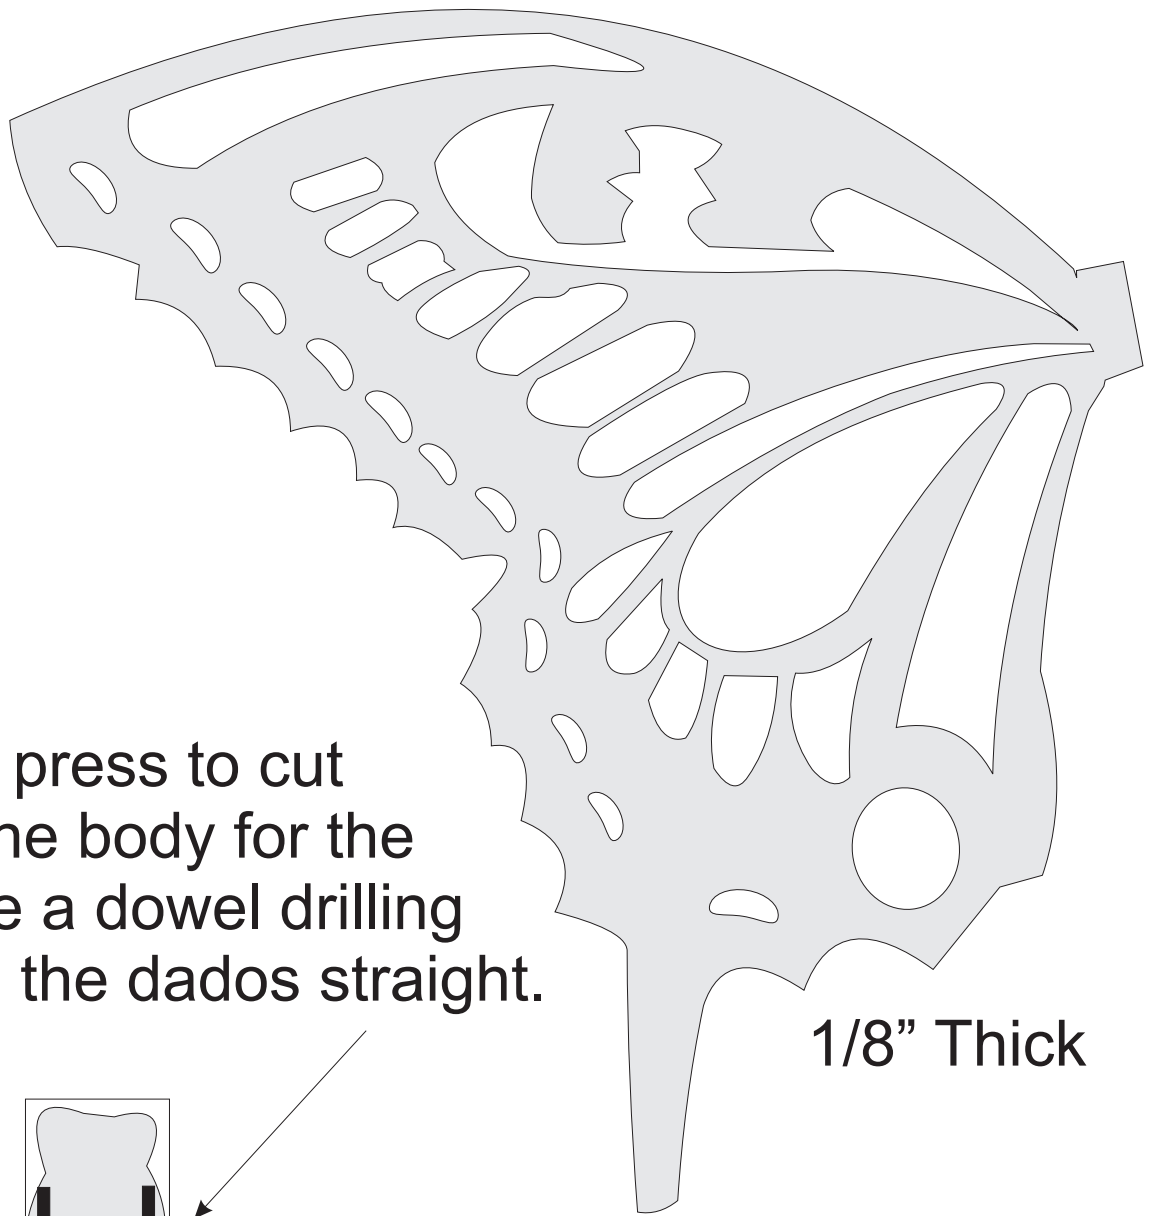

Use a drill press to cut dados in the body for the wings. Use a dowel drilling jig to keep the dados straight.

1/8" Thick

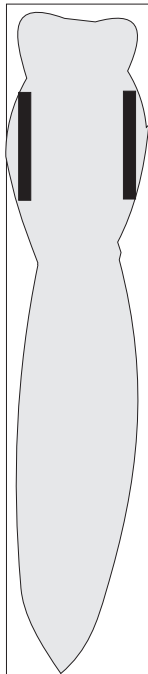

Carve body from 1/2" dowel rod. I actually just sanded the body to the correct profile.



1/8" Thick