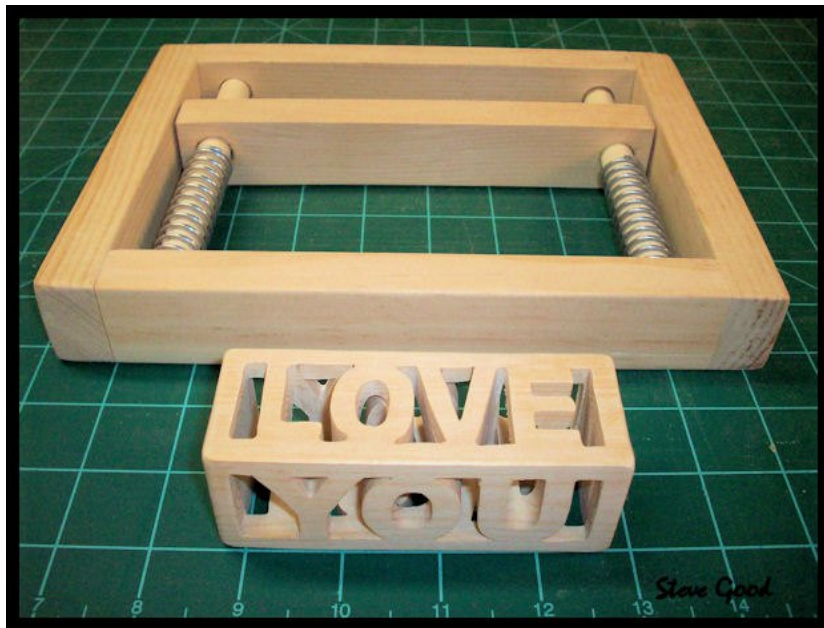# Digital Patterns

Designed by Steve Good
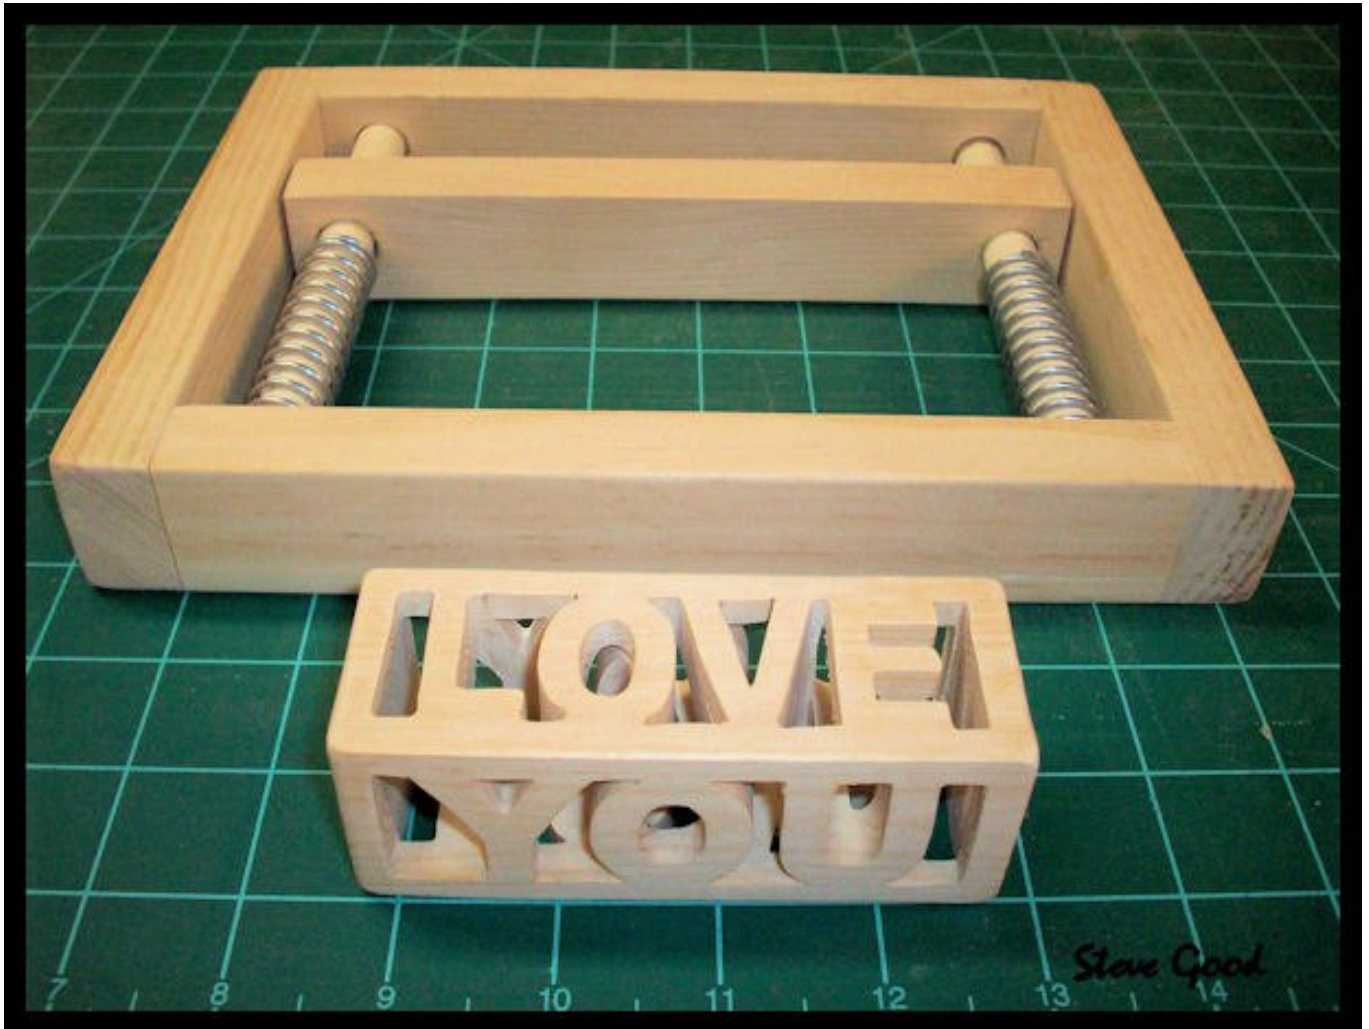
www.scrollsawworkshop.blogspot.com
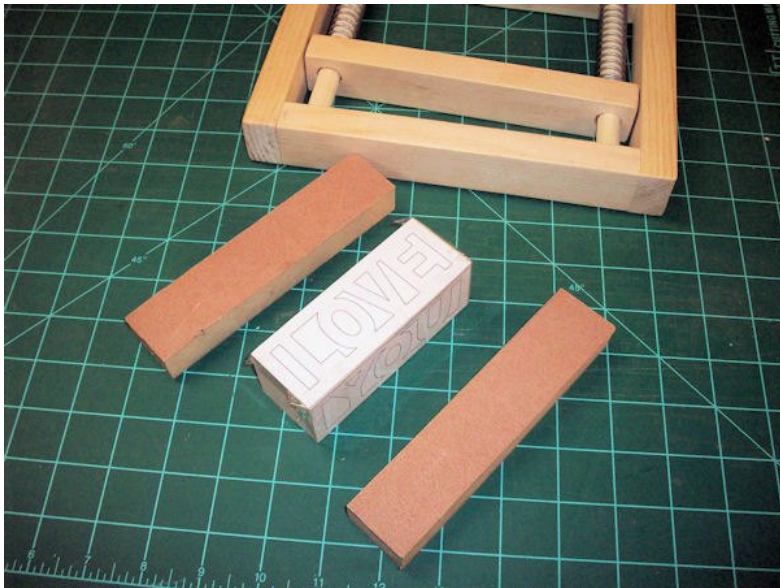
Home of Scroll Saw Pattern Printer
and the Scroll Saw Key Chain Printer

3D Love You

Wrap the pattern around two sides of the blank.

To cut this pattern it's best to have a clamp to hold the blank while you cut. Drill your interior holes. Cut the first side.

Remove the blank and flip it to cut side two.

You need a blank that is 1.5" X 1.5" X 4"