



# Digital Patterns

Designed by  
Steve Good


[www.scrollsawworkshop.blogspot.com](http://www.scrollsawworkshop.blogspot.com)

Home of Scroll Saw Pattern Printer  
and the Scroll Saw Key Chain Printer




The emblem is three layers thick. The back board is dark and just a circle. The middle board has the letters cut out and is medium dark. The rest of the ornamentation is cut from light colored wood and is applied to the middle board.






Back Layer  
Dark Wood  
1/4" Thick




Cutting the letters out of a middle board is easier than cutting all the individual letters and applying them one at a time. That's the reason I did it this way. It's still going to require some fine cutting with a 2/0 blade.

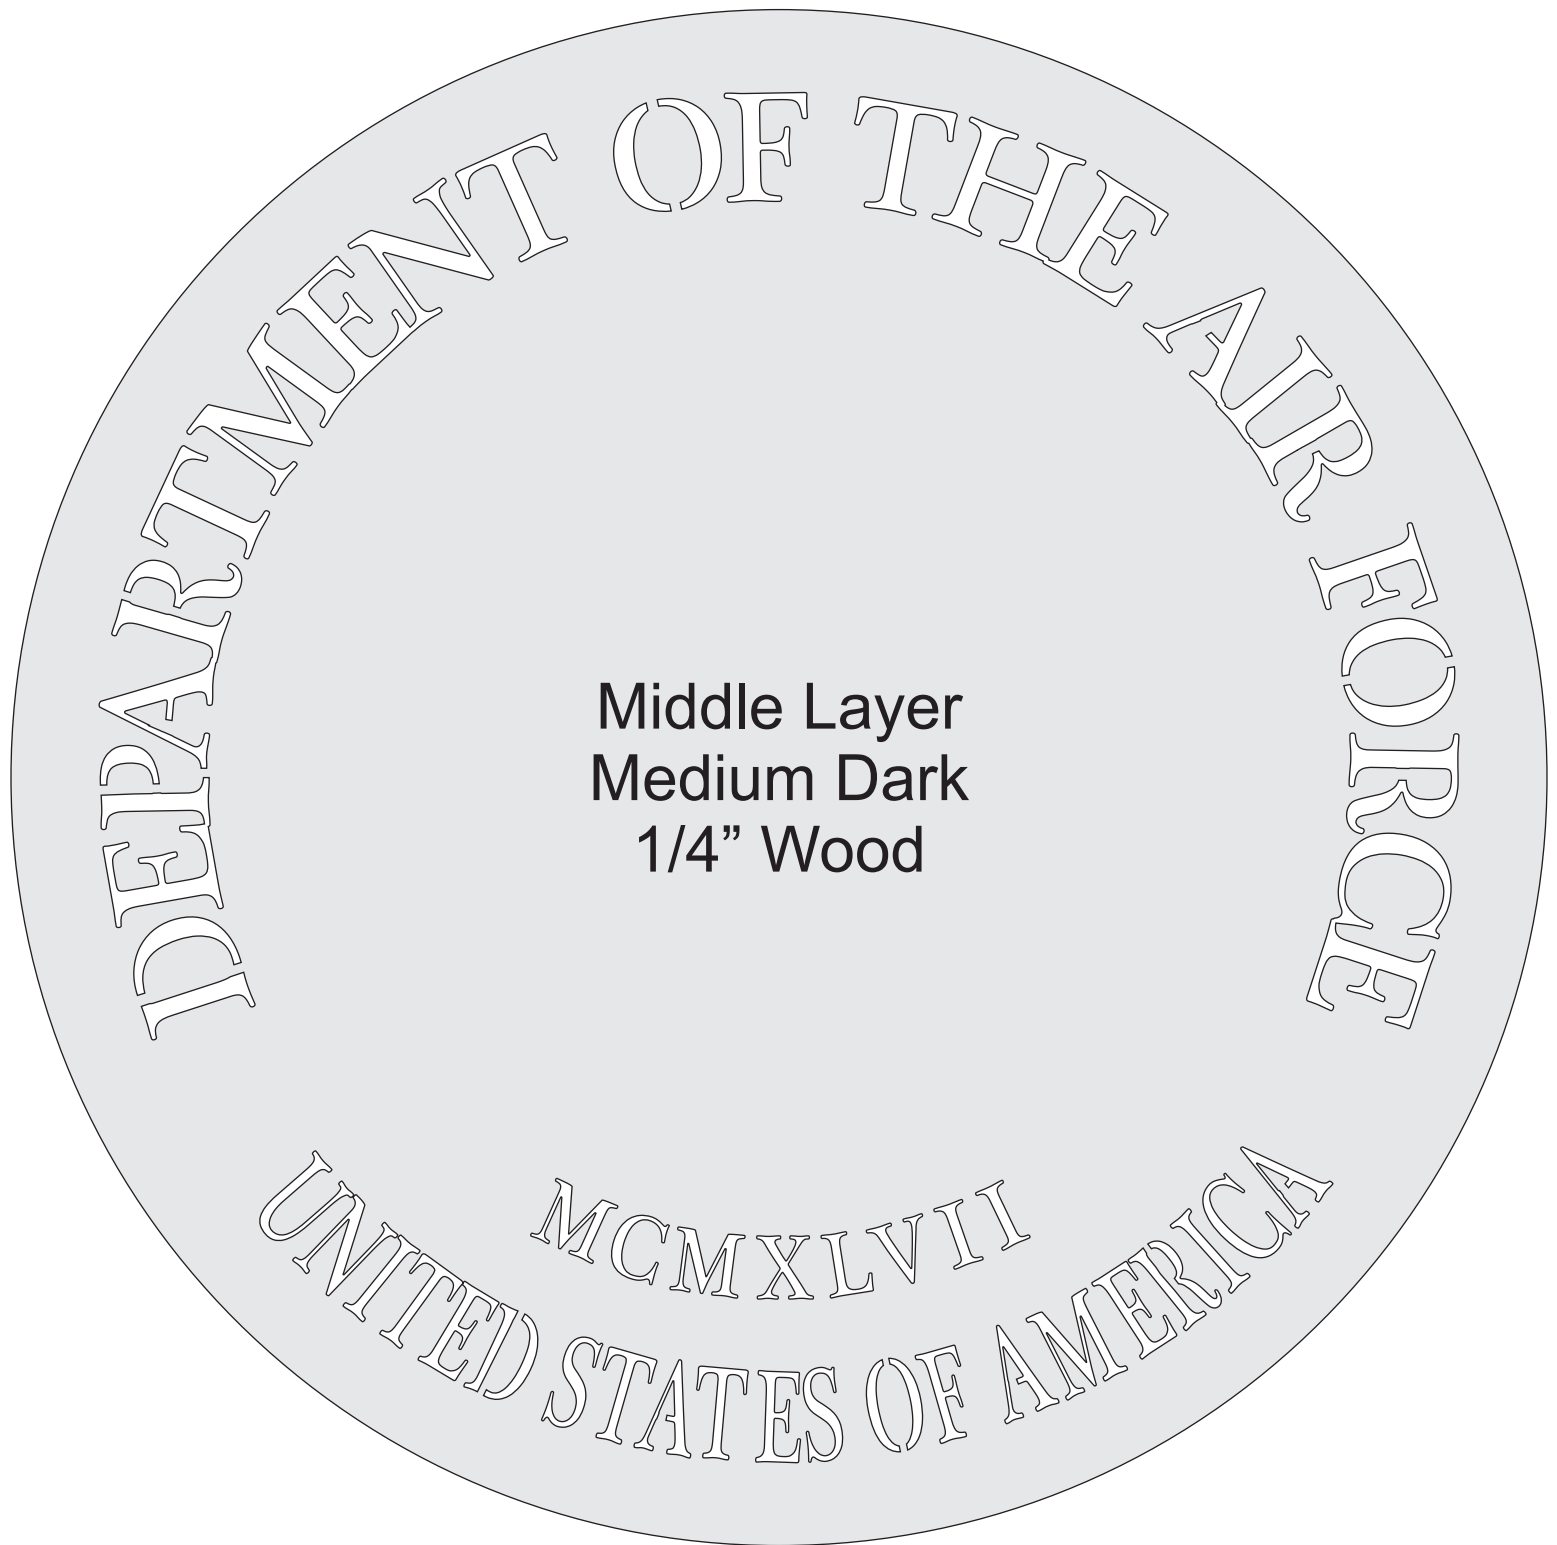




Cut careful. You want the circles to be smooth.

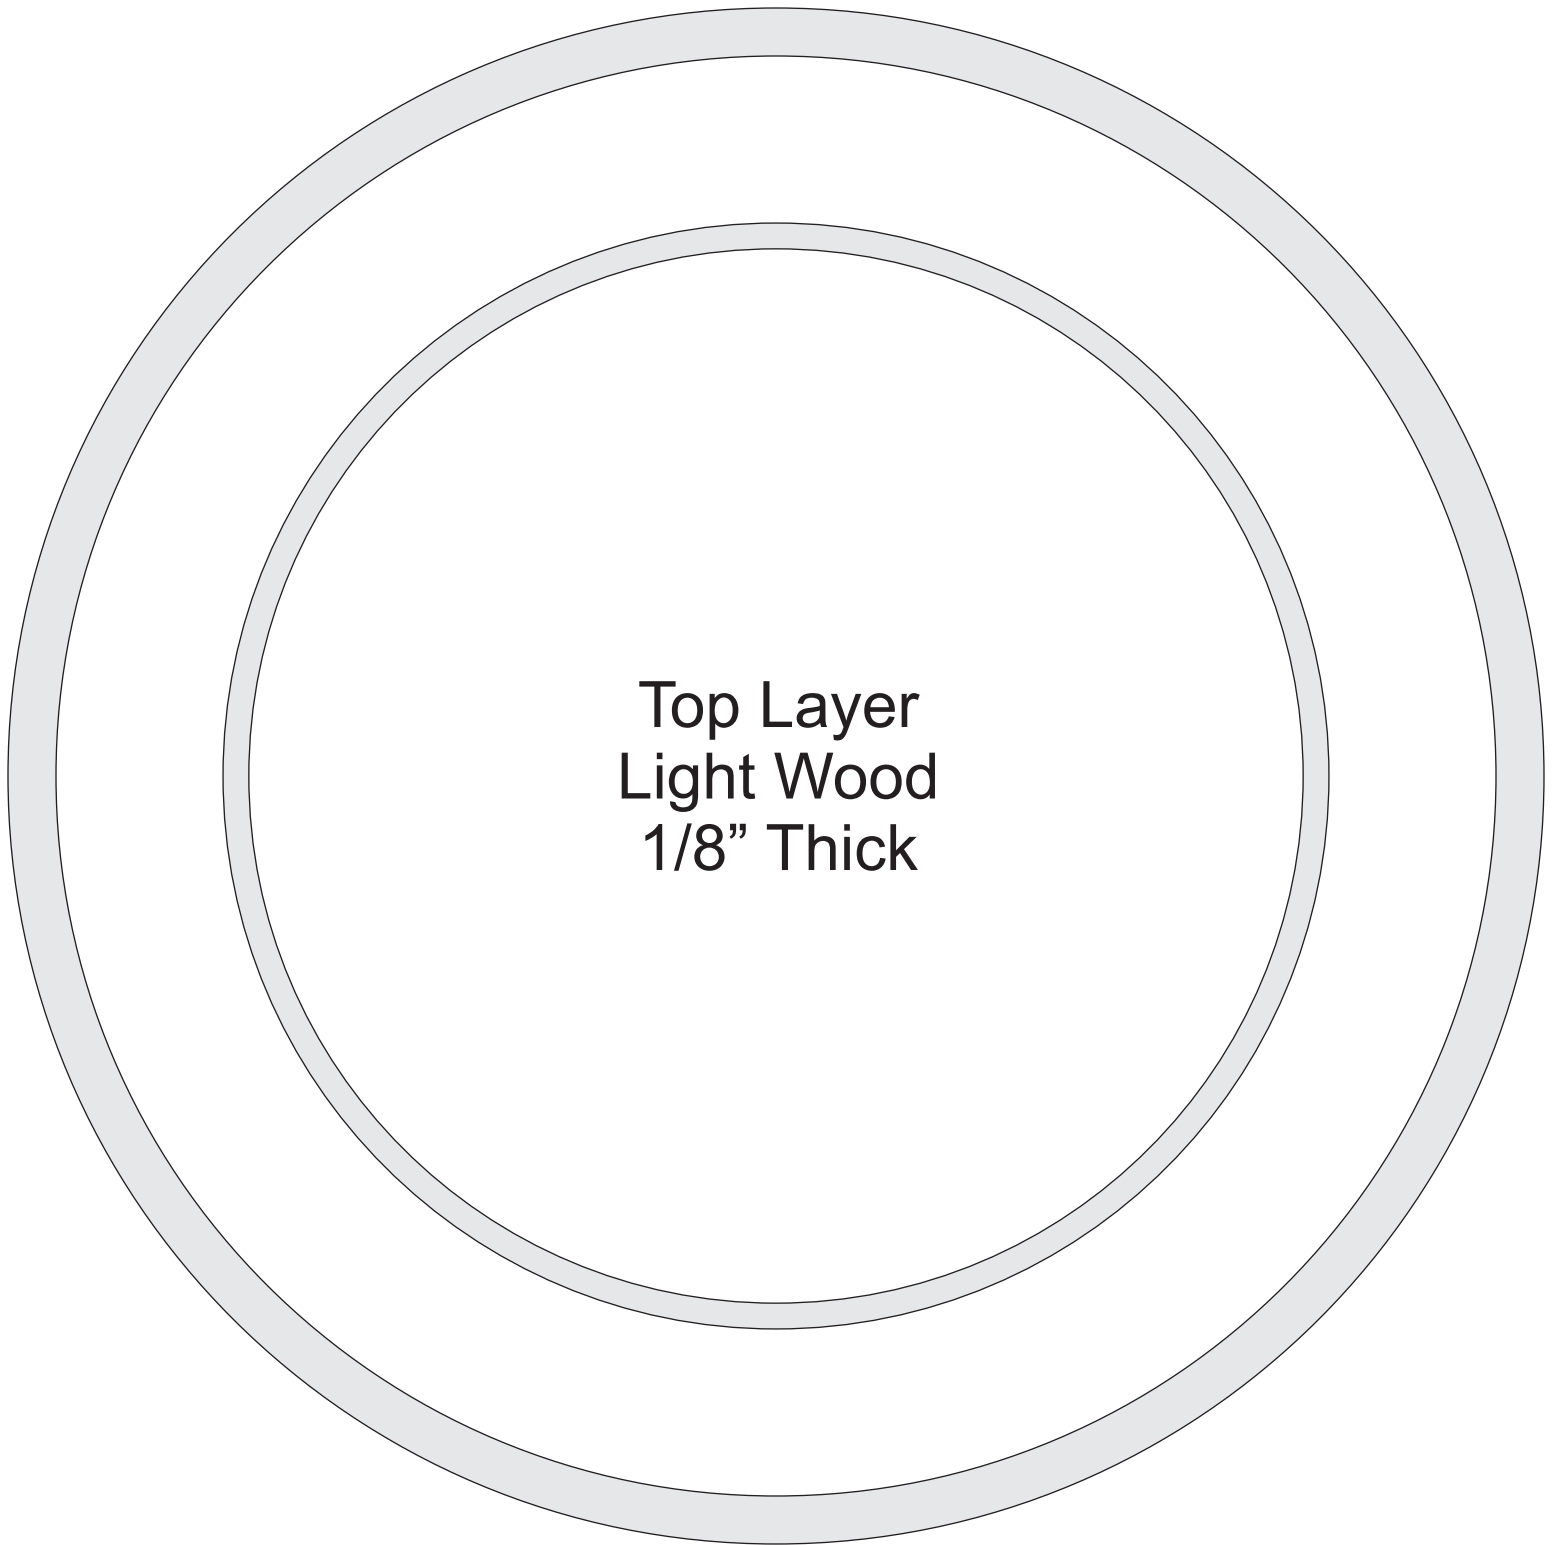

Top Layer  
Light Wood  
1/8" Thick

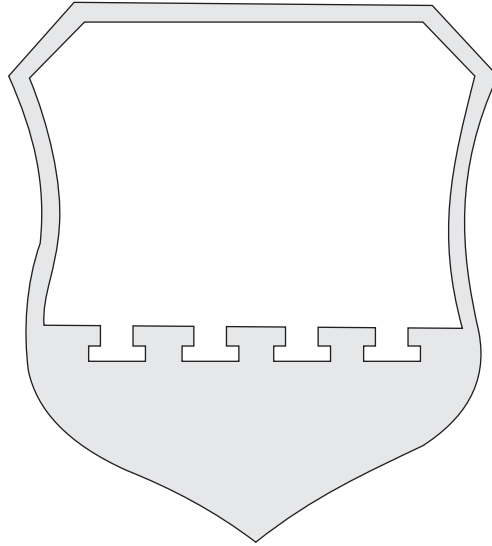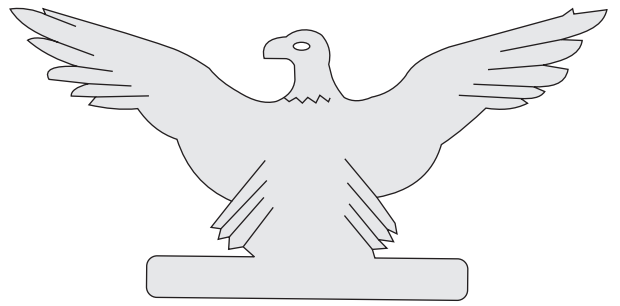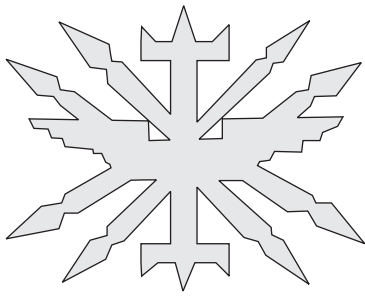

Top Layer  
Light Wood  
1/8" Thick

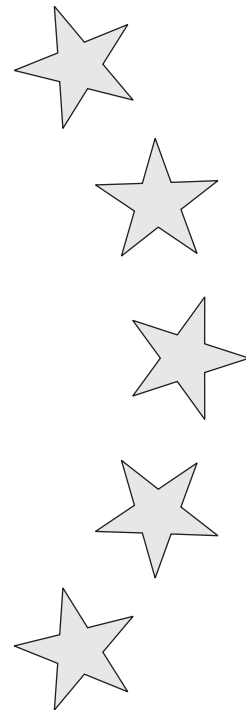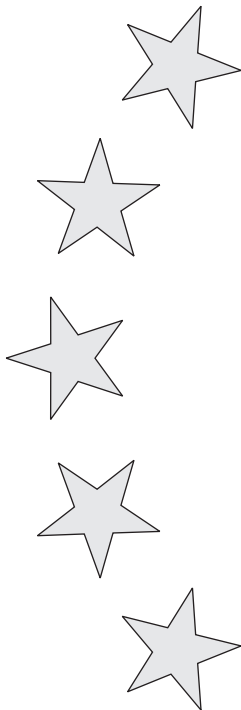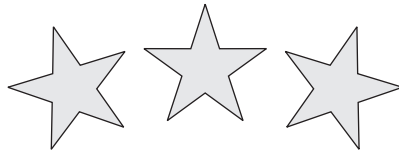

All these pieces should be easy to cut.