

# SCROLLSAW WORKSHOP

WWW.SCROLLSAWWORKSHOP.BLOGSPOT.COM

## Digital Patterns

Designed by Steve Good



Hundreds of free Patterns  
Stencil Printer  
Jigsaw Puzzle Templates  
DVD's  
Key Chain Pattern Printer  
Video Tutorials  
Reviews  
Community Forum and more.



Note to commercial print employees: I give my permission to print as many of this pattern book as your customer requires.

steve@stevedgood.com

Copyright Steve Good 2015

## Apple Pocket Watch



Requires a 1 7/16" Clock insert and a DIY pocket watch chain kit.

Here is one source for the chain kit.




<https://www.pennstateind.com/store/KCHAIN.html>

Here is another source

<http://www.klockit.com/products/sku-eeeeep.html>



Use a 1 3/8" forstner bit to drill the insert hole  
just deep enough to hold the insert.

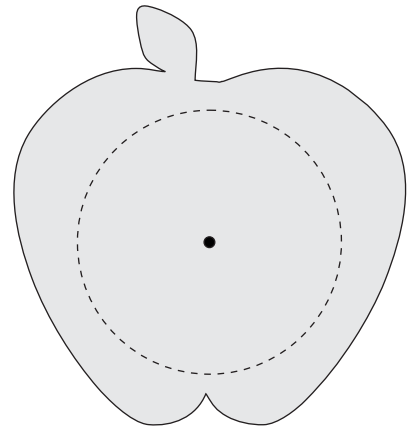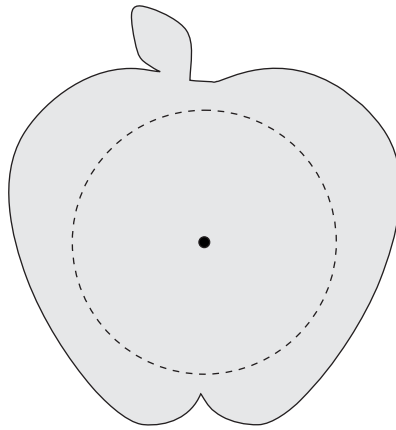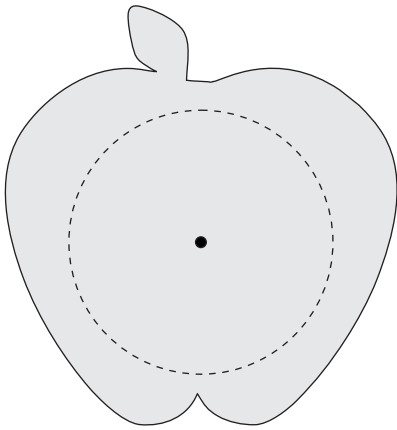

1/2" Thick

