




## Digital Patterns

Designed by Steve Good

www.scrollsawworkshop.blogspot.com

Home of Scroll Saw Pattern Printer

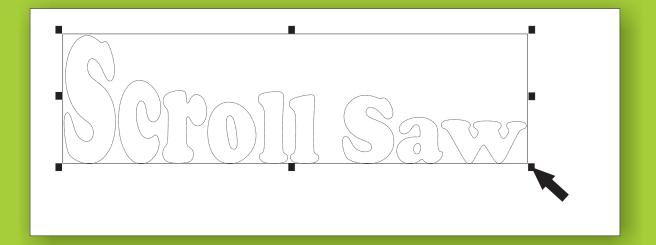


## Rapid fire rubber band gun.





When you load the rubber bands start at the tooth closest to the rear grip.

As you assemble the trigger assembly make sure it slides smoothly front to back.

## Join pattern here

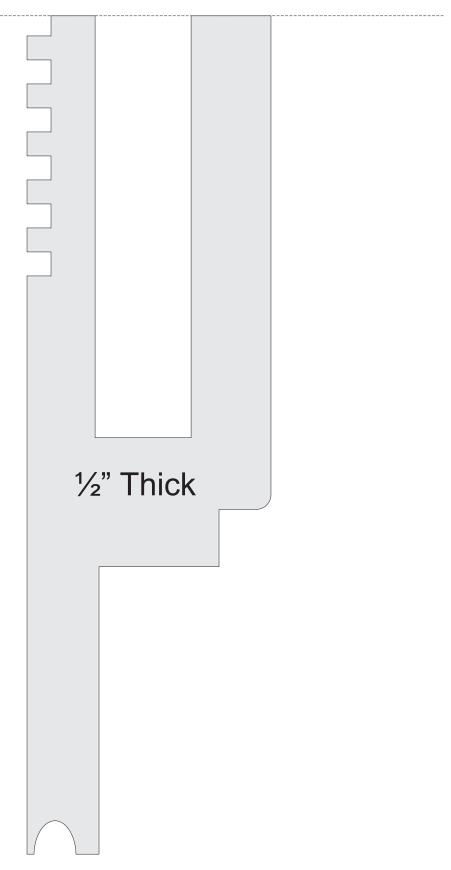

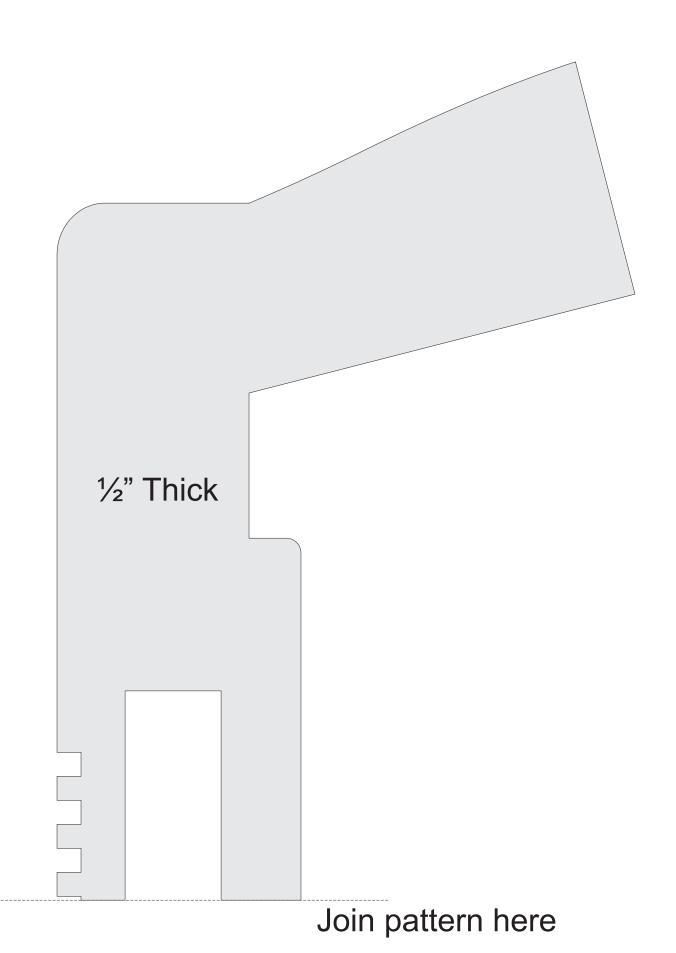

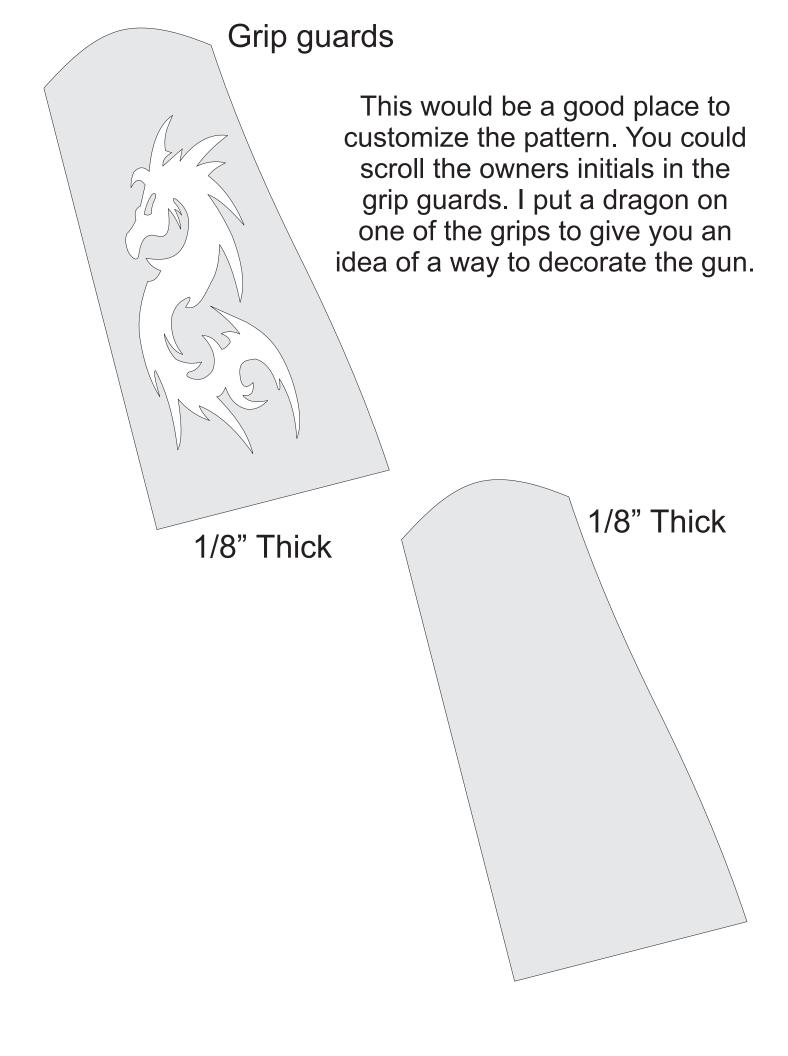

## Trigger Mechnisim


A

B

1/8" Thick

1/8" Thick

Sand the edges of the trigger ramp so they don't cut the bands.

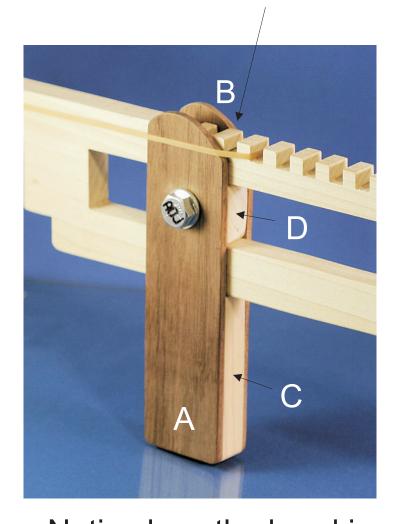

C ½" Thick

D

½" Thick

Notice how the band is loaded on the outside of the trigger assembly.

When you have finished assembly use a file to adjust the trigger ramp if the bands don't fire smoothly.