

SCROLLSAW WORKSHOP

WWW.SCROLLSAWWORKSHOP.BLOGSPOT.COM

Digital Patterns

Designed by Steve Good



Hundreds of free Patterns
Stencil Printer
Jigsaw Puzzle Templates
DVD's
Key Chain Pattern Printer
Video Tutorials
Reviews
Community Forum and more.



Note to commercial print employees: I give my permission to print as many of this pattern book as your customer requires.

steve@stevedgood.com

Copyright Steve Good 2015

Modern Design Clock





2 1/8" X 2 1/8"
Clock Movement for
1/4" Thick Stock.




Use 4 7/8" clock
hands.




Use 1/4" diameter dowel
for the leg stretchers.

Use 3/8" diameter dowel
for the clock pips.

Drill 1/4" diameter hole in
the legs for the 1/4" diameter
dowels.
The dowels are 3.25" long.

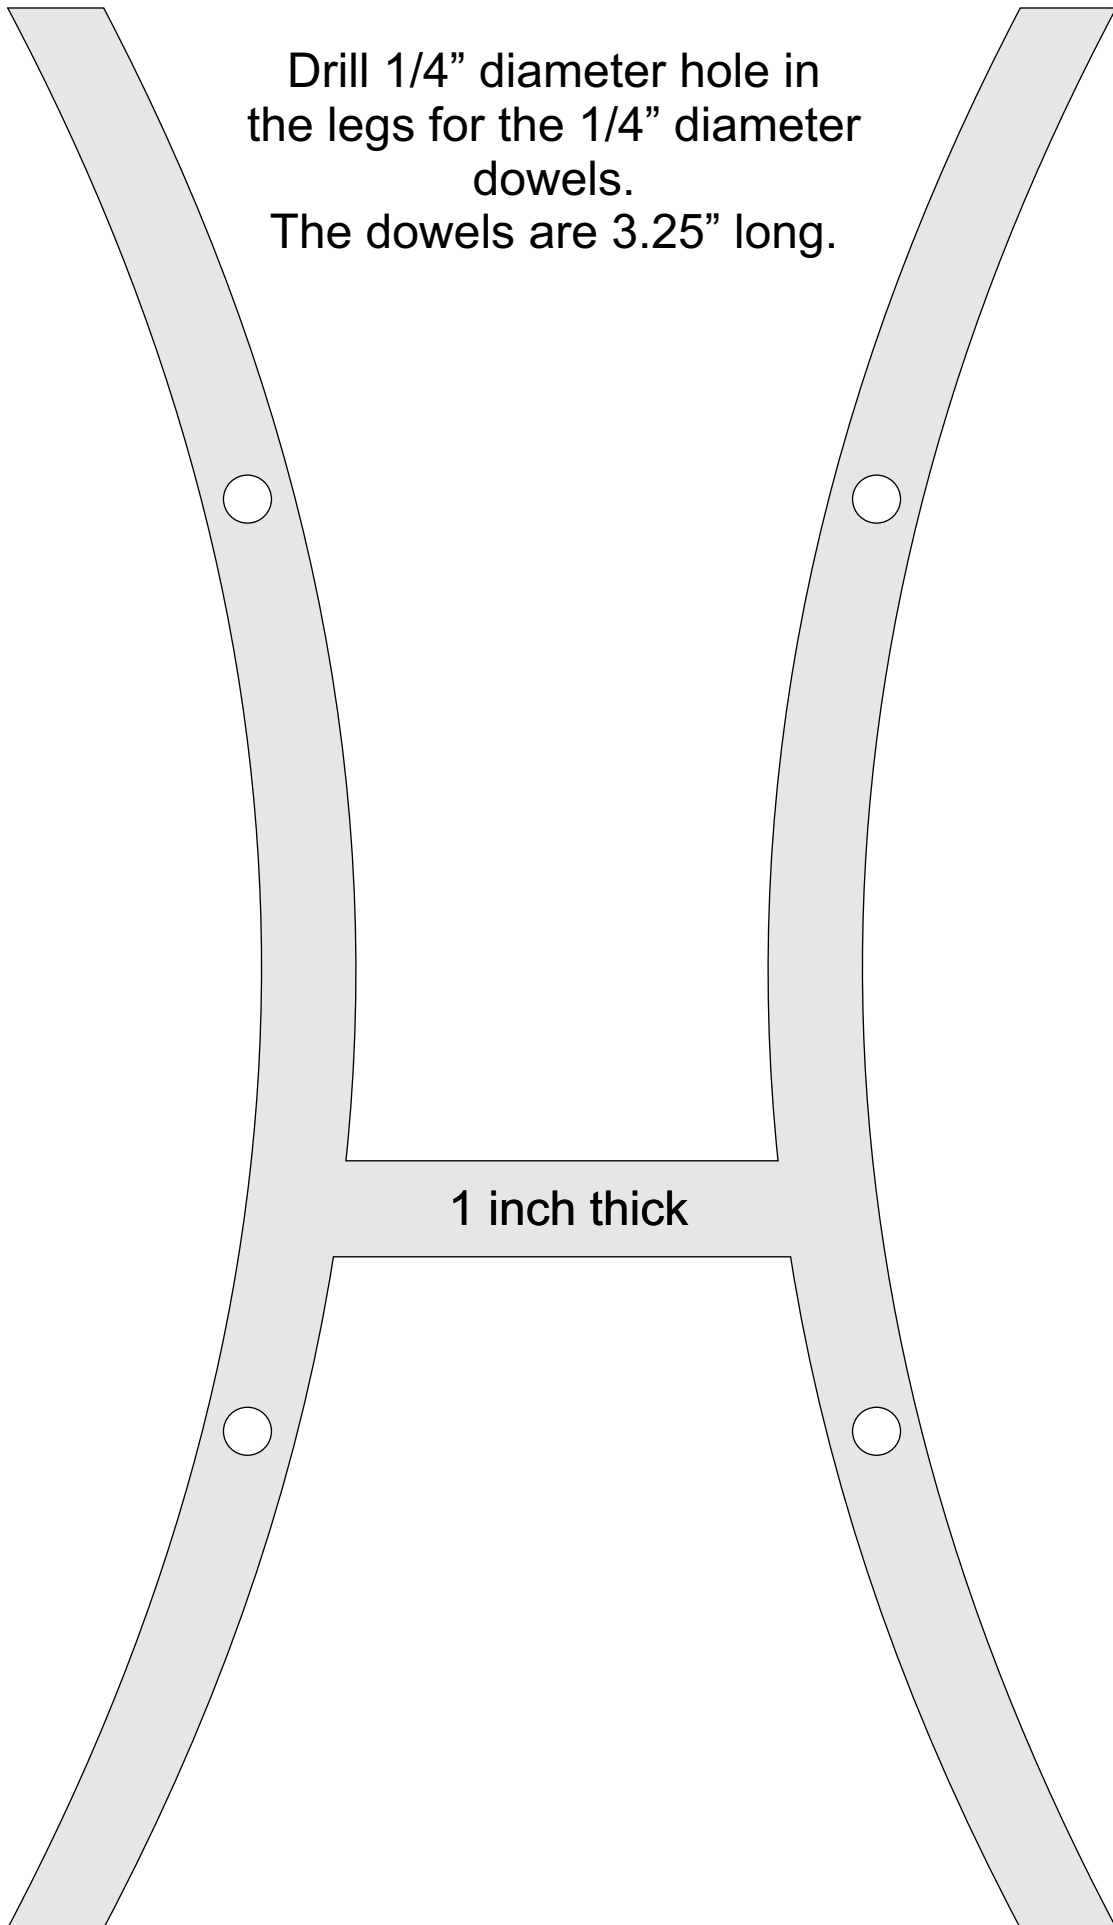


Drill 1/4" diameter hole in
the legs for the 1/4" diameter
dowels.
The dowels are 3.25" long.

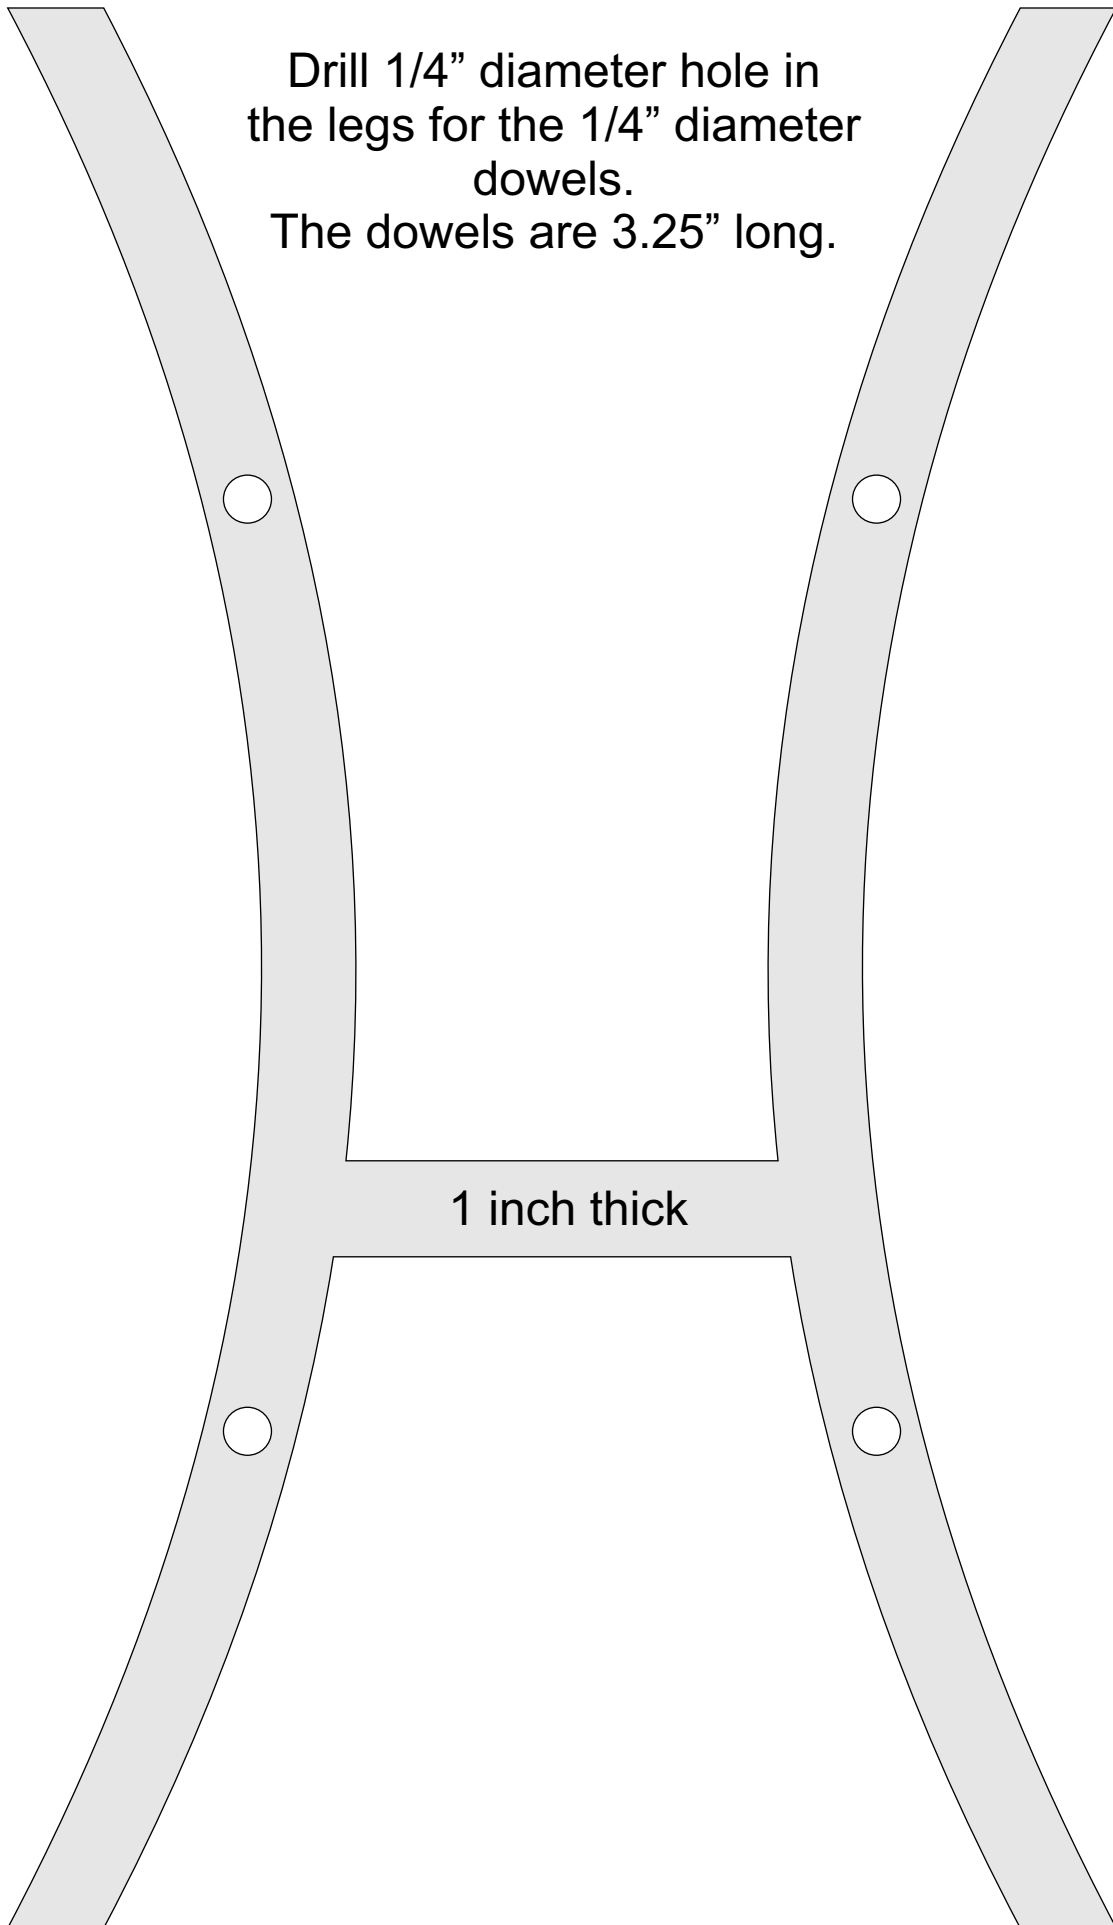

3/8" diameter holes

Fill the holes with
3/8" diameter
dowels.

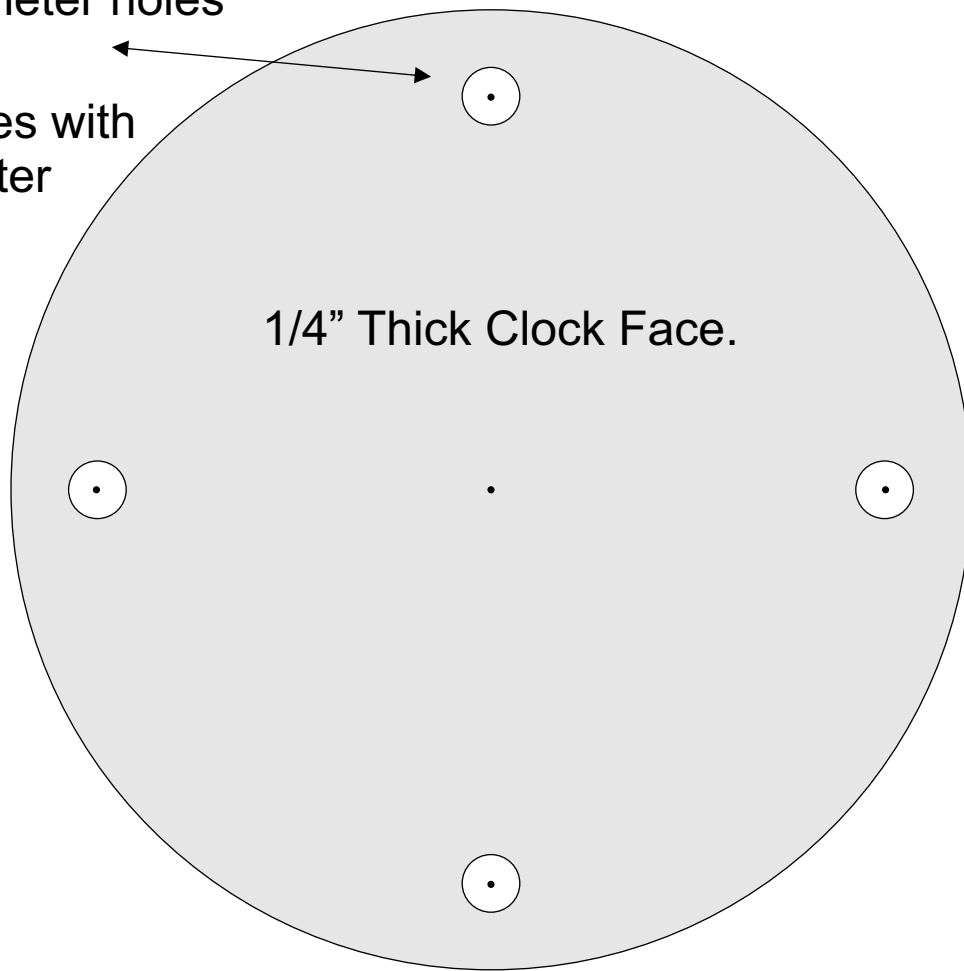

3/4" Thick
clock surround.

