



Proud SAW Member

Digital Patterns

Designed by
Steve Good


www.scrollsawworkshop.blogspot.com

Home of Scroll Saw Pattern Printer






Link cut but not sanded.
Brad still has head on it.

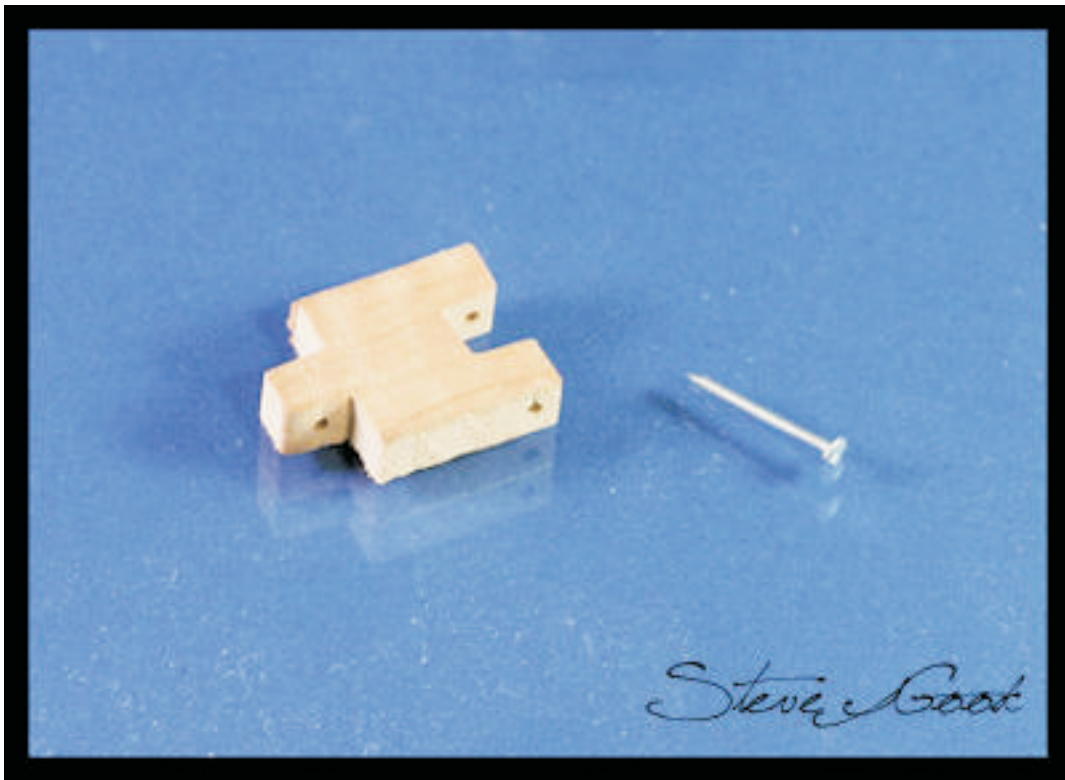

Link with rounded ends.
Brad with head cut off.

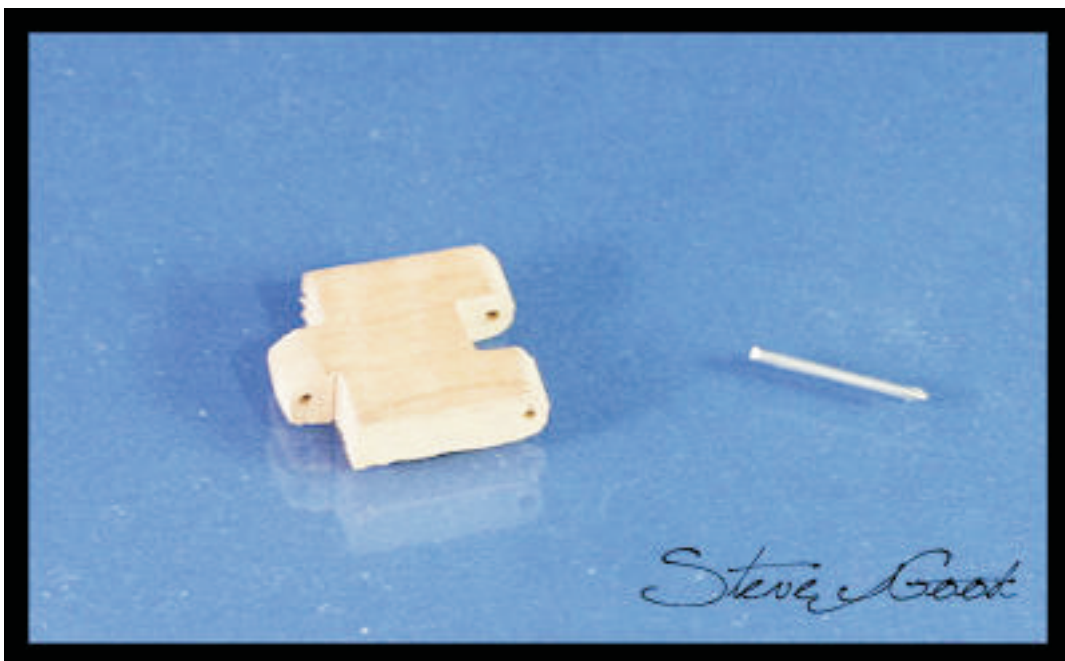

1. Cut your blank 10" x 3/4"
2. Apply pattern.
3. Drill holes to depth indicated.
Use a 1/6" drill bit.
4. Cut pieces on scroll saw.
5. Round over ends and check fit.
6. Cut heads of brad nails.
7. Insert brads.
8. Plug hole to retain brad.

Tips:

Make sure you drill the holes straight. Don't let the bit wander.

When rounding over the links be careful not to sand into the holes.

Keep all the links in the order they were cut and facing up. Makes for a better fit and keeps the grain lined up.

