

SCROLLSAW WORKSHOP

WWW.SCROLLSAWWORKSHOP.BLOGSPOT.COM

Digital Patterns

Designed by Steve Good



Hundreds of free Patterns
Stencil Printer
Jigsaw Puzzle Templates
DVD's
Key Chain Pattern Printer
Video Tutorials
Reviews
Community Forum and more.



Note to commercial print employees: I give my permission to print as many of this pattern book as your customer requires.

steve@stevedgood.com

Copyright Steve Good 2016

Small Bud Vase




I used a 20mm X 150mm test tube for the bud vase.
Here is a current Amazon.com link to the ones I bought.

http://www.amazon.com/gp/product/B004P4OB4S?psc=1&redirect=true&ref_=oh_aui_detailpage_o00_s00



Here is the layout I used. I cut two 3" wide strips of Baltic Birch plywood. I cut 1 3" X 3" blank for the bottom. then the pattern was glued to the remaining boards.



I used a 5/8" forstner bit to drill the hole in the bottom. If you don't forstner bits just cut the holes with the scroll saw. The forstner bit for the two upper pieces is 3/4".

This would look nice cut for 1/4" hardwoods also.

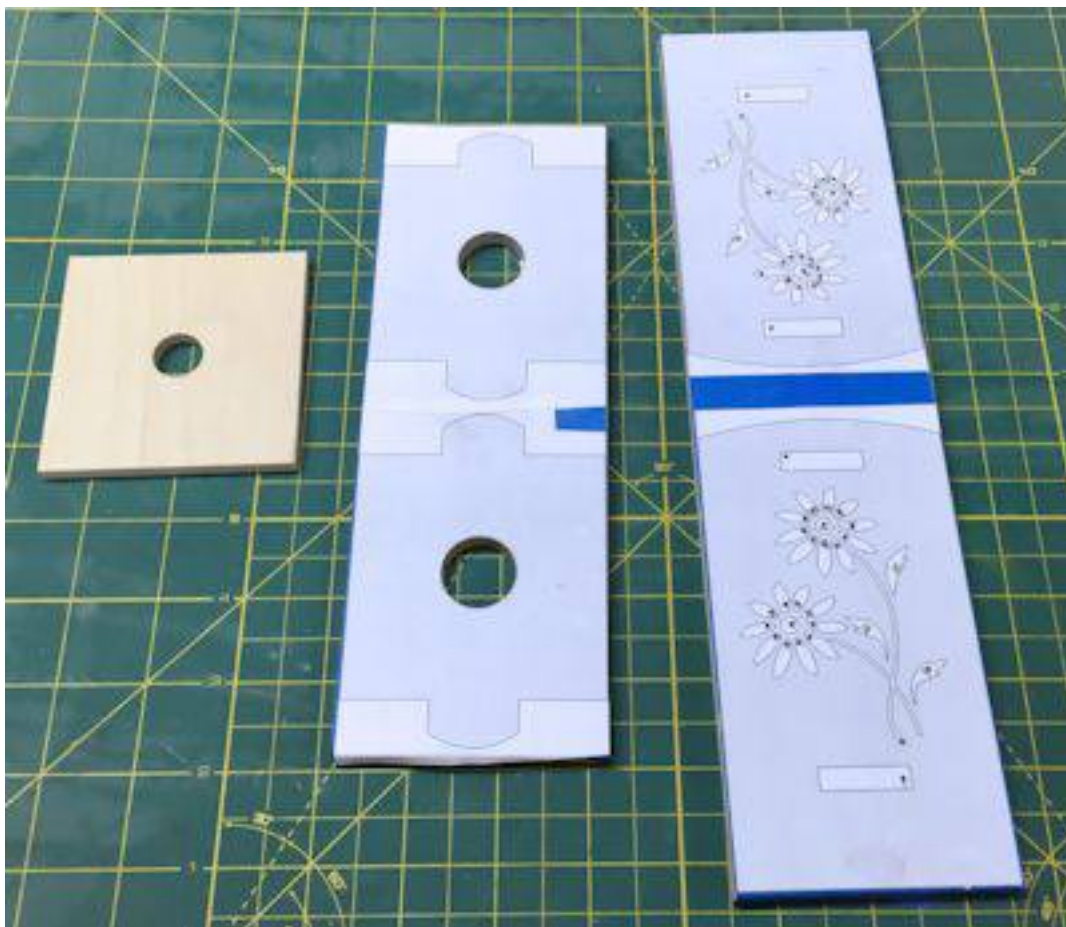


1/4" Thick

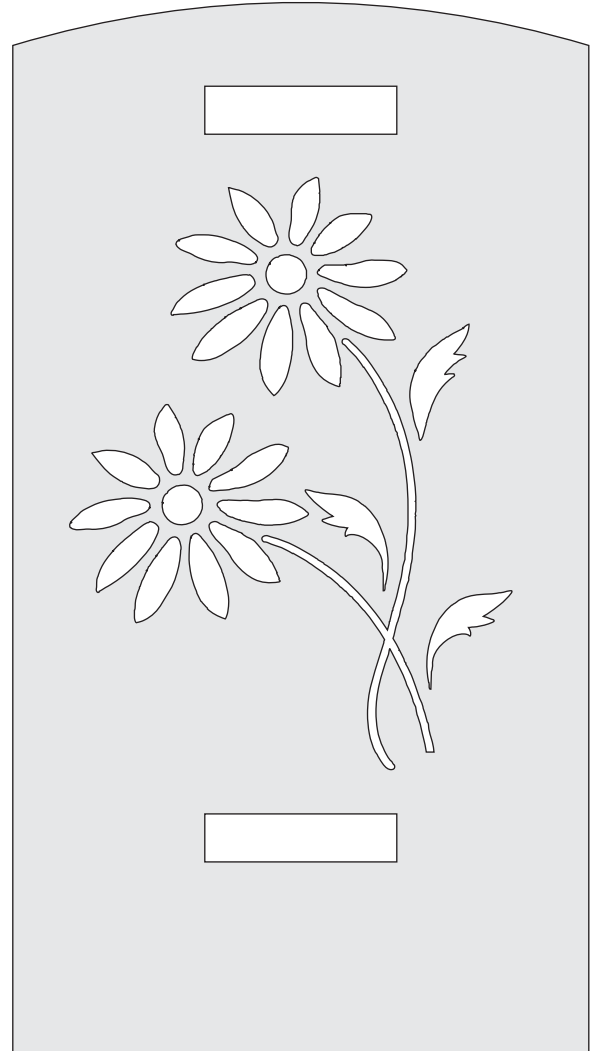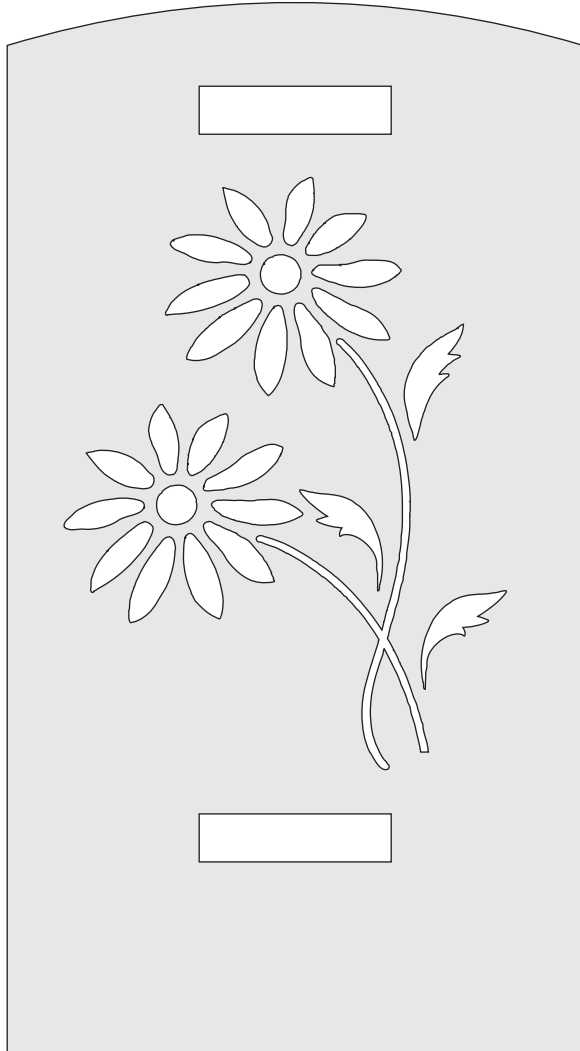

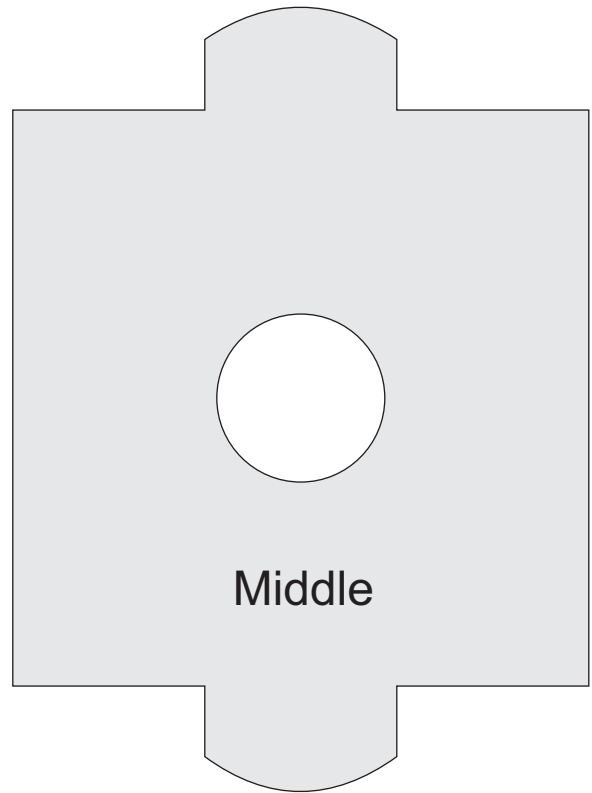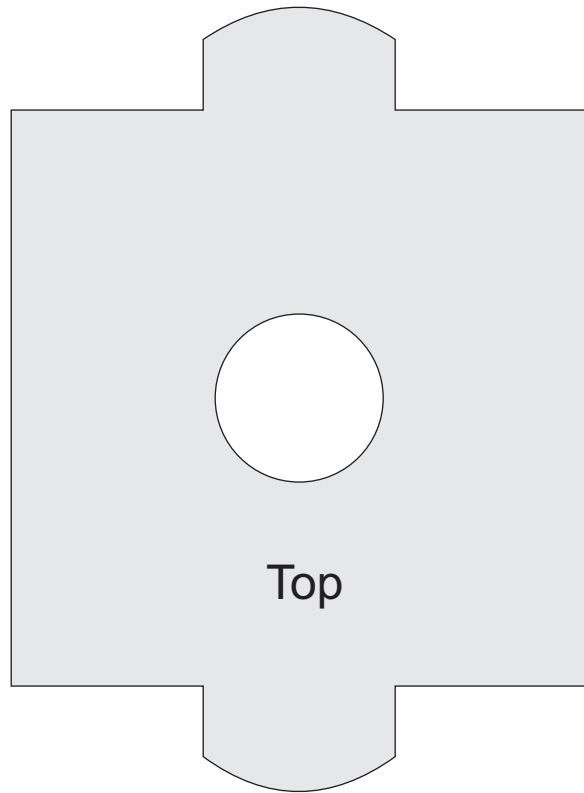

1/4" Thick

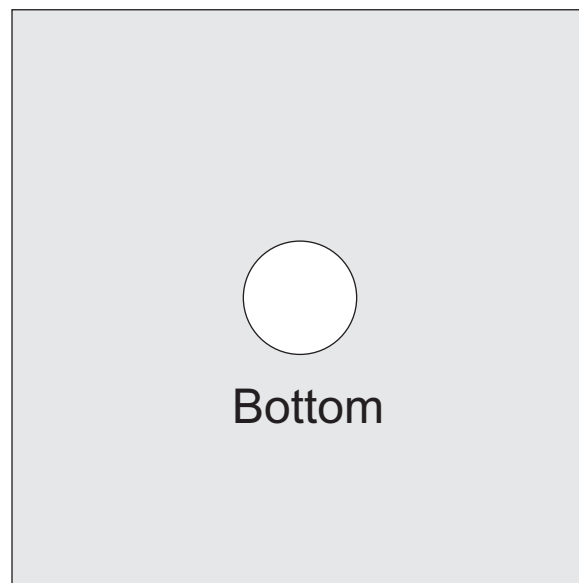

The bottom is just glued between the two sided. See picture.