

SCROLLSAW WORKSHOP

WWW.SCROLLSAWWORKSHOP.BLOGSPOT.COM

Digital Patterns

Designed by Steve Good



Hundreds of free Patterns
Stencil Printer
Jigsaw Puzzle Templates
DVD's
Key Chain Pattern Printer
Video Tutorials
Reviews
Community Forum and more.



Note to commercial print employees: I give my permission to print as many of this pattern book as your customer requires.



steve@stevedgood.com

Copyright Steve Good 2014

Candle Cube



The cube site over the
tea light.

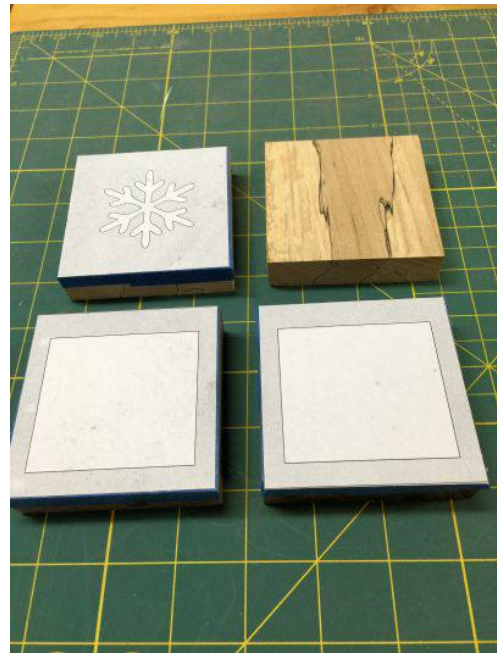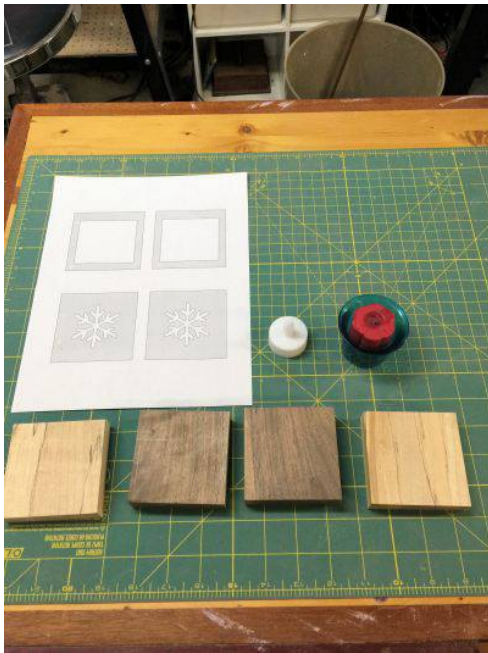


You will need four 3" X 3" X 3/4" blanks, one electric tea light and one small glass candle dish plus candle.



Do the interior cuts, glue and clamp up the cube.



Sand all sides flush after the glue dries. Round over every edge.
Mark the centers of the top and bottom of the cube

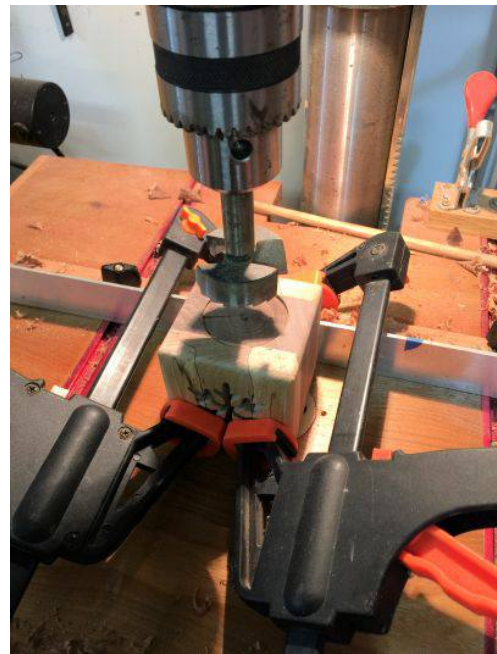

Use a forstner bit in your drill press. For the top use a 2.25 diameter bit. For the bottom use a 1.5 inch diameter bit or one that fits your teal light.

WARNING

Drilling into end grain with a forstner bit is difficult.
Make sure you clamp it well.







Drill the top to a depth of 1/4".



Drill all the way through the bottom.

3/4" Thick

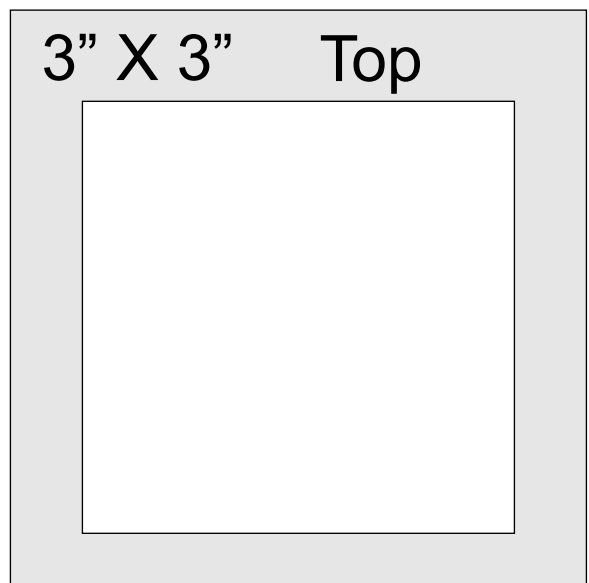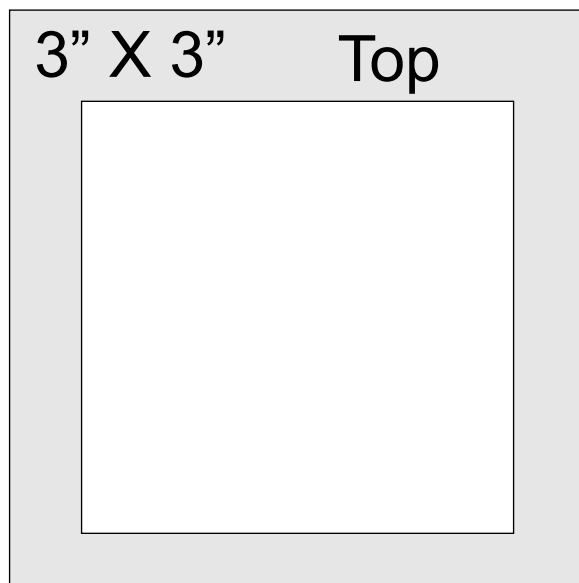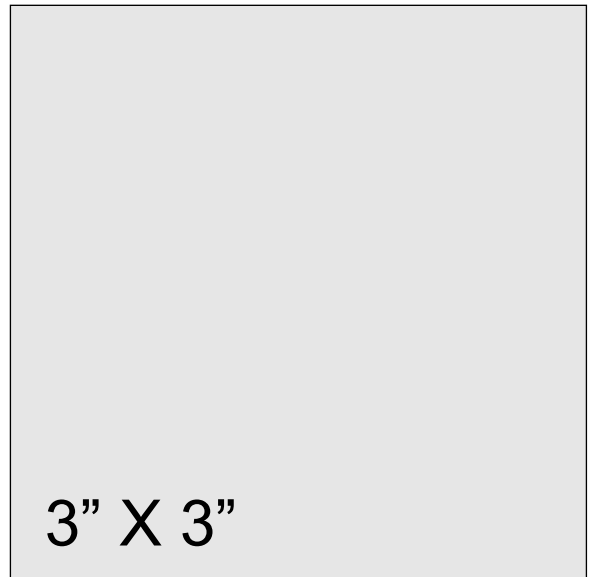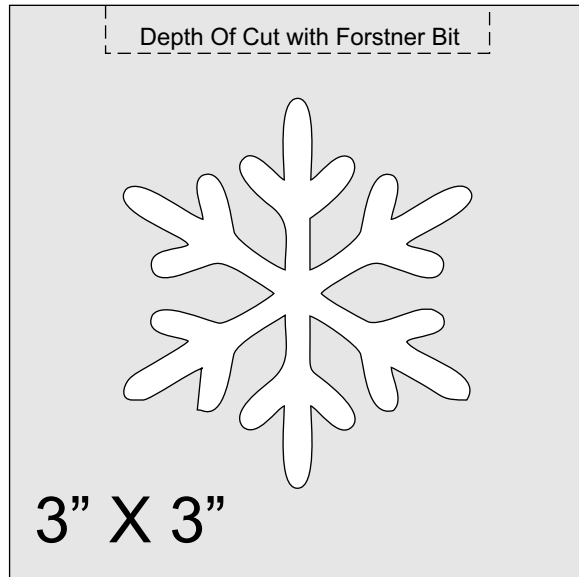

Note that the top of the center pieces is a little thicker. This helps prevent the candle recess from breaking through.