

Digital Patterns



Designed by Steve Good

www.scrollsawworkshop.blogspot.com

Home of Scroll Saw Pattern Printer
and the Scroll Saw Key Chain Printer




Note to commercial print employees: I give my permission to print as many of this pattern book as your customer requires.

Snowflake Clock





This pattern requires a 2 3/4" clock insert with a 2 3/8" diameter mounting hole. I used the one at the following link.

<http://www.woodcraft.com/product/2003866/34012/bezel-234-diameter-resin-style-a-fw-face.aspx>

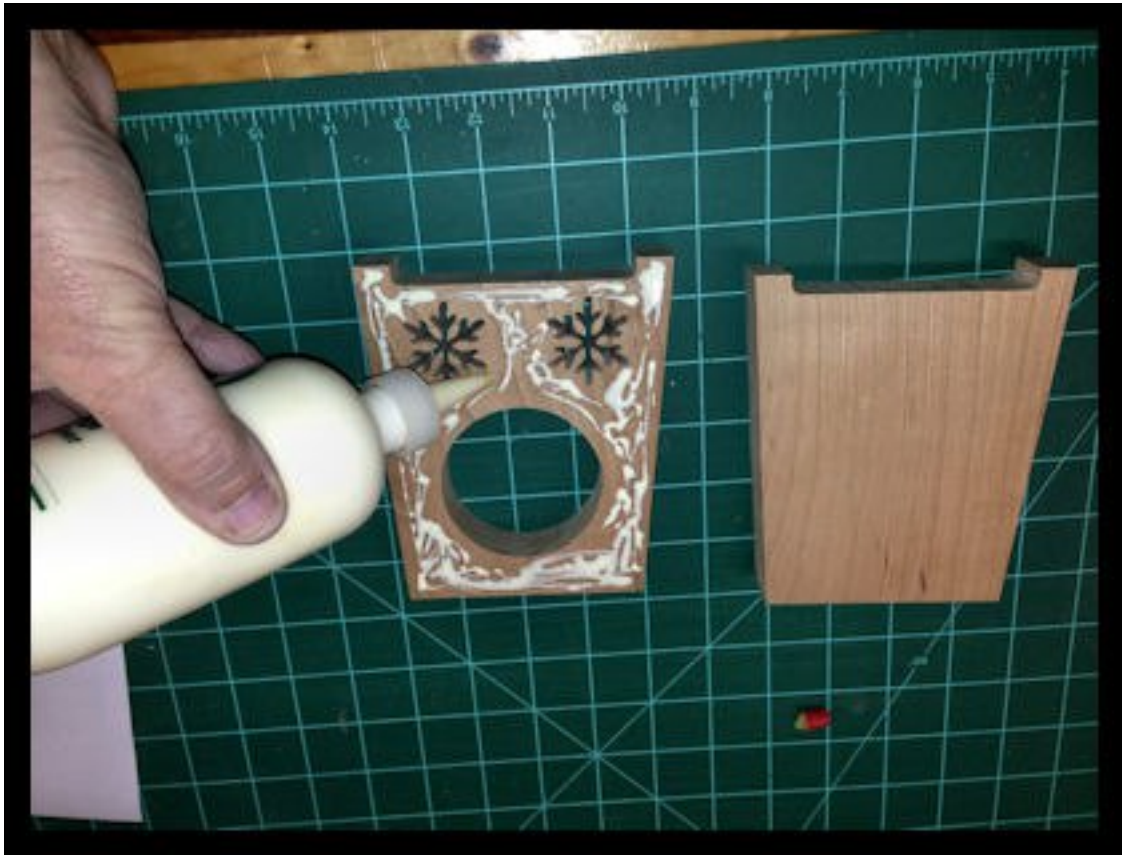

Cut the front and back patterns.
Apply glue to the front and glue
to the back

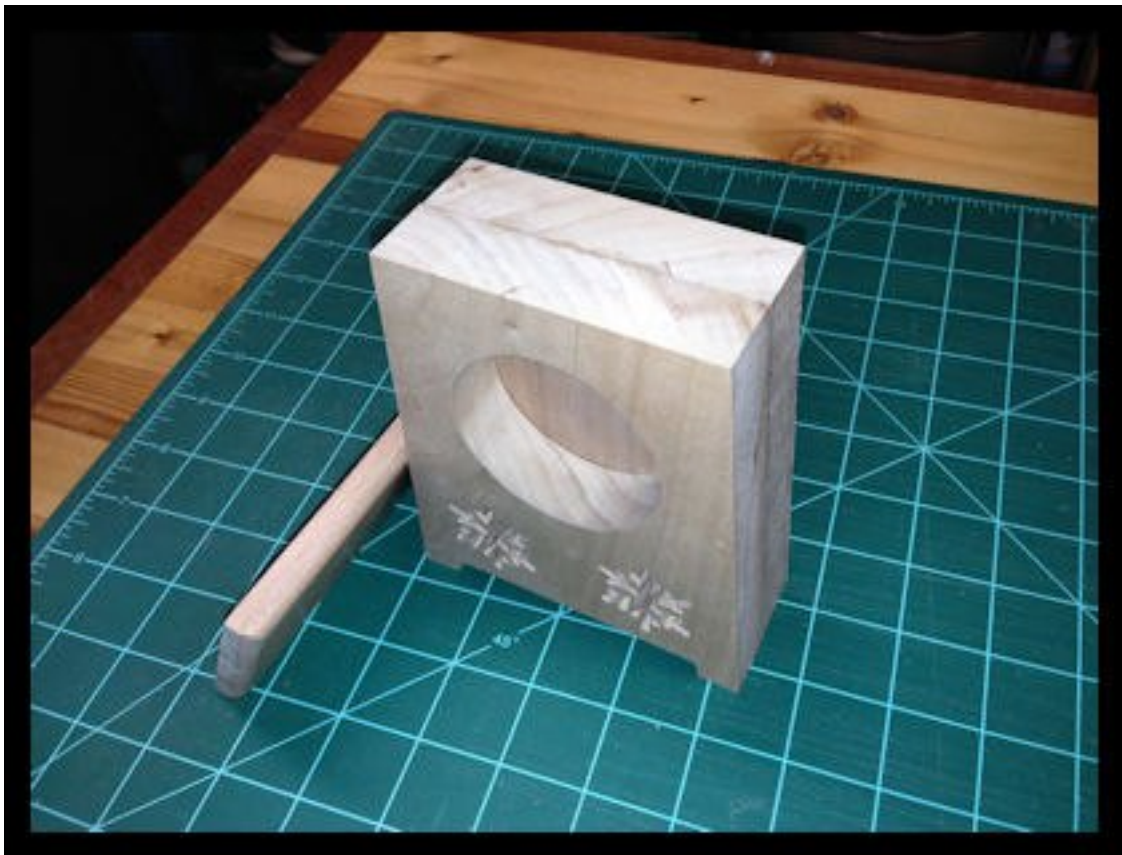

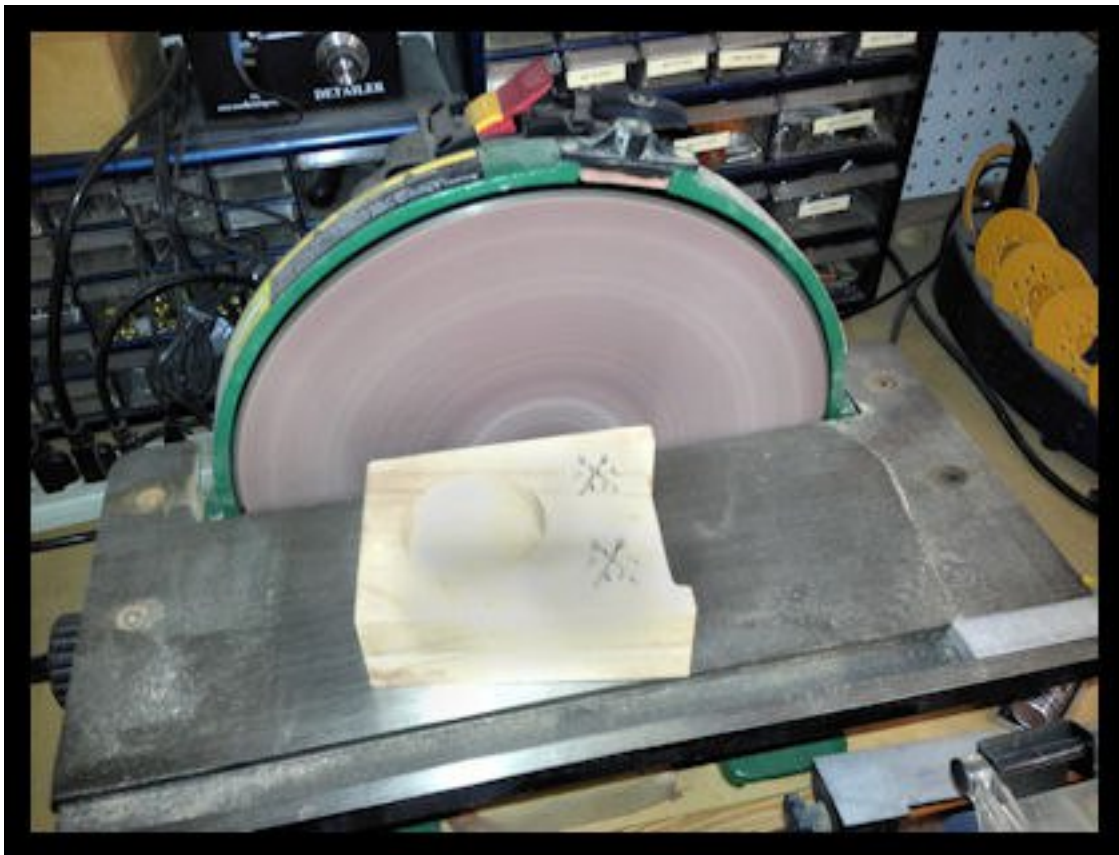

Sand all edges flush.
Cut the top and round over the edge.
Glue the top to the clock. Finish and
install the insert.



3/8" Thick
Top
4.24 X 2.5 inches

Front



If you have a 2 3/8" diameter forstner bit use it for the clock insert hole. Optionally just cut it with your scroll saw. If you use you saw cut inside the pattern line for a snug insert fit.

Back

3/4" Thick

