

SCROLLSAW WORKSHOP

WWW.SCROLLSAWWORKSHOP.BLOGSPOT.COM

Digital Patterns

Designed by Steve Good



Hundreds of free Patterns
Stencil Printer
Jigsaw Puzzle Templates
DVD's
Key Chain Pattern Printer
Video Tutorials
Reviews
Community Forum and more.

Click to Donate.



Scan to Donate



Note to commercial print employees: I give my permission to print as many of this pattern book as your customer requires.

steve@stevedgood.com

Copyright Steve Good 2020



General Pattern Information

You may use this pattern to make as many of the project as you like. You are free to use any technique including mass production to build the project. The pattern may be copied and given to others provided the entire book is kept intact. You may not sell the pattern or include it in another commercial package of any type.

Steve Good retains the right to the pattern. If you have any questions about the use of this pattern please contact me at steve@stevedgood.com

When printing this pattern it is important to print it full size. When you bring up the print dialog box look in the “Page Sizing & Handling” section. Make sure the “Actual Size” is selected before you hit print.

You also only need to print the page/s you need. After the print dialog opens look for the “Pages to Print” section. You can print the current page or a range of pages. This will help save ink by not printing the title/instruction pages.

Printing Instructions



Compound Cut Tea Light Candle Stand



Home of the Seyco ST-21 Scroll Saw, Scrollers Drill, and more.

Seyco
The Scroll Saw Specialists, INC.


1-800-462-3353

www.seyco.com






For compound cut projects I will sometimes use these 1.5" X 1.5" X 36" boards from Home Depot. They are Poplar and easy to cut.

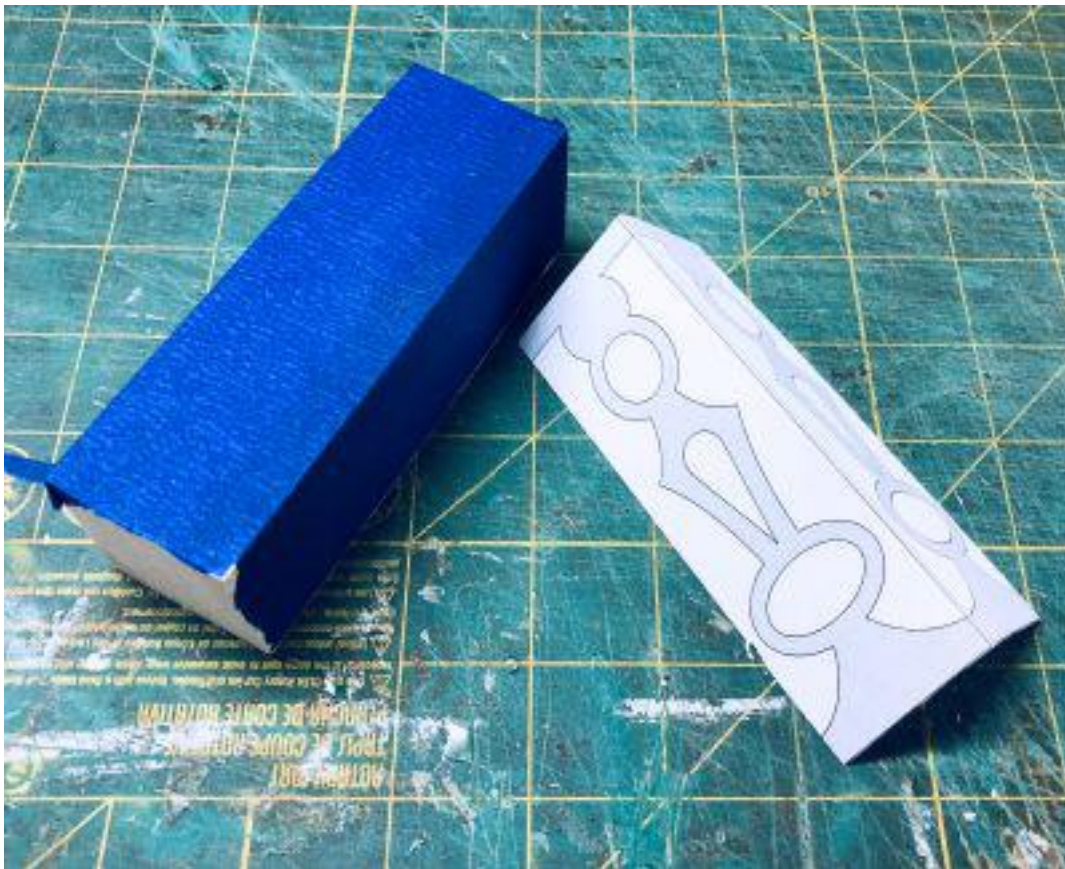

Wrap the pattern around two sides of the blank.
I used the blue painters tape to make the pattern
easier to remove




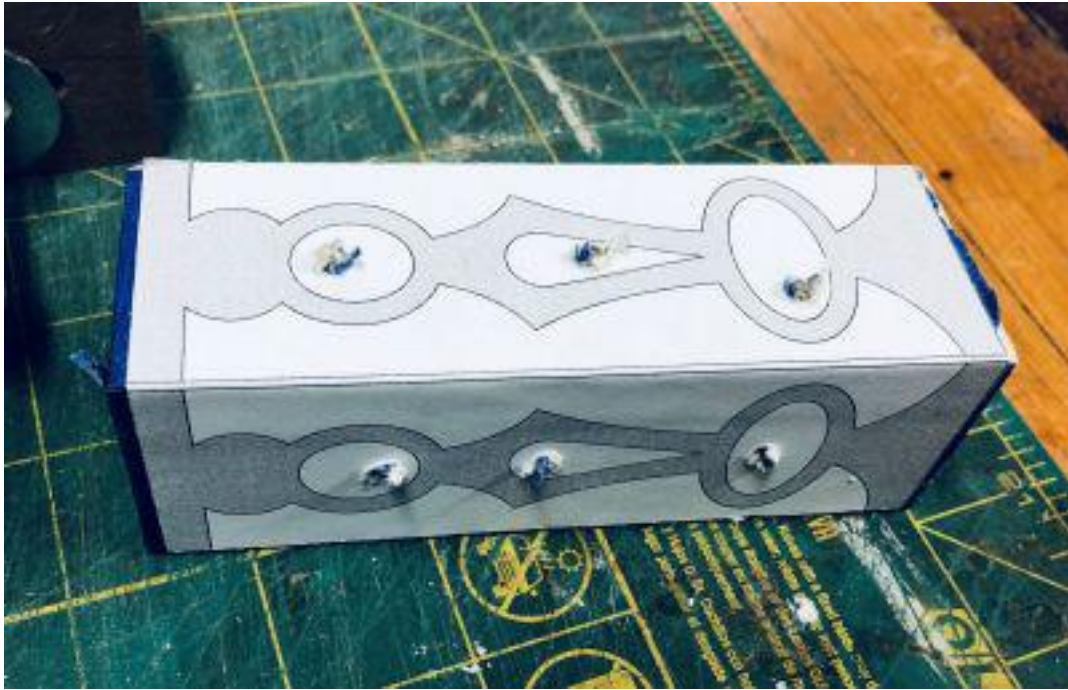

Drill the interior holes on each side.

I use a clamp to hold the blank while I make the cuts.



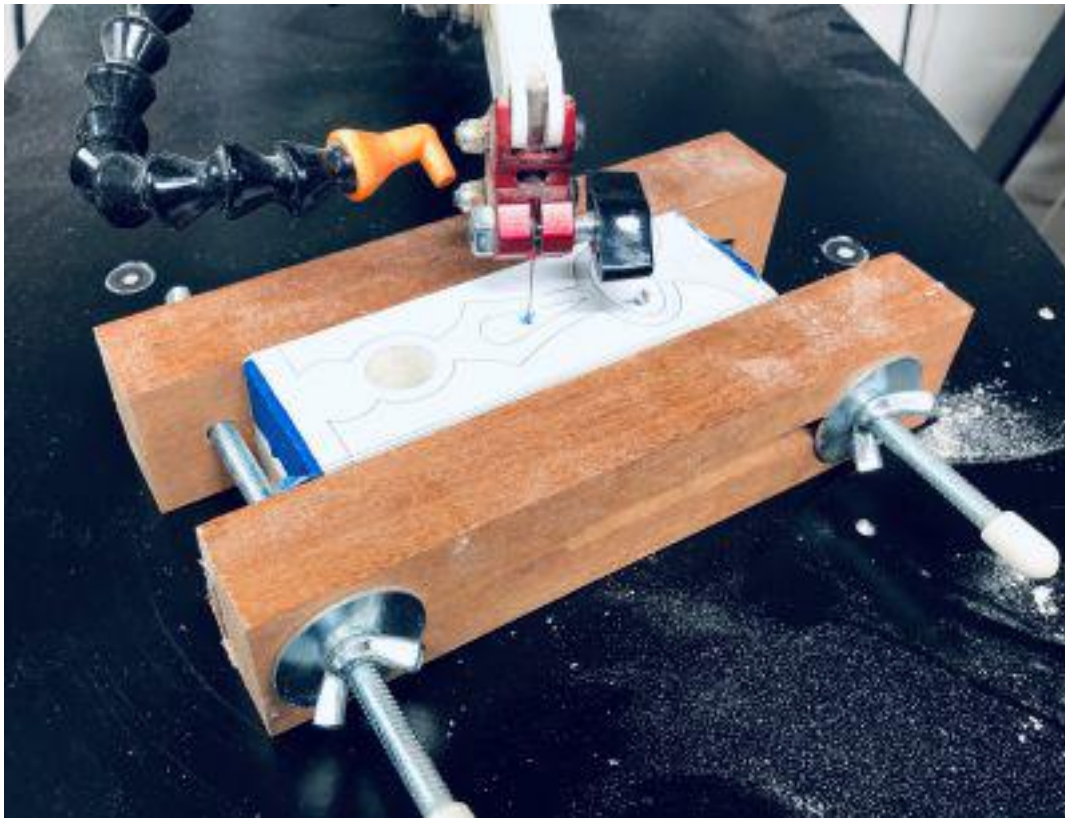


Cut the interior cuts on side one.
Flip the wood and cut the interior cuts on side two.






Remove the blank from the clamp and cut the exterior on side one right. Then cut side one left.

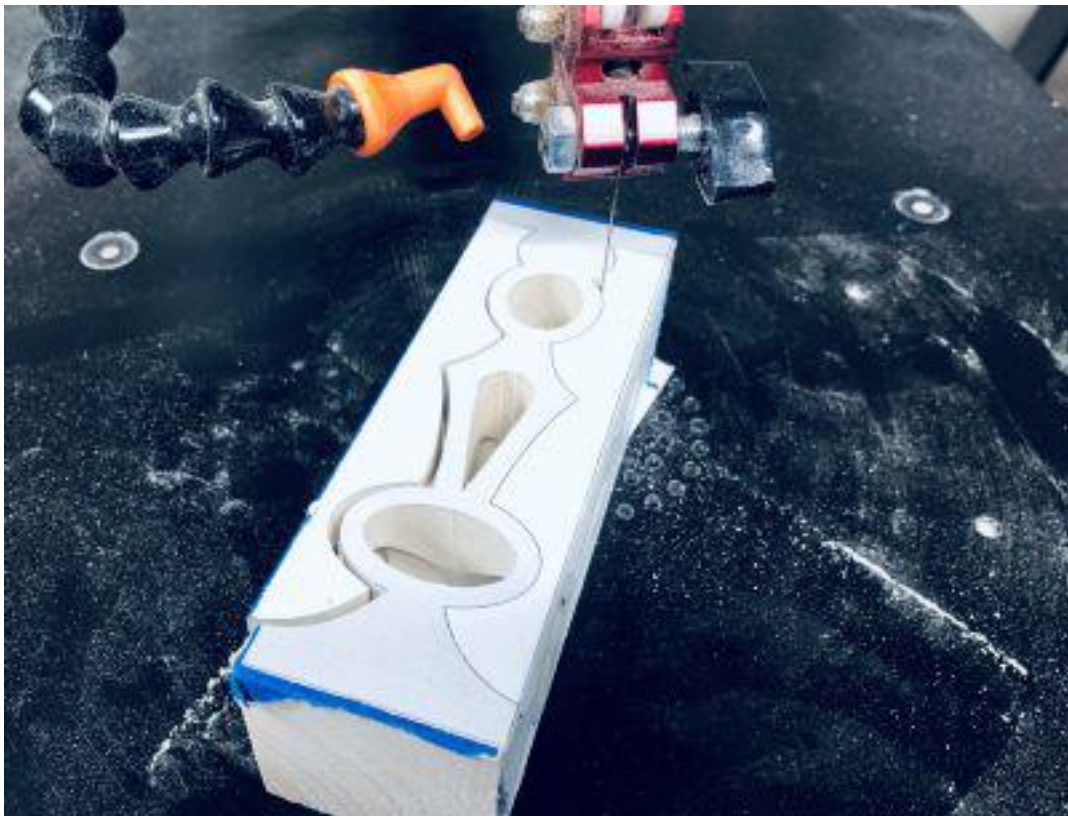



You have just cut off the side two pattern. We have to replace it. Carefully tape all the pieces back together leaving the side two pattern visible.

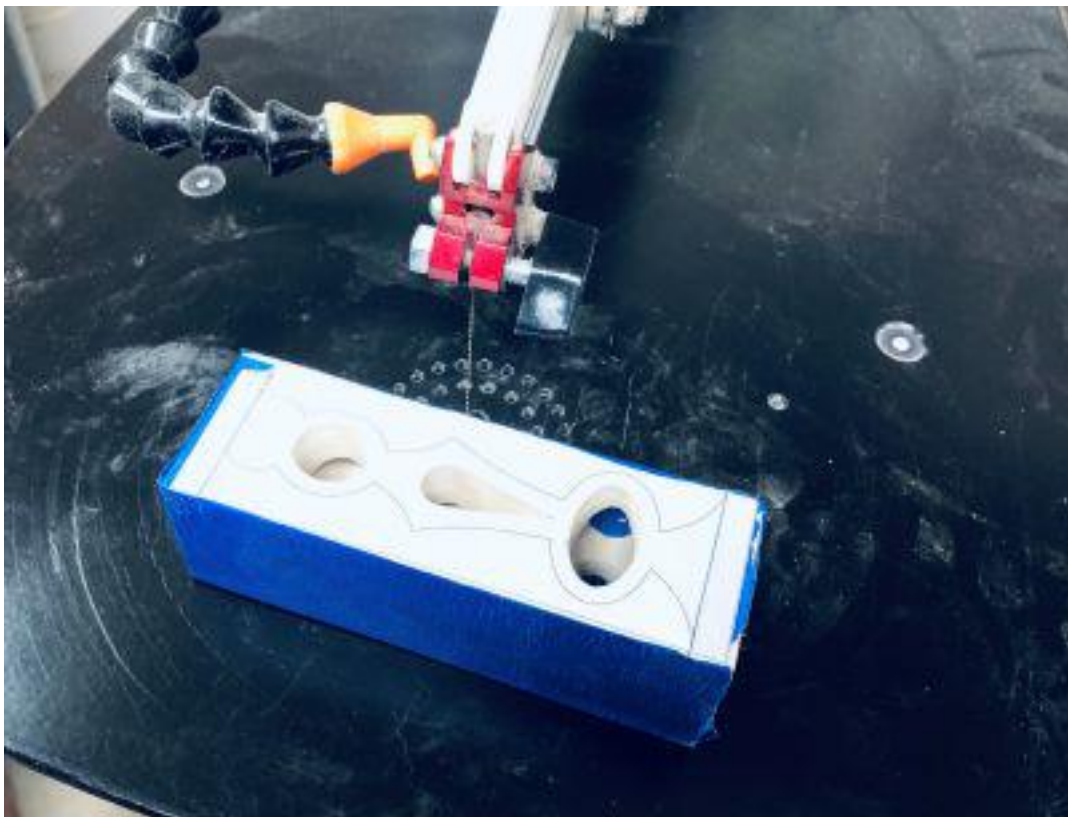



Remove all the waste to reveal the project.
Cut the bottom round base and glue it to the
bottom of the candle stick.
Sand and finish

1.5" X 1.5" X 4.5" Wood Blank

