



Digital Patterns

Designed by
Steve Good

www.scrollsawworkshop.blogspot.com

Home of Scroll Saw Pattern Printer




The Dancer Clock
For the ladies in you life.



Use a 1 3/8 inch forstner bit
to cut the hole.



Clock requires a 1 7/16 inch mini clock insert.

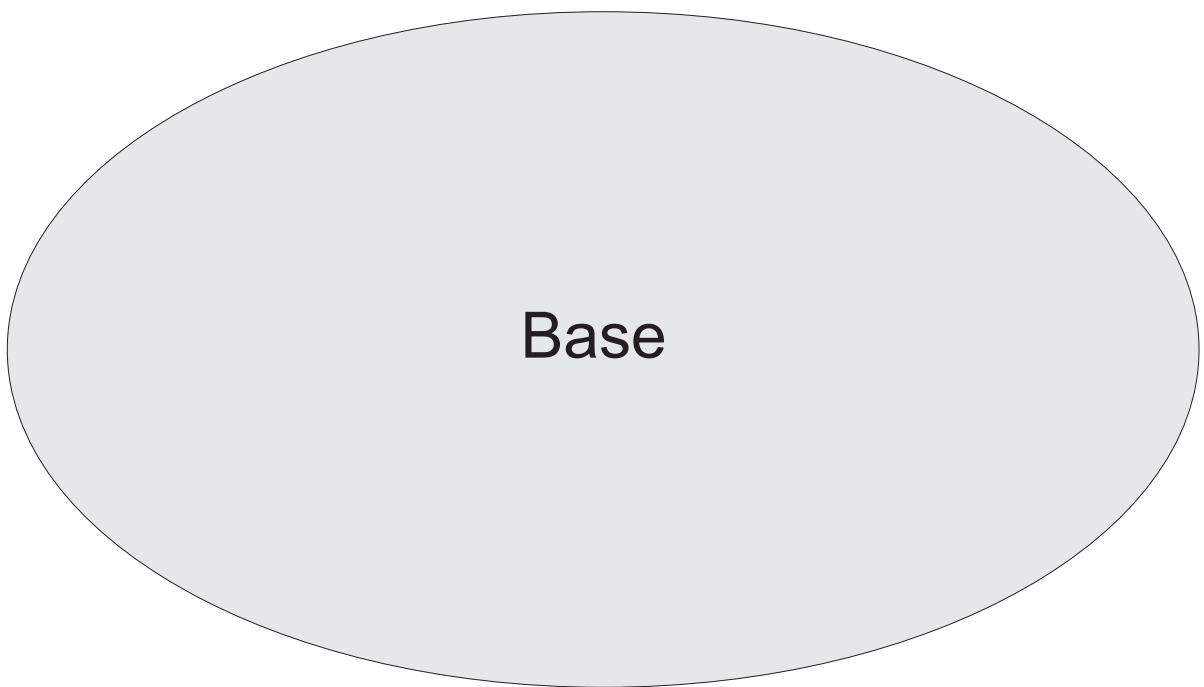

Base