



Proud SAW Member

# Digital Patterns

Designed by  
Steve Good

[www.scrollsawworkshop.blogspot.com](http://www.scrollsawworkshop.blogspot.com)

Home of Scroll Saw Pattern Printer




# Depression Fund




**3/4" Thick**

**Use temporary spray adhesive  
to tack the bill to the back.  
Make sure it lines up with the frame.**

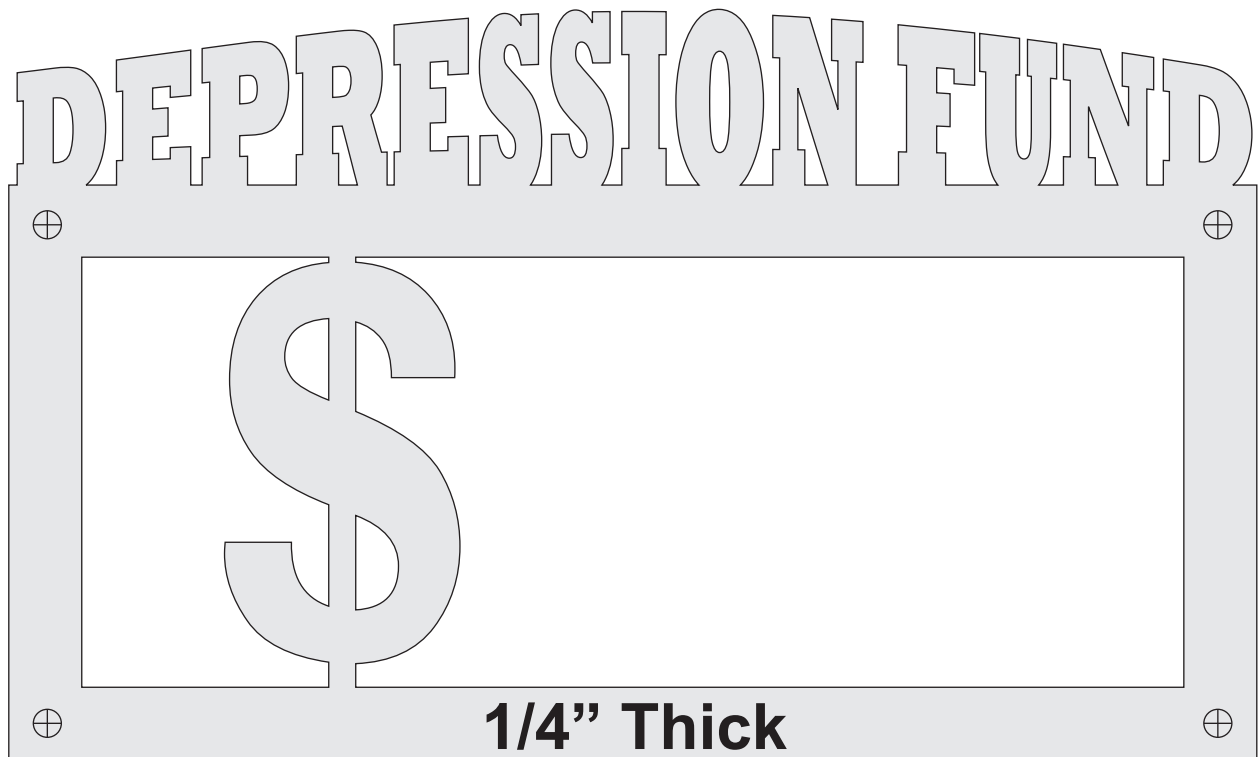

**Per drill and counter sink the holes for  
the screws. Use small brass hinge screws  
to hold the frame to the back.**

**Place a small screw driver on the base  
for emergency access to the money.**

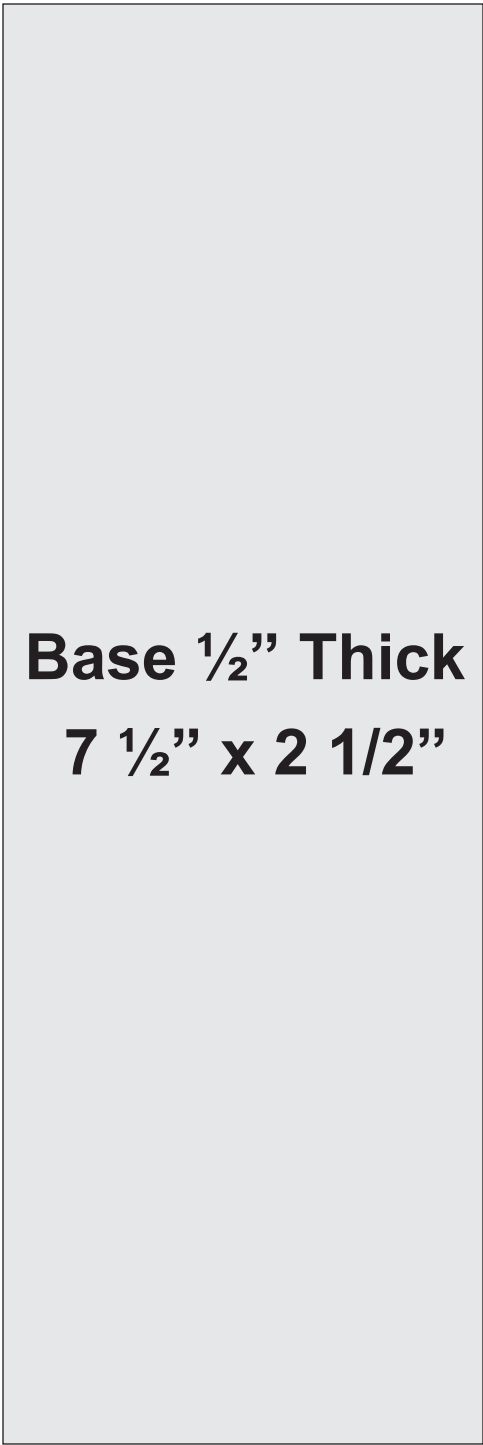

**Base  $\frac{1}{2}$ " Thick  
 $7 \frac{1}{2}$ " x  $2 \frac{1}{2}$ "**