



Digital Patterns

Designed by
Steve Good

www.scrollsawworkshop.blogspot.com


Home of Scroll Saw Pattern Printer



Desktop Clock



Clock Body 1" thick

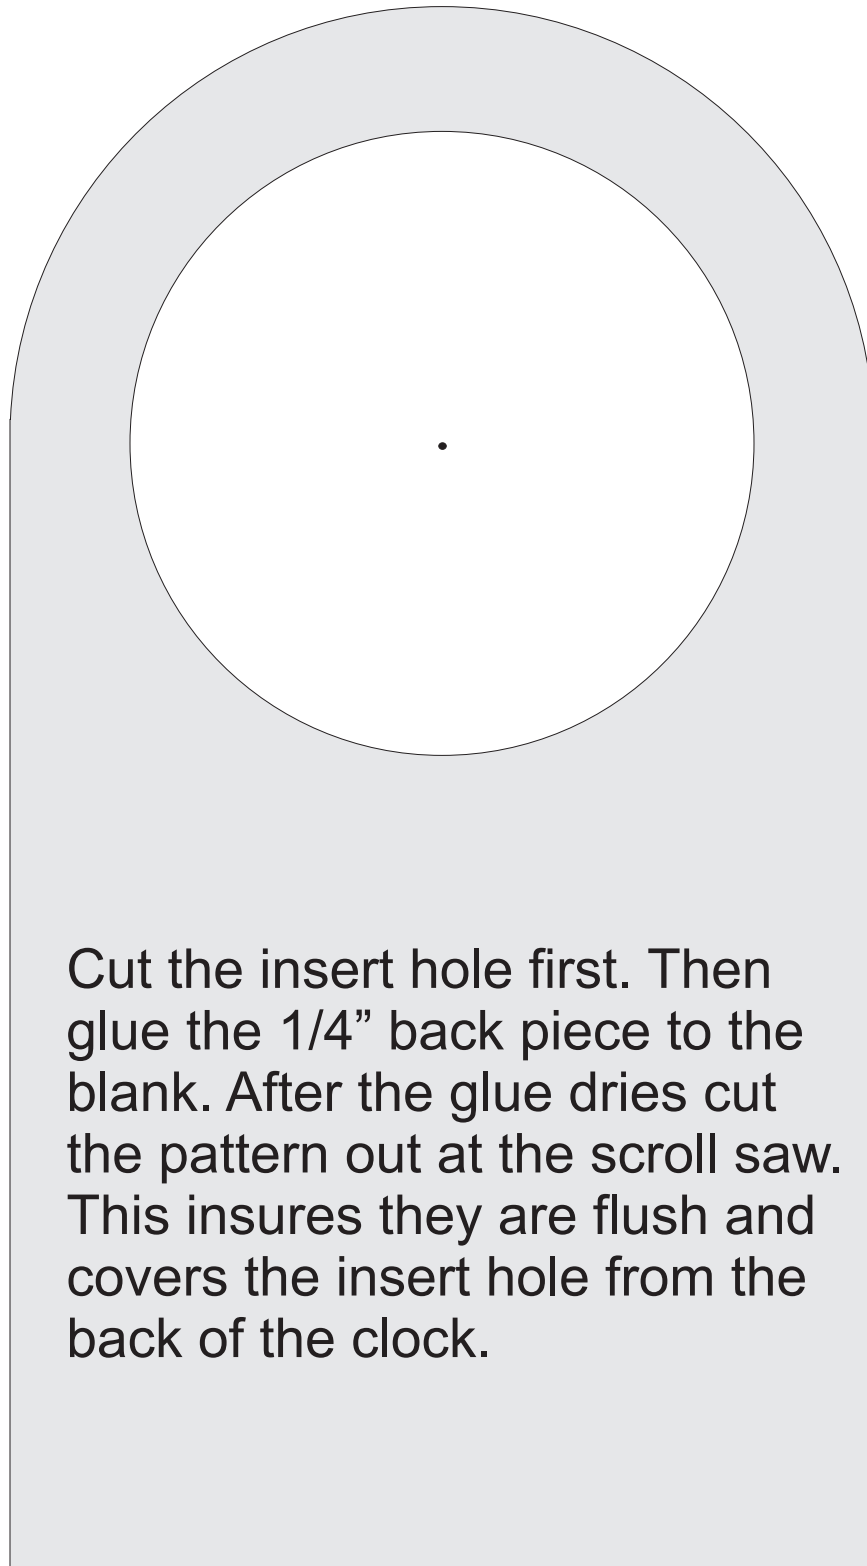

Cut the insert hole first. Then glue the 1/4" back piece to the blank. After the glue dries cut the pattern out at the scroll saw. This insures they are flush and covers the insert hole from the back of the clock.



Front trim 1/4" thick

Welcome

to our

Words 1/4" thick

Home

Base $\frac{1}{2}$ "thick

6 $\frac{1}{2}$ " x 2 $\frac{1}{2}$ "