



Digital Patterns


Designed by
Steve Good

www.scrollsawworkshop.blogspot.com

Home of Scroll Saw Pattern Printer





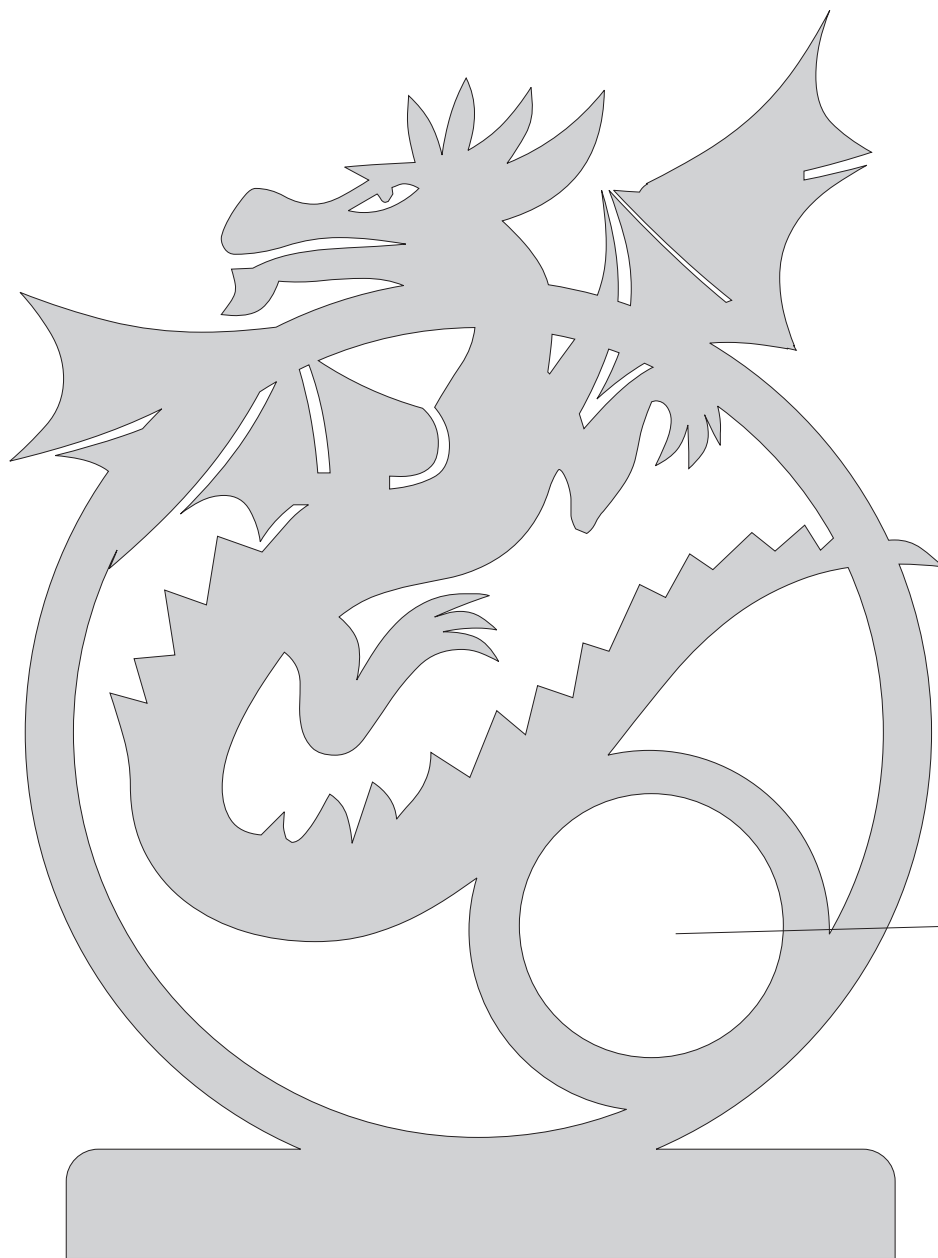

Cut clock opening with a 1 3/8 forstner bit.

Requires 1 7/16 clock insert

