



Proud SAW Member

Digital Patterns

Designed by
Steve Good


www.scrollsawworkshop.blogspot.com

Home of Scroll Saw Pattern Printer



The Little Emperor



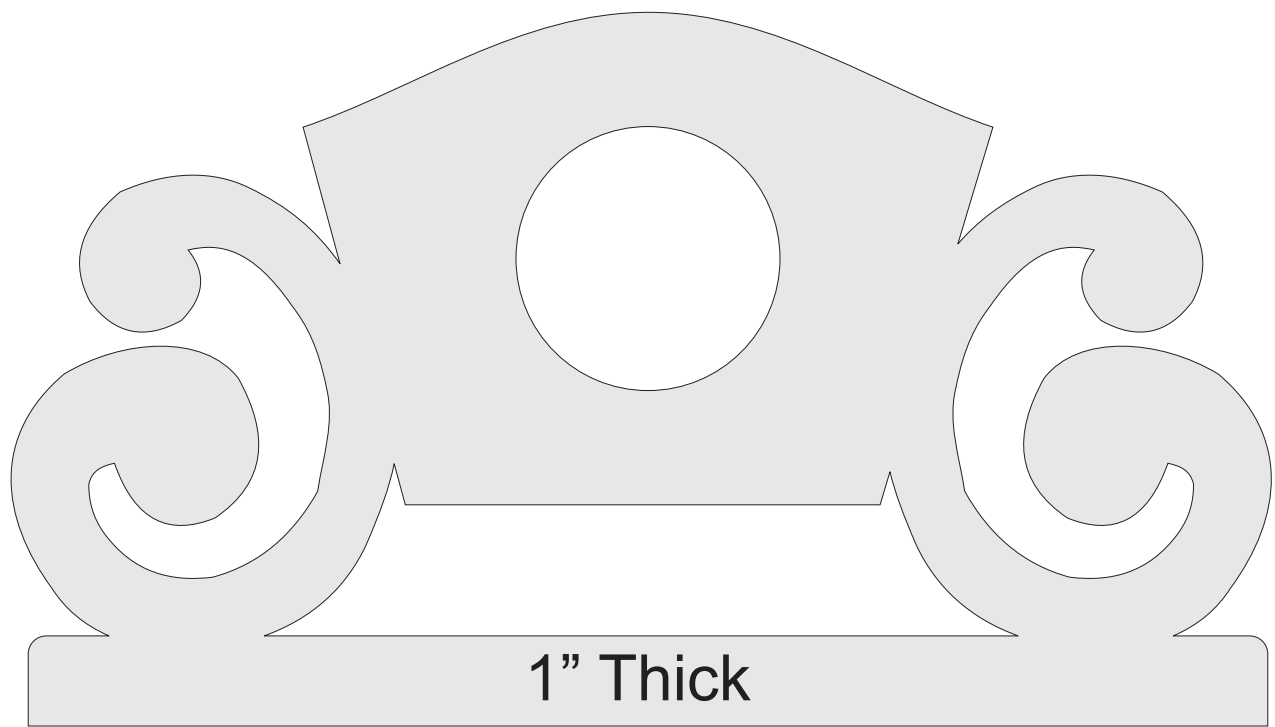

Use a 1 3/8" forstner bit
to fit a 1 7/16" mini clock insert

