




Digital Patterns

Designed by Steve Good

www.scrollsawworkshop.blogspot.com

Home of Scroll Saw Pattern Printer

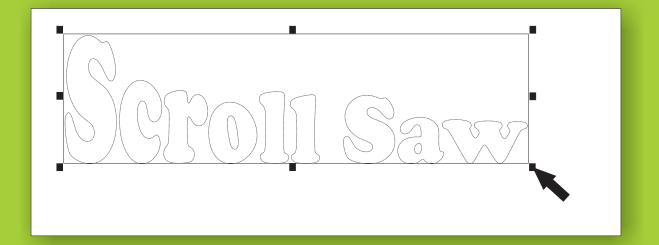





Assembly Photos






These are compound cut patterns of the petals.

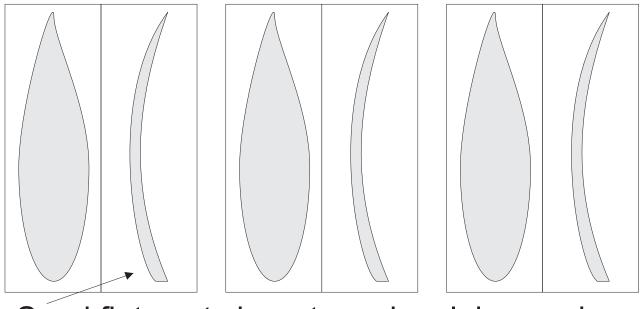


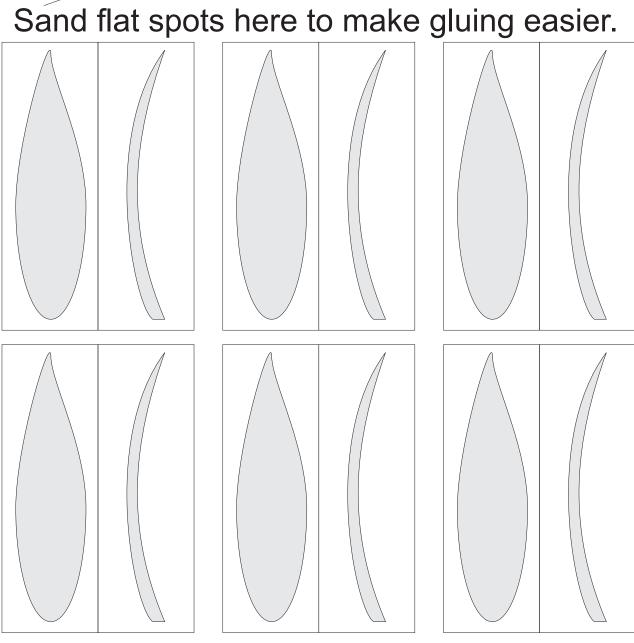


Use 1" x 1" stock to cut the petals and leafs.

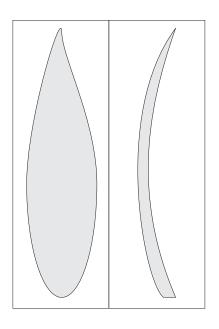

Leaf Pattern

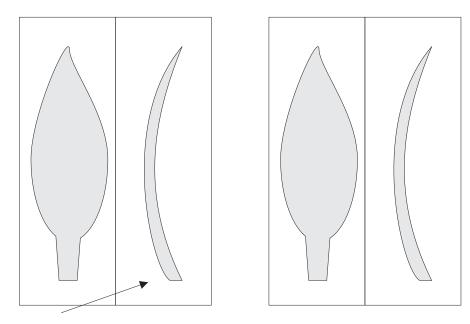

Sand flat spots here to make gluing easier.

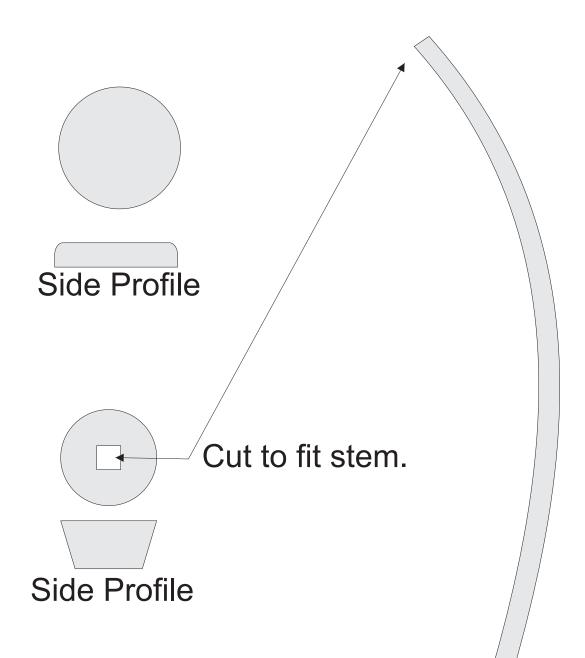

Study the assembly pictures of how I put the flower together.