



Digital Patterns

Designed by
Steve Good

www.scrollsawworkshop.blogspot.com

Home of Scroll Saw Pattern Printer
and the Scroll Saw Key Chain Printer





Note to commercial print employees: I give my permission to print as many of this pattern book as your customer requires.

Fretwork Basket



Stack cut the two side pieces to reduce the time it takes to cut the project. After all the pieces are cut glue the centerpieces together and let them dry. Sand the center assembly smooth before you glue on the sides. It makes sanding much easier. Glue on the sides and sand them flush to the center assembly.

1/4 inch thick
Stack cut both at the same time
to speed up the project.

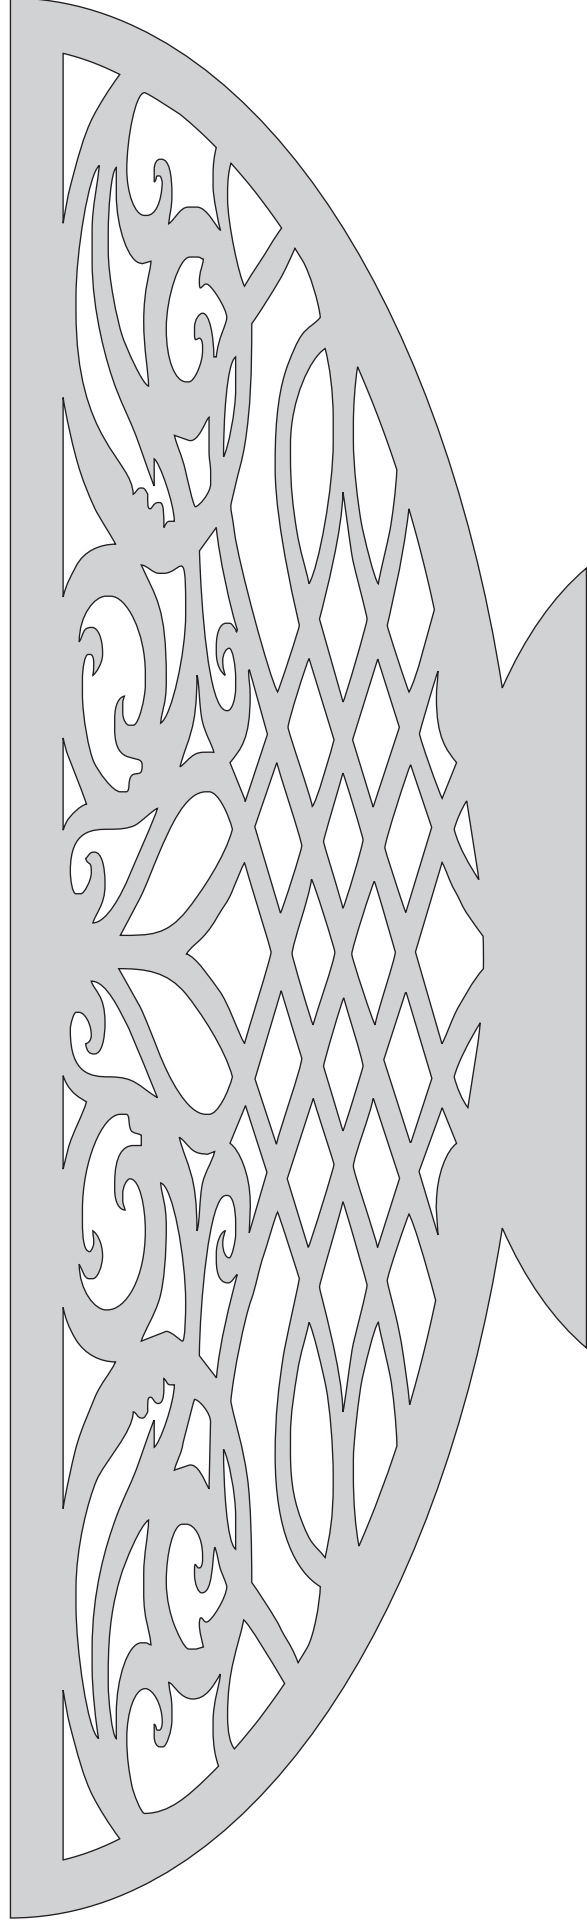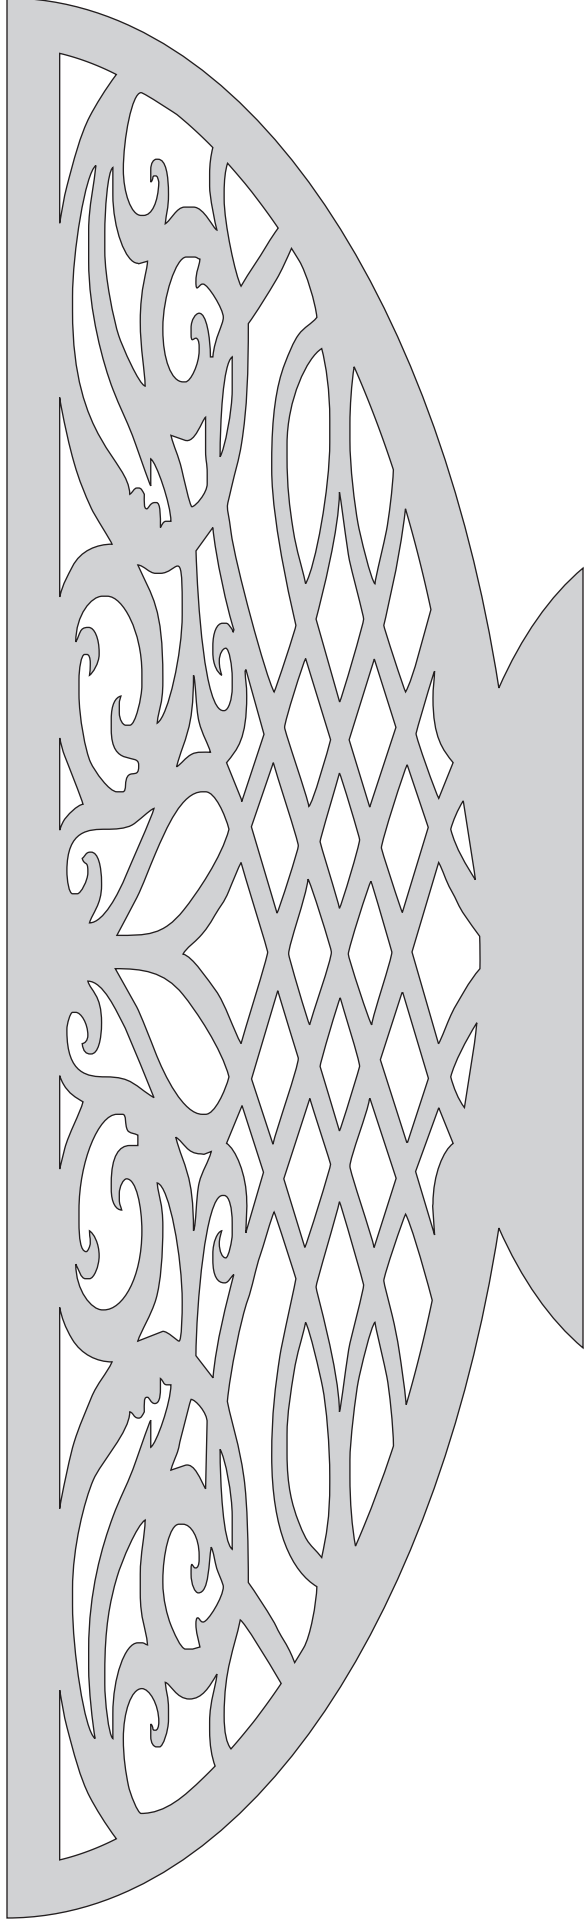

Center Pieces

I used 1 inch thick wood and cut three center pieces. If you use 3/4 inch thick wood cut four center pieces.



