



Digital Patterns

Designed by
Steve Good

www.scrollsawworkshop.blogspot.com

Home of Scroll Saw Pattern Printer
and the Scroll Saw Key Chain Printer




Note to commercial print employees: I give my permission to print as many of this pattern book as your customer requires.




All clocks require a
1 7/16" mini clock insert.

Use a 1 3/8" forstner bit
to drill the hole for the clock.





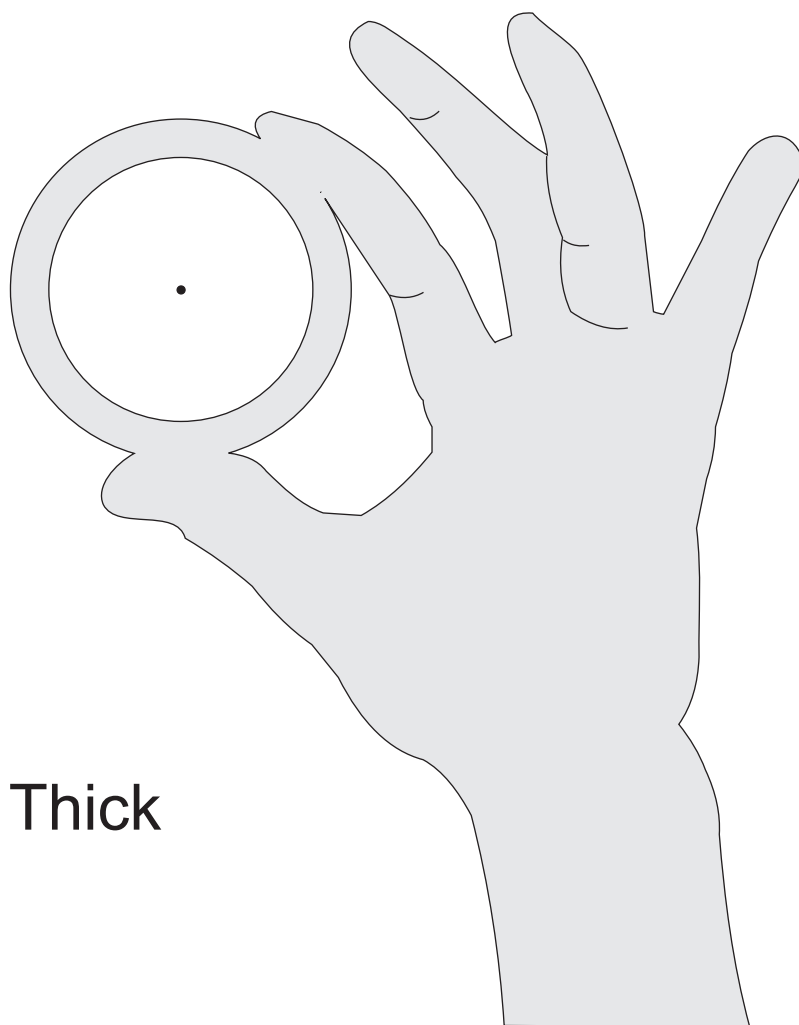


$\frac{1}{2}$ " Thick

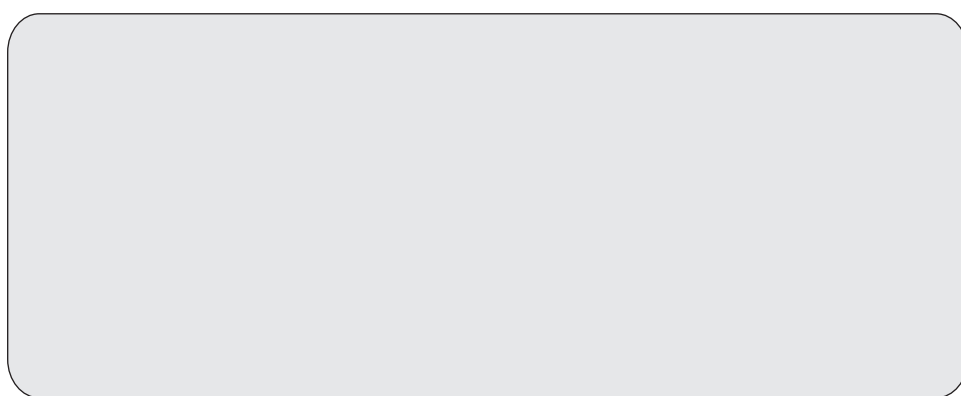



1/2" Thick

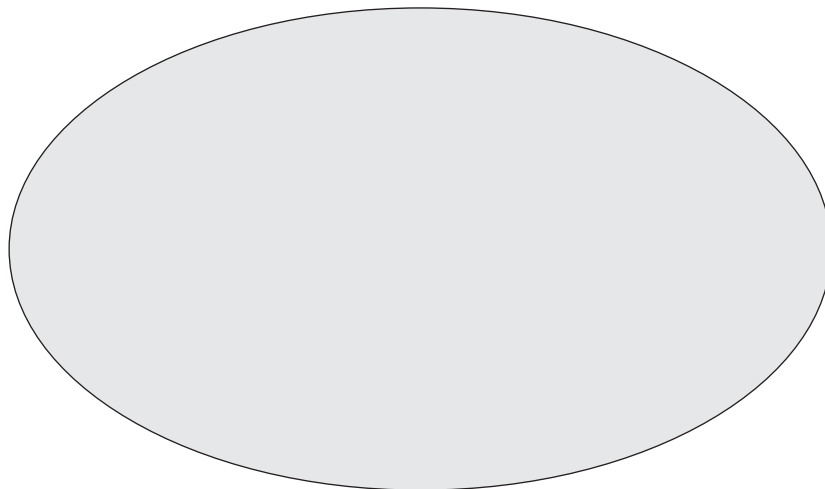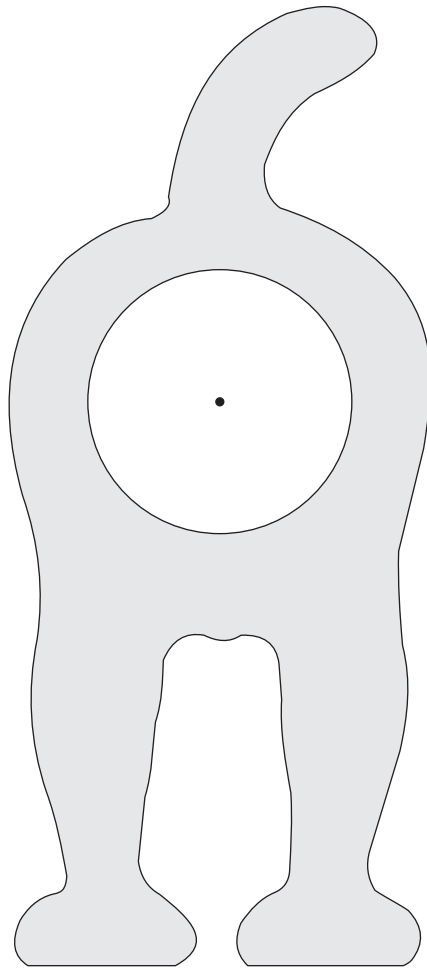



1/2" Thick

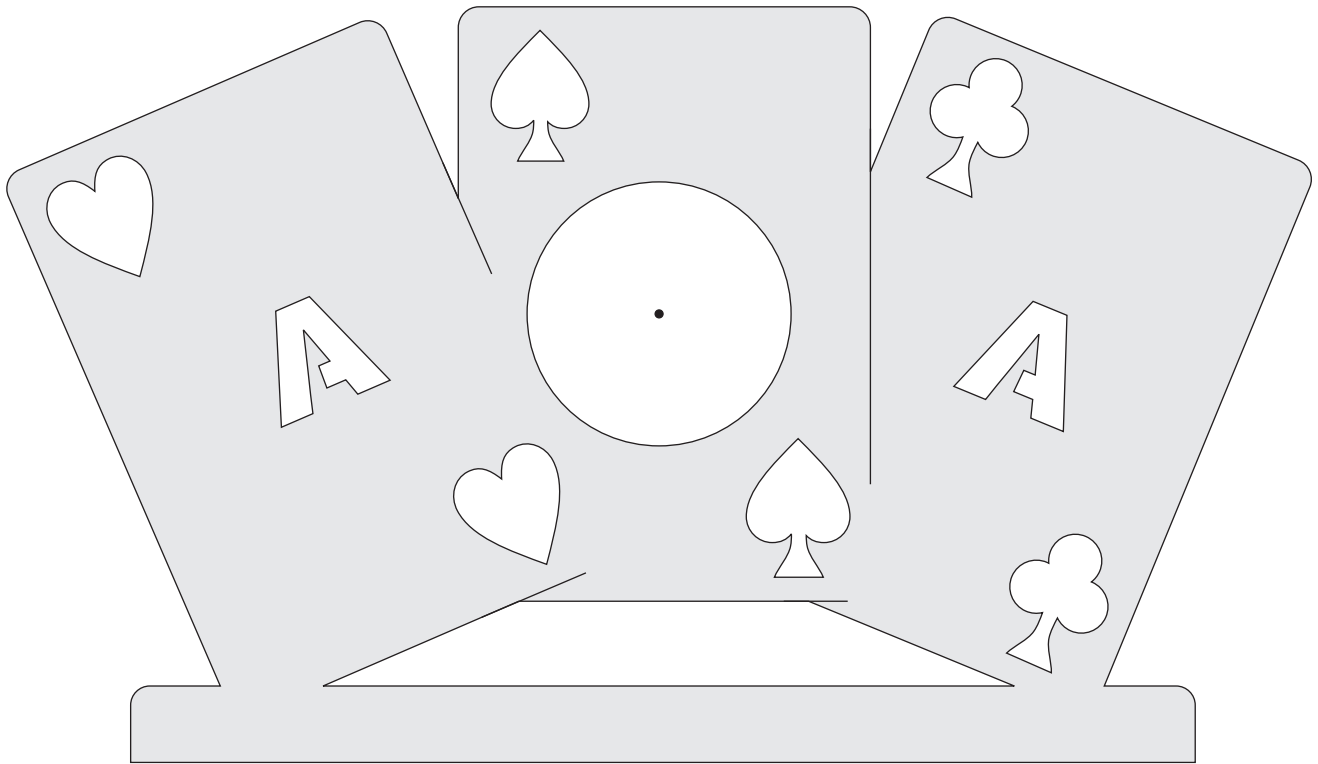



1/2" Thick

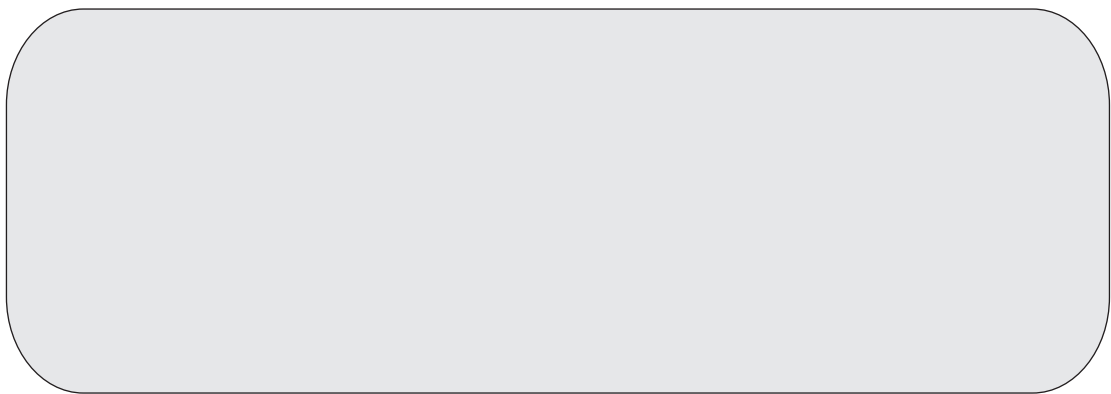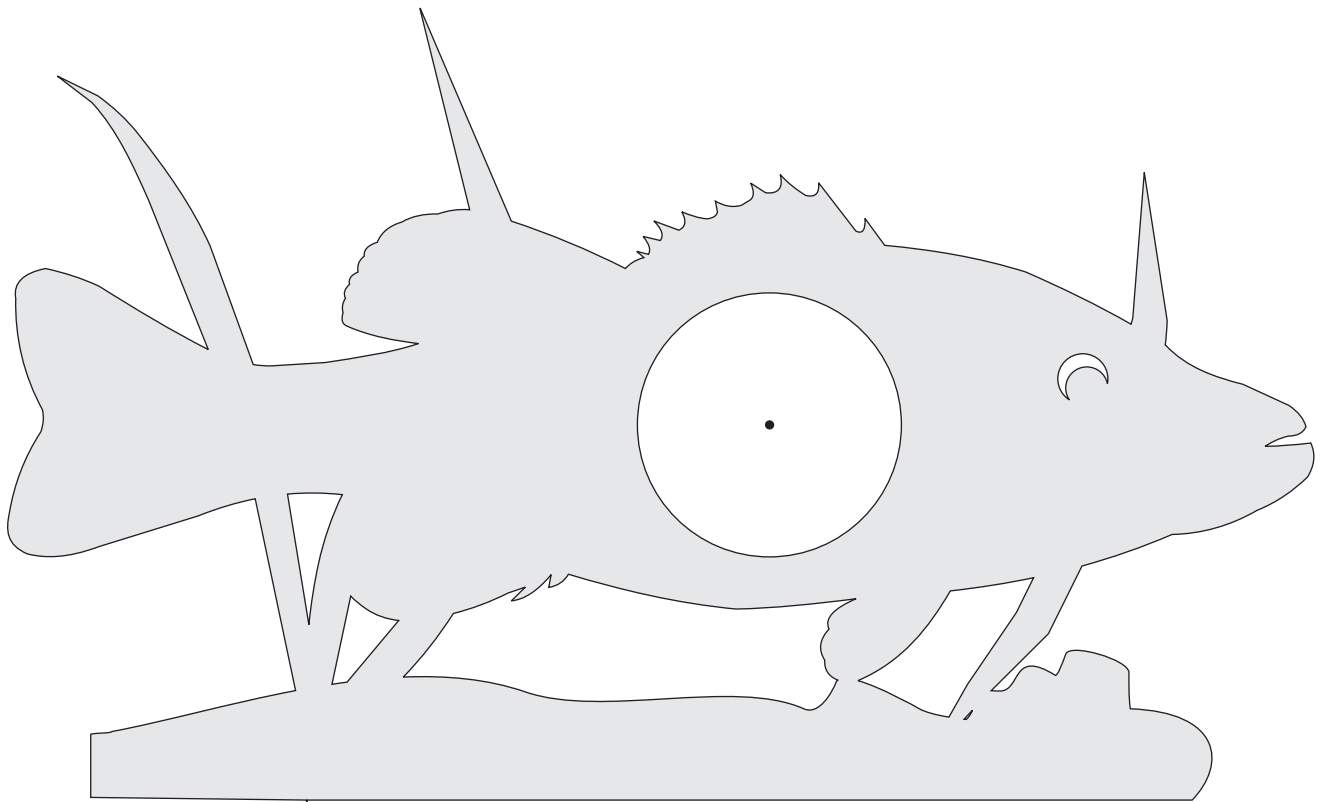


1/2" Thick

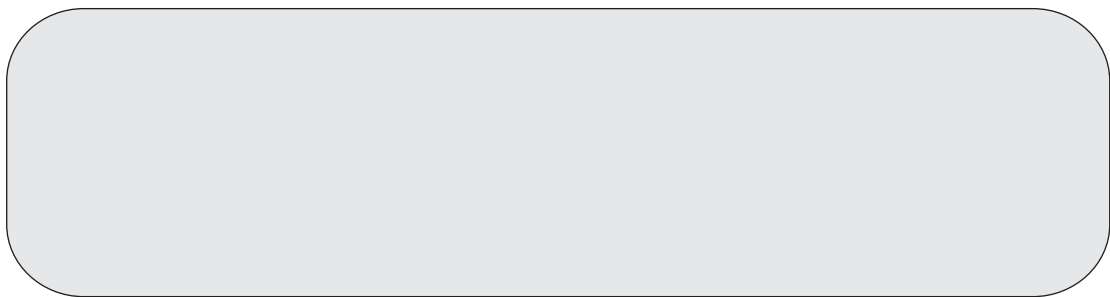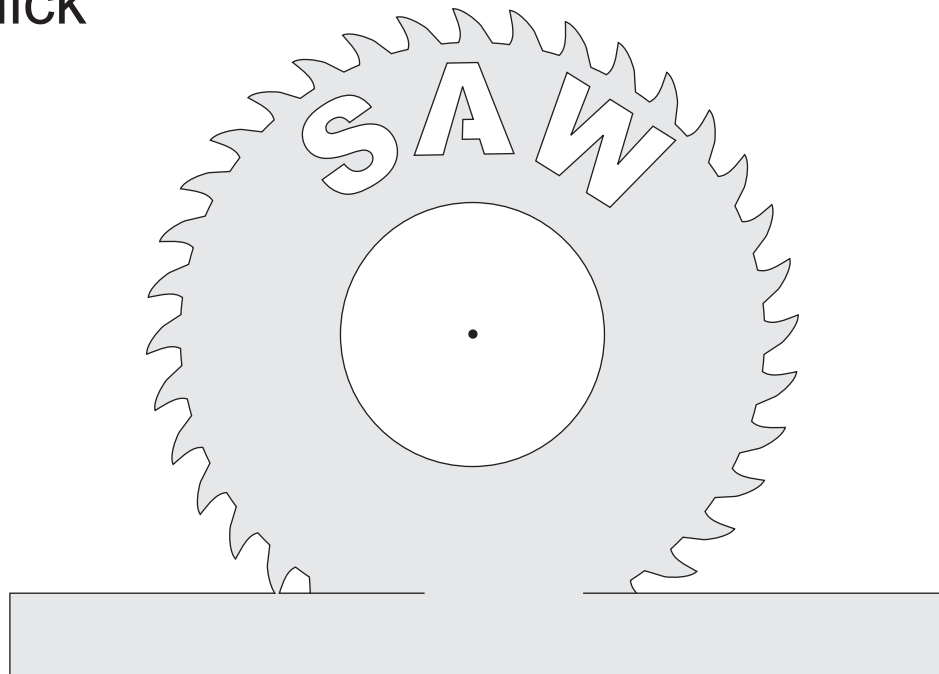


1/2" Thick

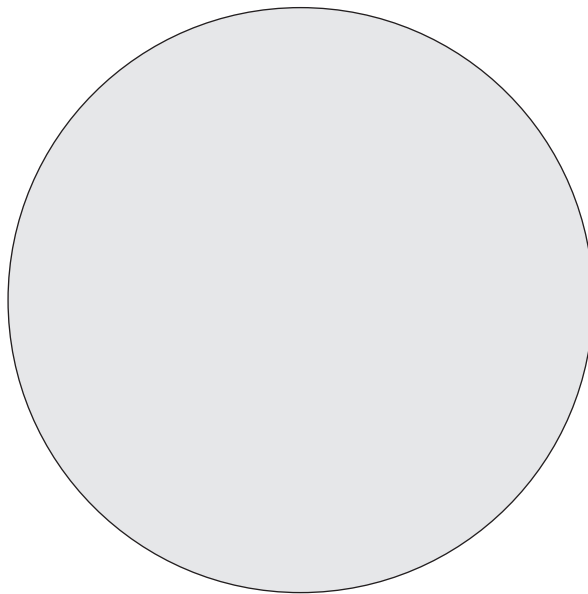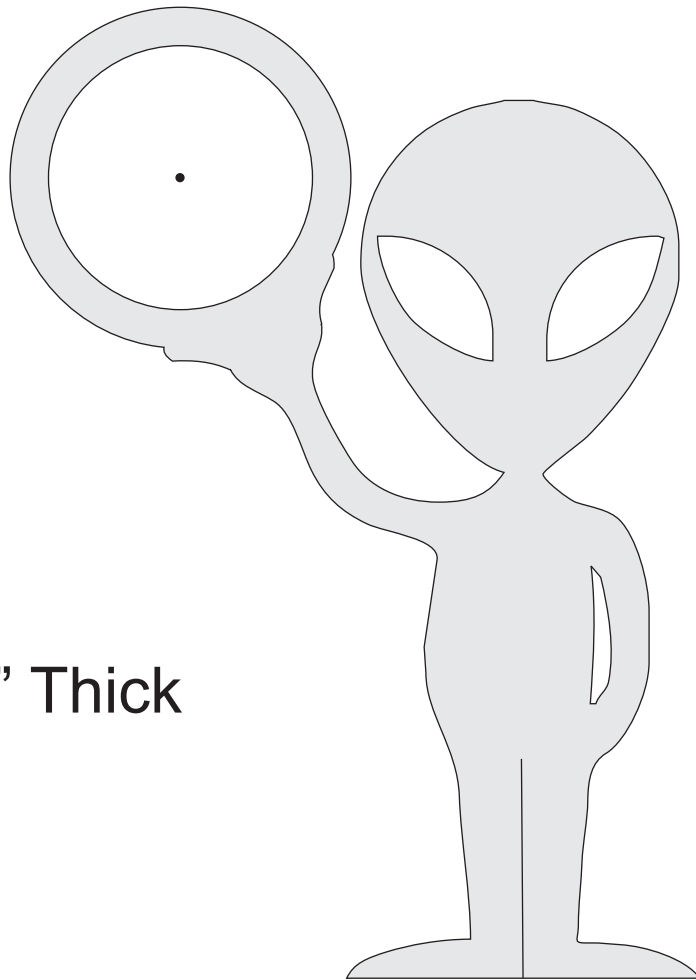

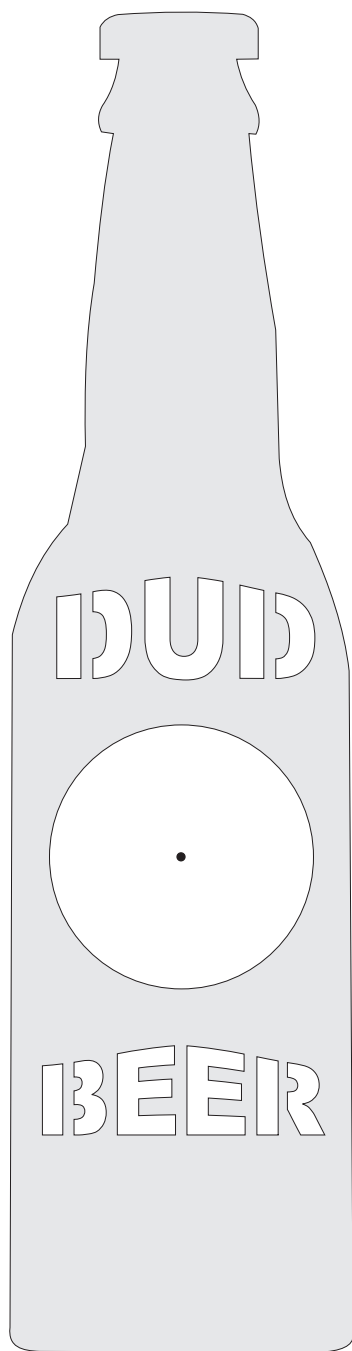

1/2" Thick

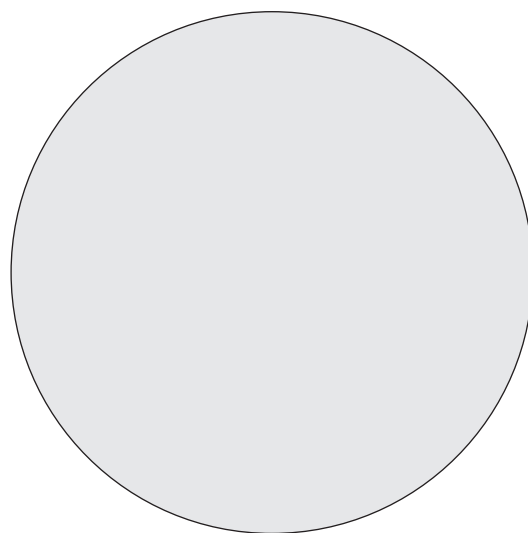

1/2" Thick

