




Digital Patterns

Designed by Steve Good

www.scrollsawworkshop.blogspot.com

Home of Scroll Saw Pattern Printer

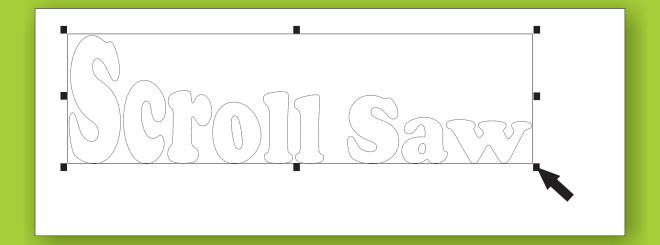

Grandbaby Clock






I purchased my Clock insert and pendulum from www.cherrytreetoys.com

Requires a 1 7/16" mini clock insert. Also required is a mini pendulum insert.

Use a 1 3/8" forstner bit to drill the hole for the inserts.

Base 1/4" thick

Front Door 1/8" Thick

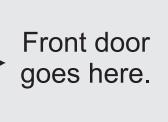

1" Thick

If you don't want to buy the pendulum then you can use this pattern.

