



Proud SAW Member

Digital Patterns

Designed by
Steve Good

www.scrollsawworkshop.blogspot.com

Home of Scroll Saw Pattern Printer




Guitar with Case




If you look at the picture on the previous page. You will see that I sanded the bottom of the neck to be more realistic. This is optional but worth the effort.

1 3/8" Hole for a
1 7/16" mini clock insert.

3/4" Thick

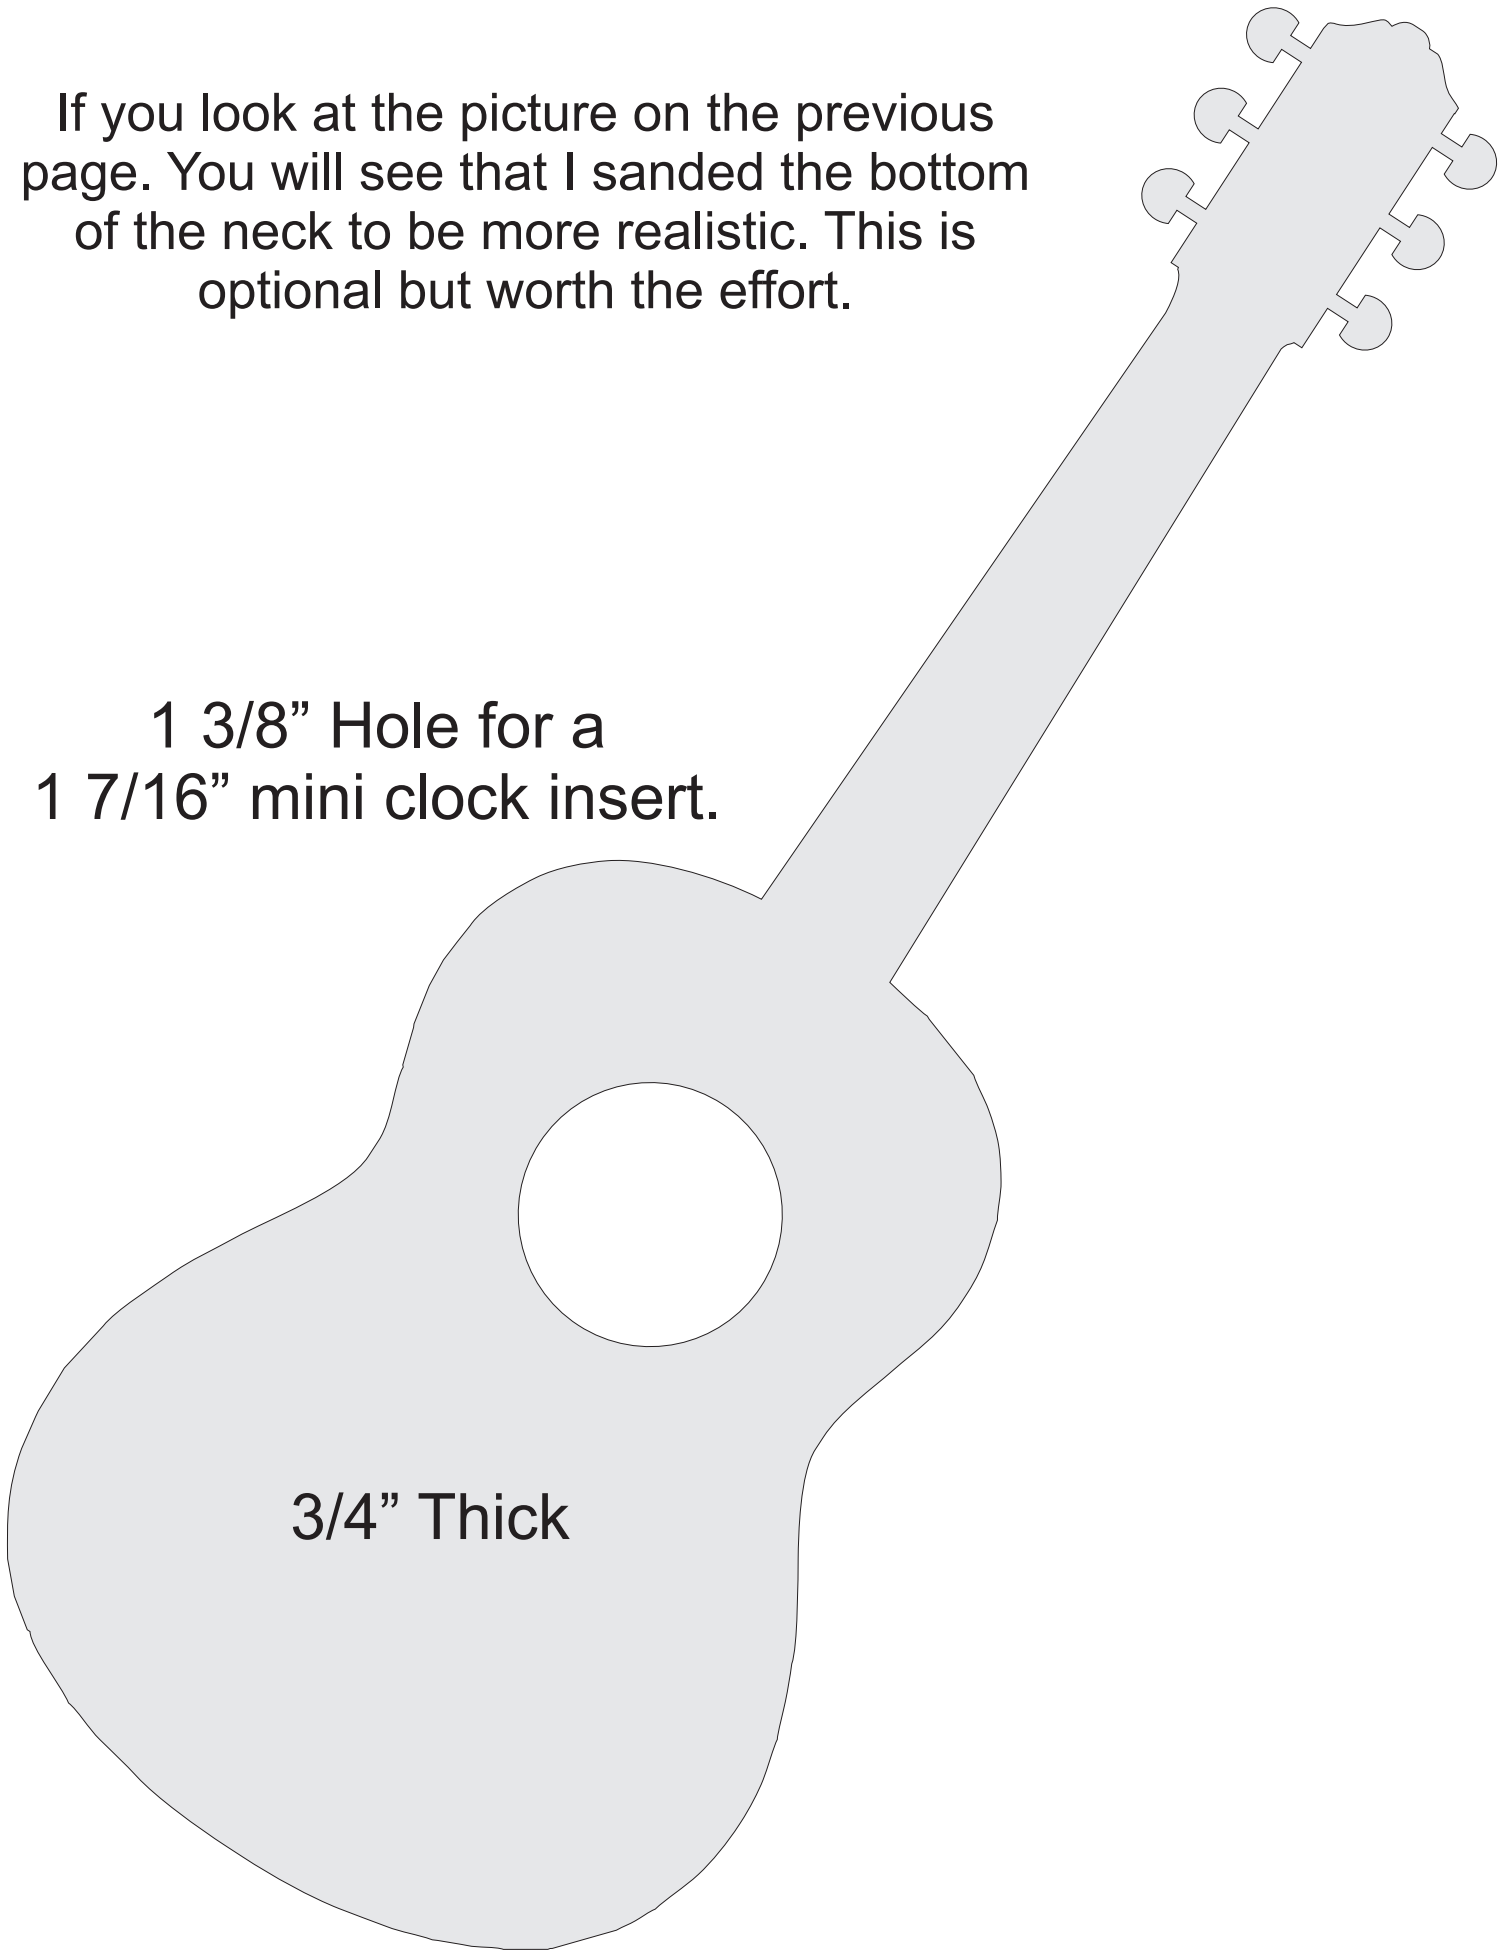


I showed the fret locations if you want to try them but I did not have good luck making them look good.

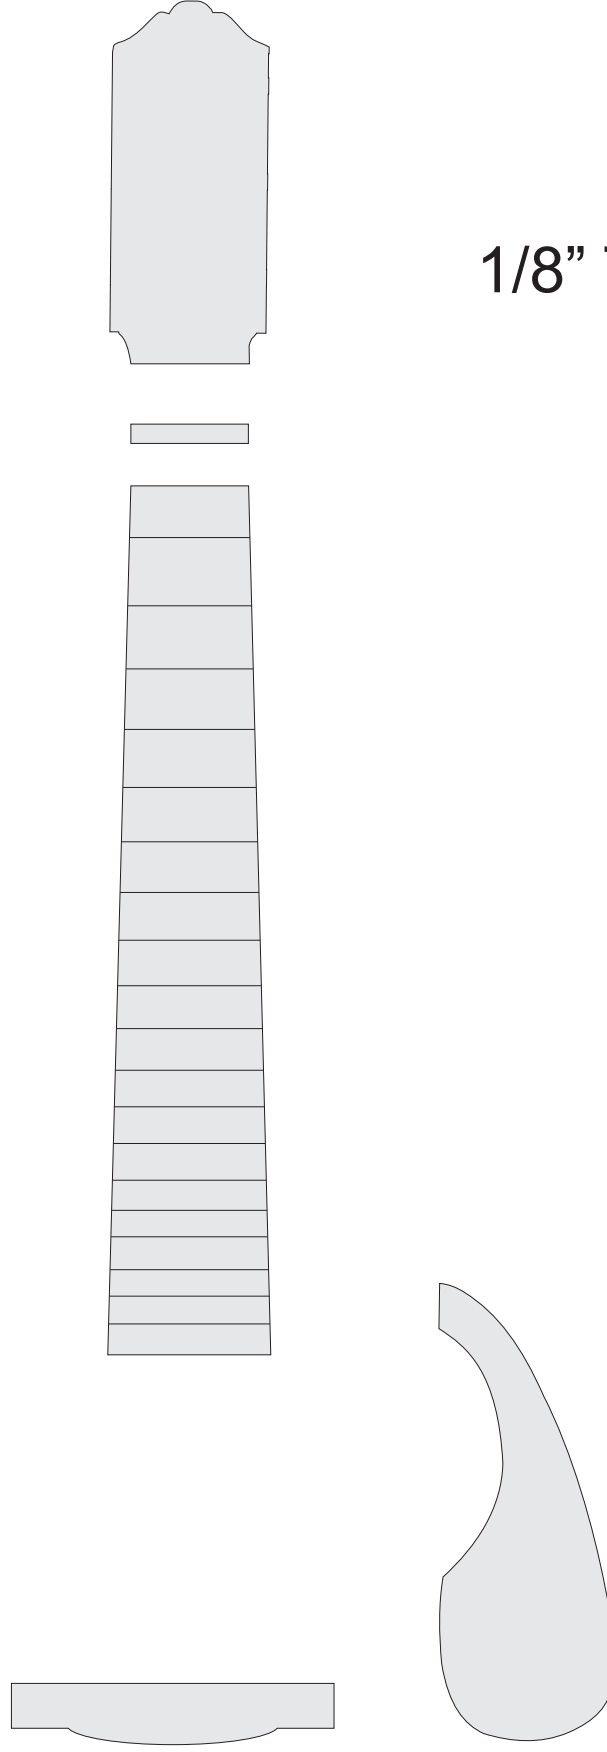

3/16" to 1/4" Thick


Case top

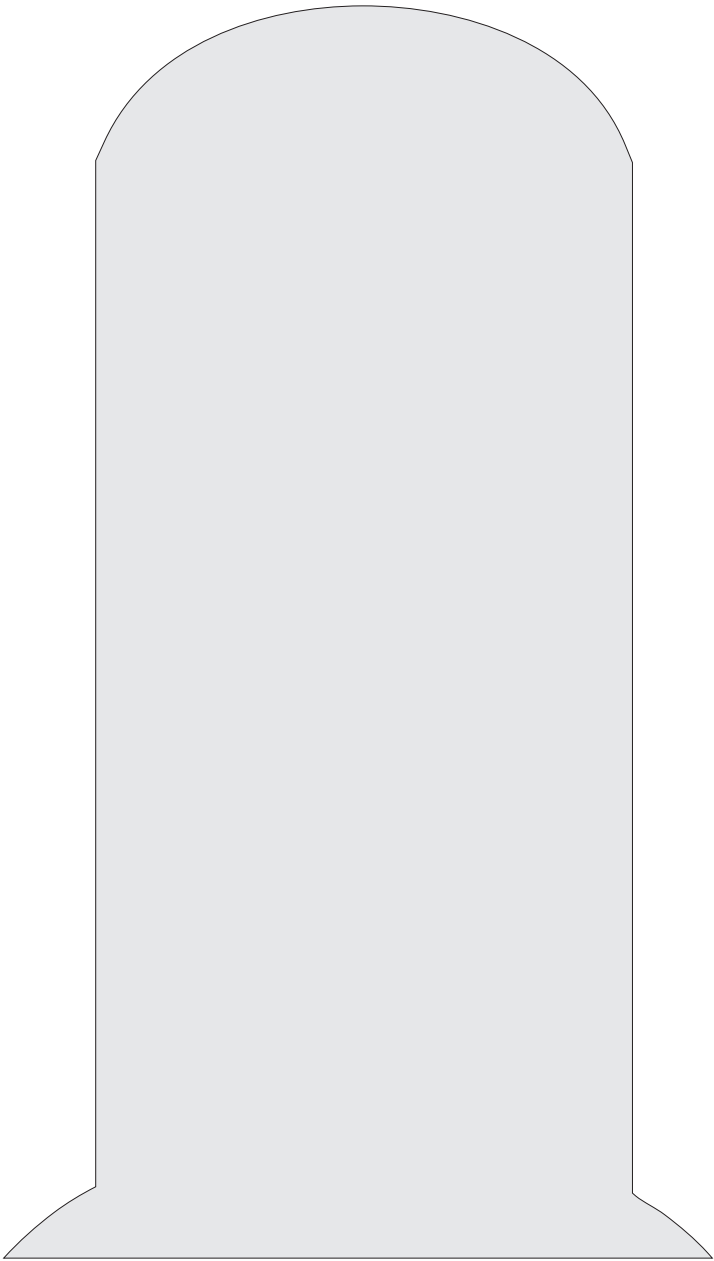


3/16" to 1/4" Thick




3/16" to 1/4" Thick

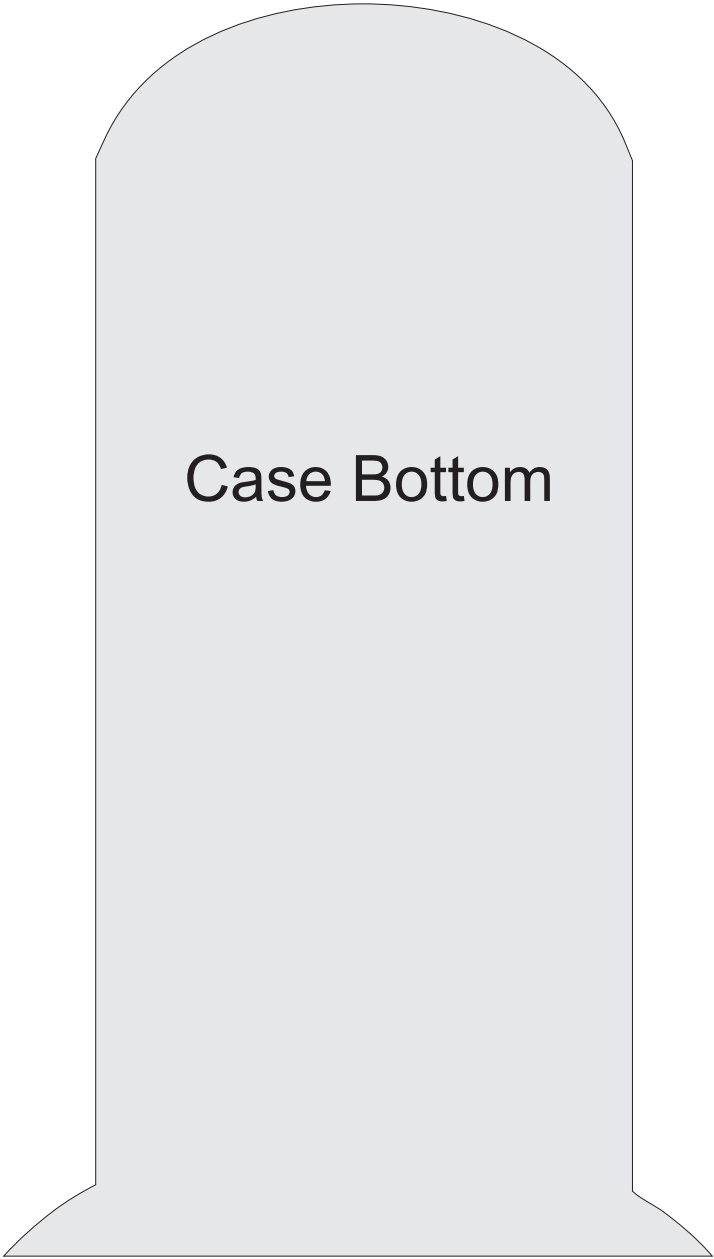


3/16" to 1/4" Thick

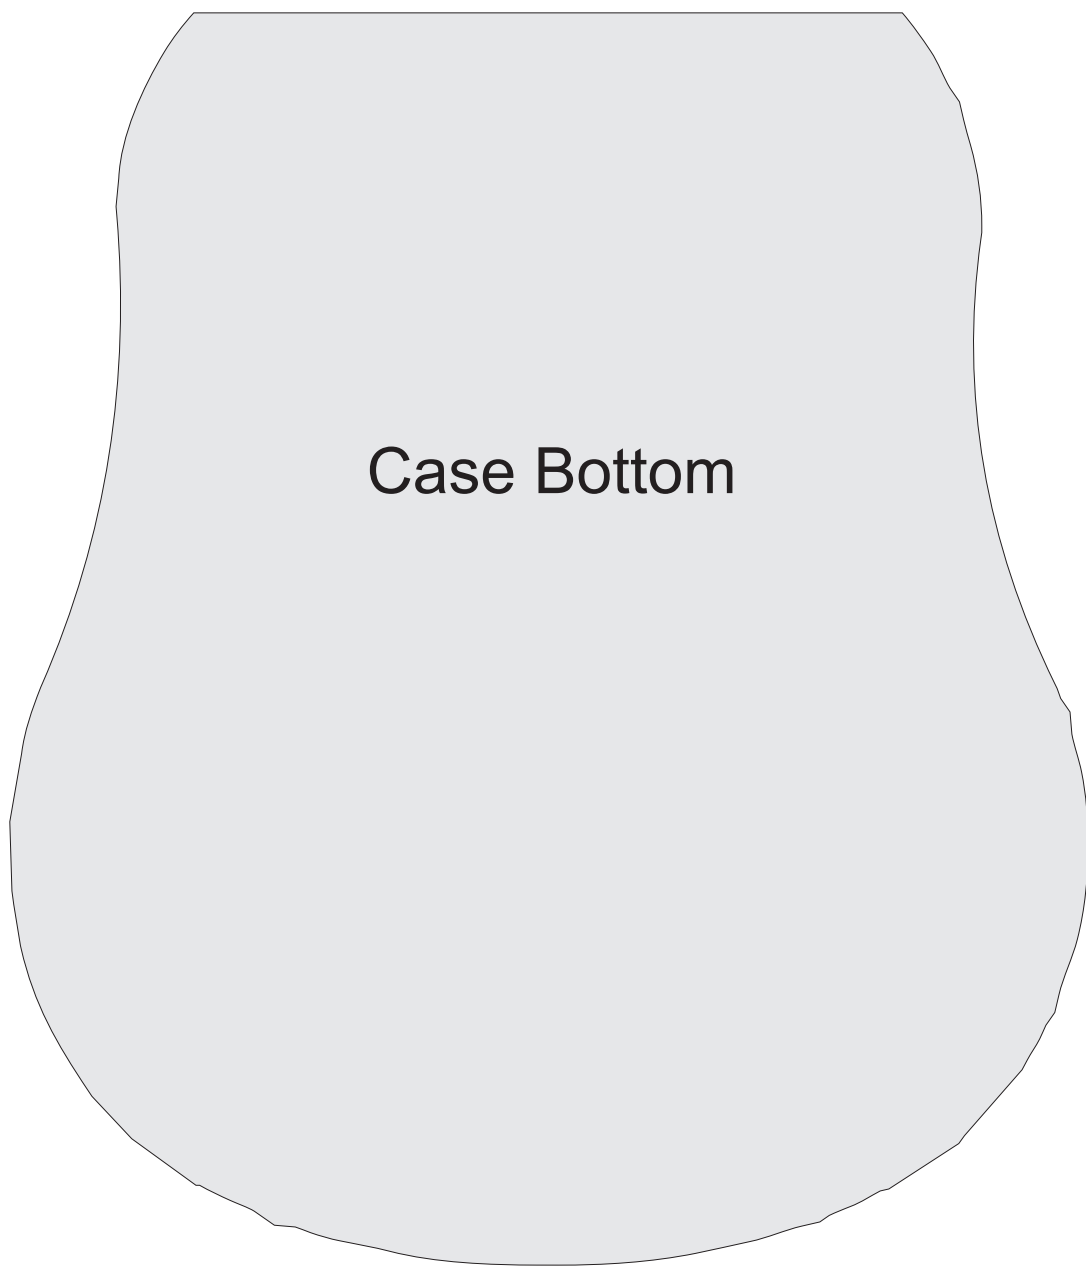


Case Outside Walls
Needs to be thicker than the total
thickness of the guitar.

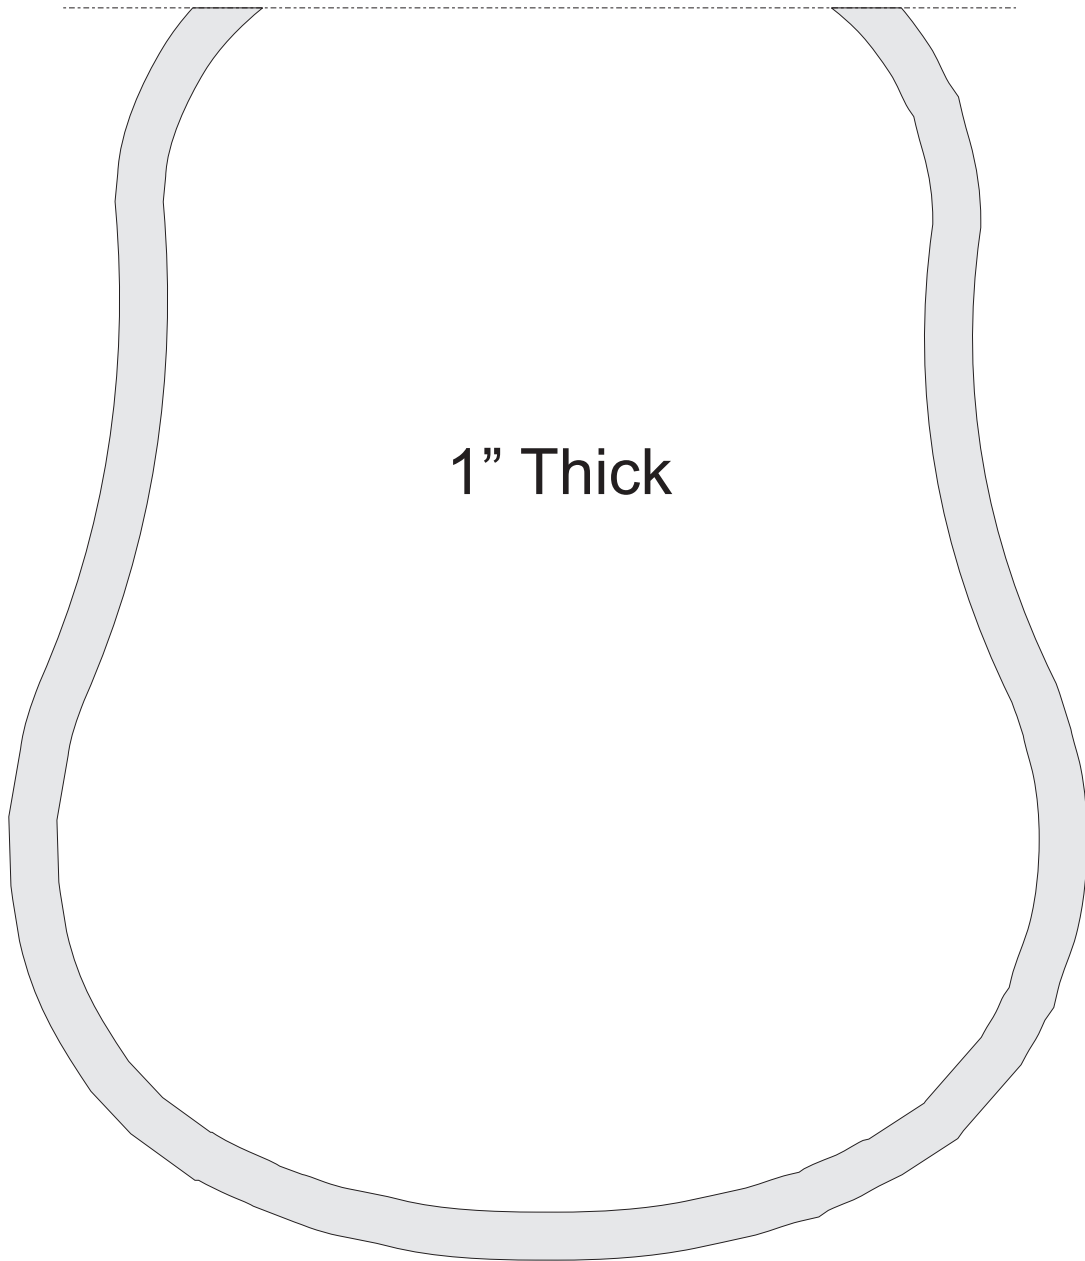

Case Outside Walls

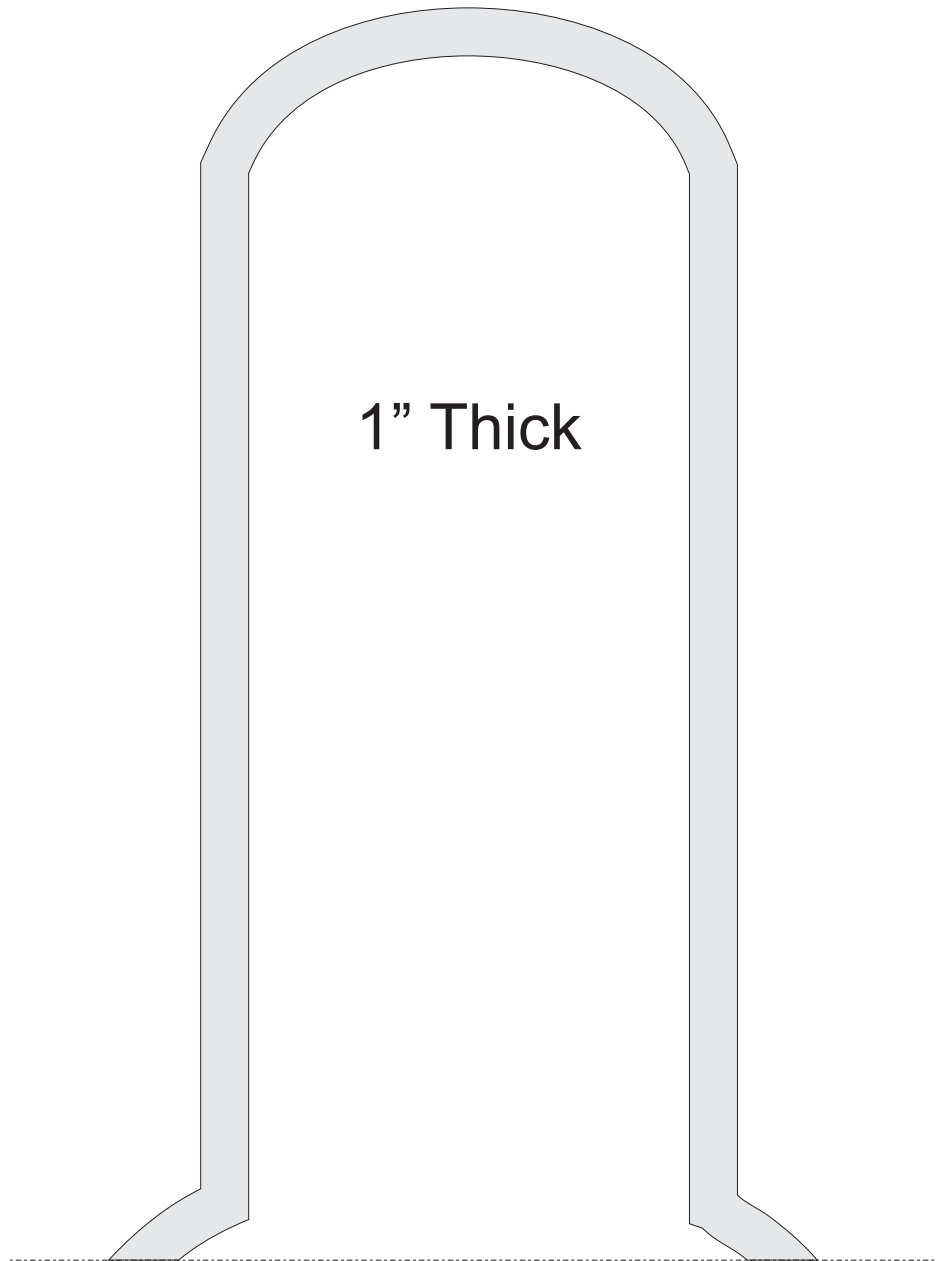

Case Inside Walls

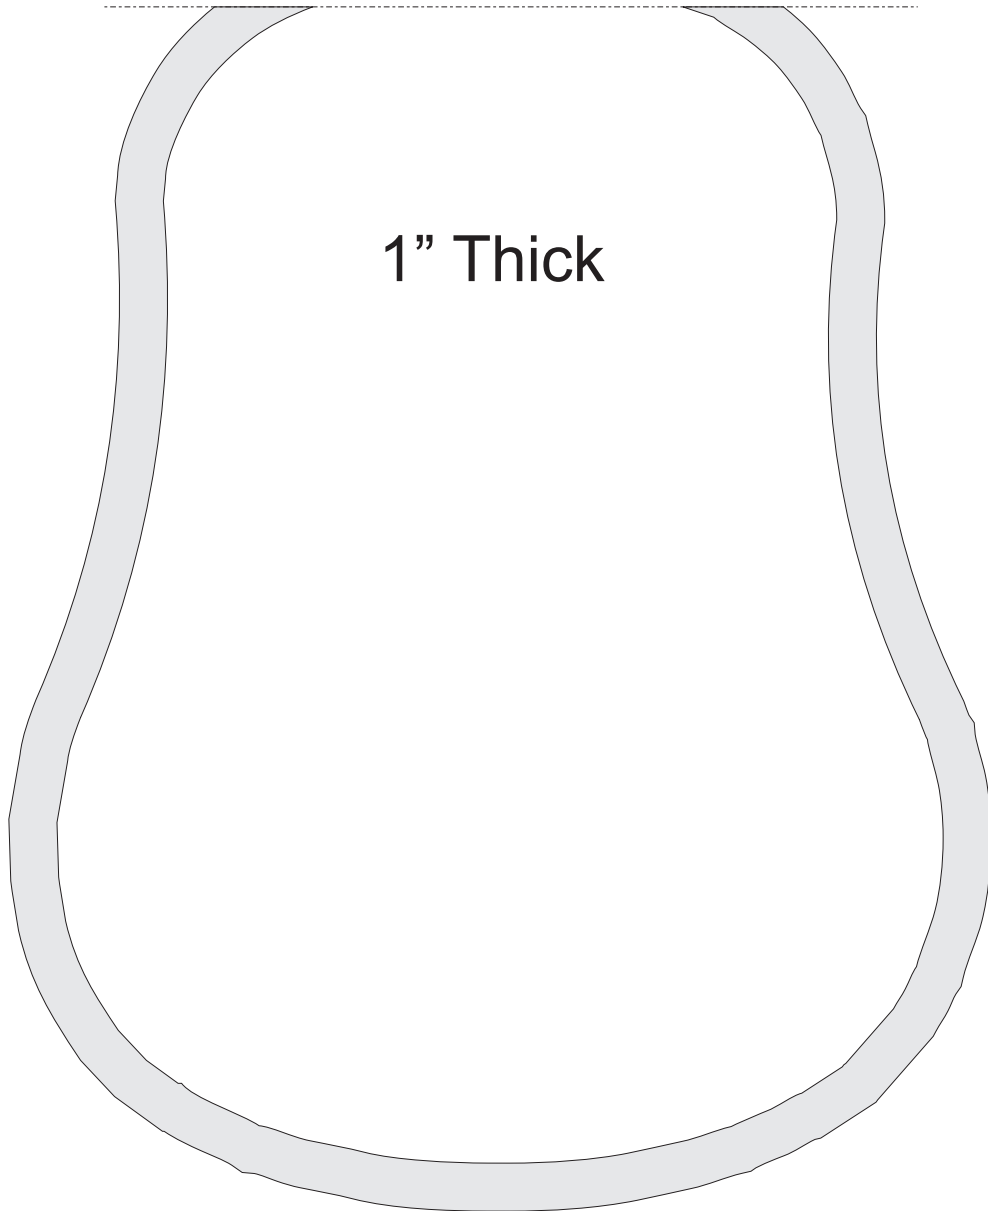

Case Inside Walls

