


Digital Patterns

Designed by
Steve Good

www.scrollsawworkshop.blogspot.com

Home of Scroll Saw Pattern Printer

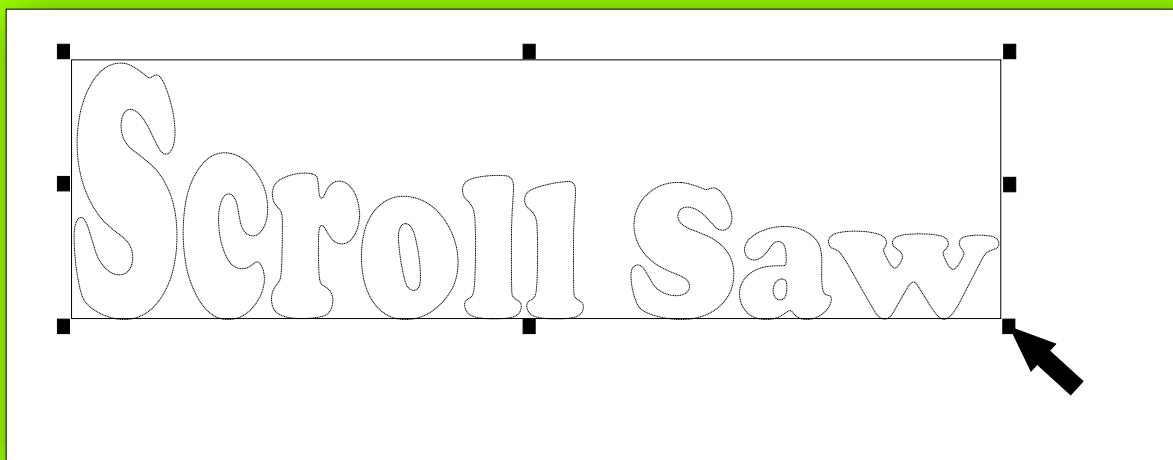


These hand mirrors make great gifts. I use polymer clay to add the inlay. After you cut the circle push the clay into the cut-out flush. Bake according the clay instructions. After baking sand the clay until you get a nice finish.

Requires 4" round mirror




www.woodcraft.com sells project mirrors.

6.5 deg. bevel
Cut recess

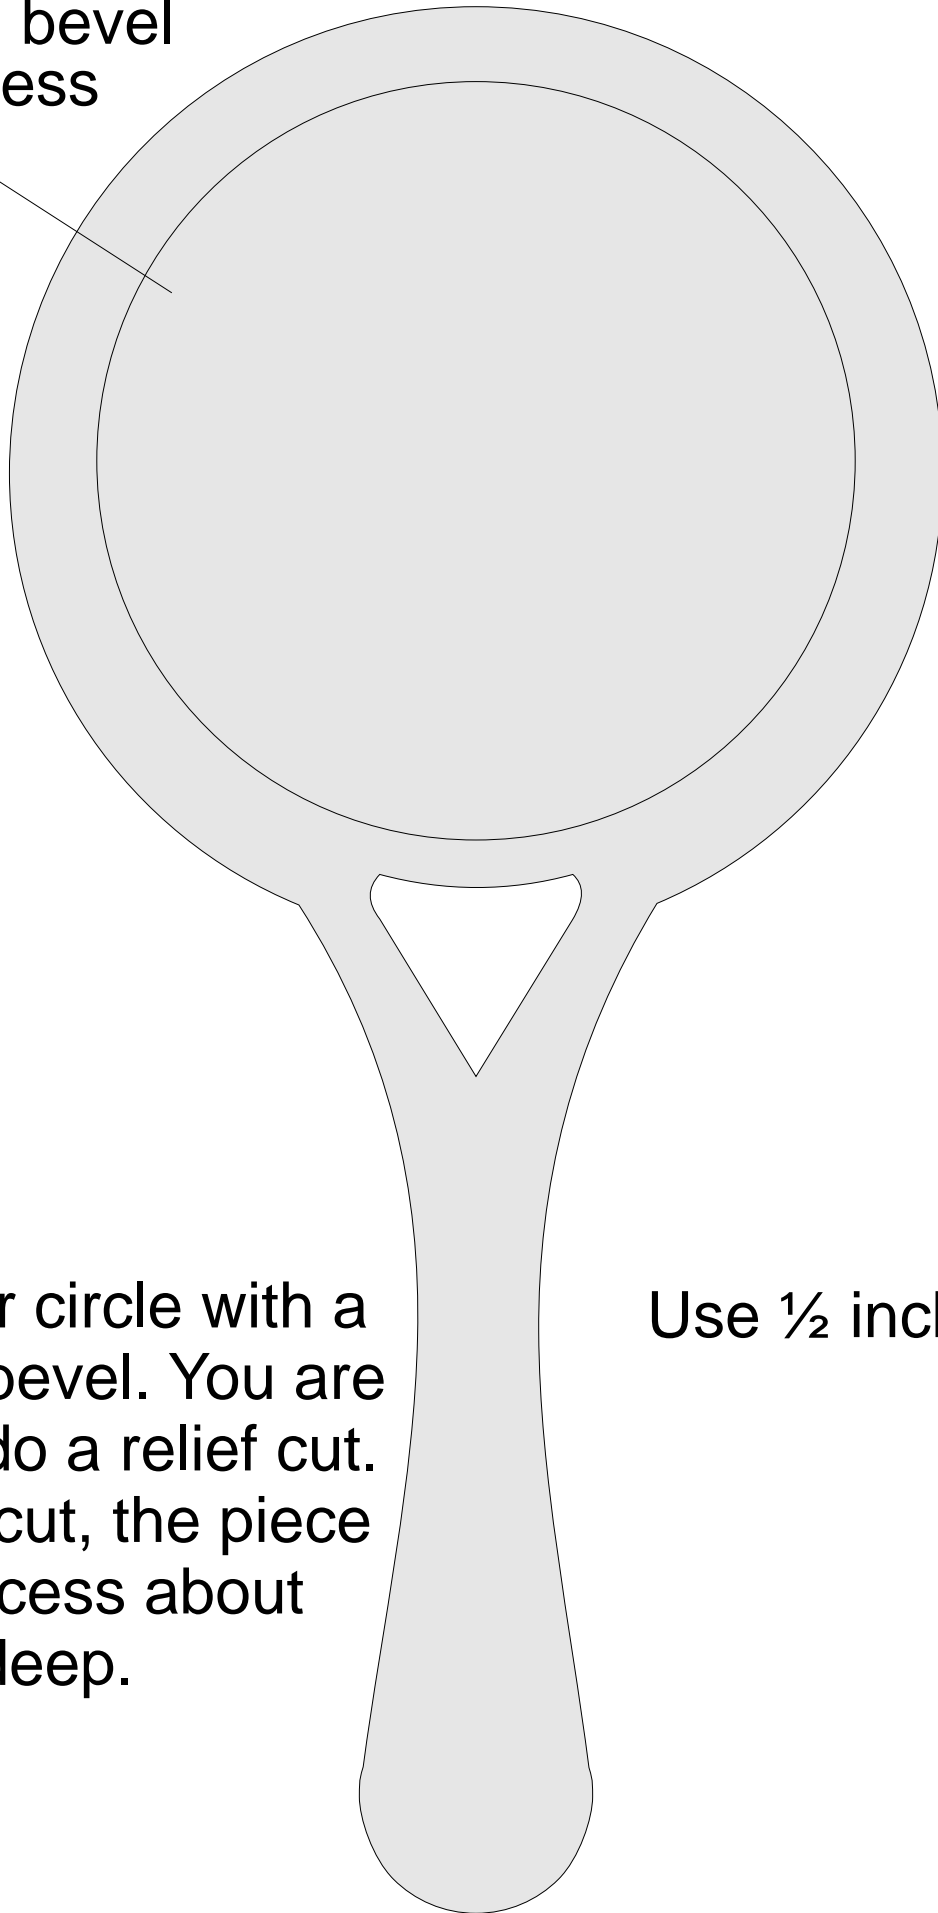


Cut mirror circle with a 6.5 deg. bevel. You are trying to do a relief cut. After the cut, the piece should recess about 1/8 inch deep.

Use 1/2 inch wood

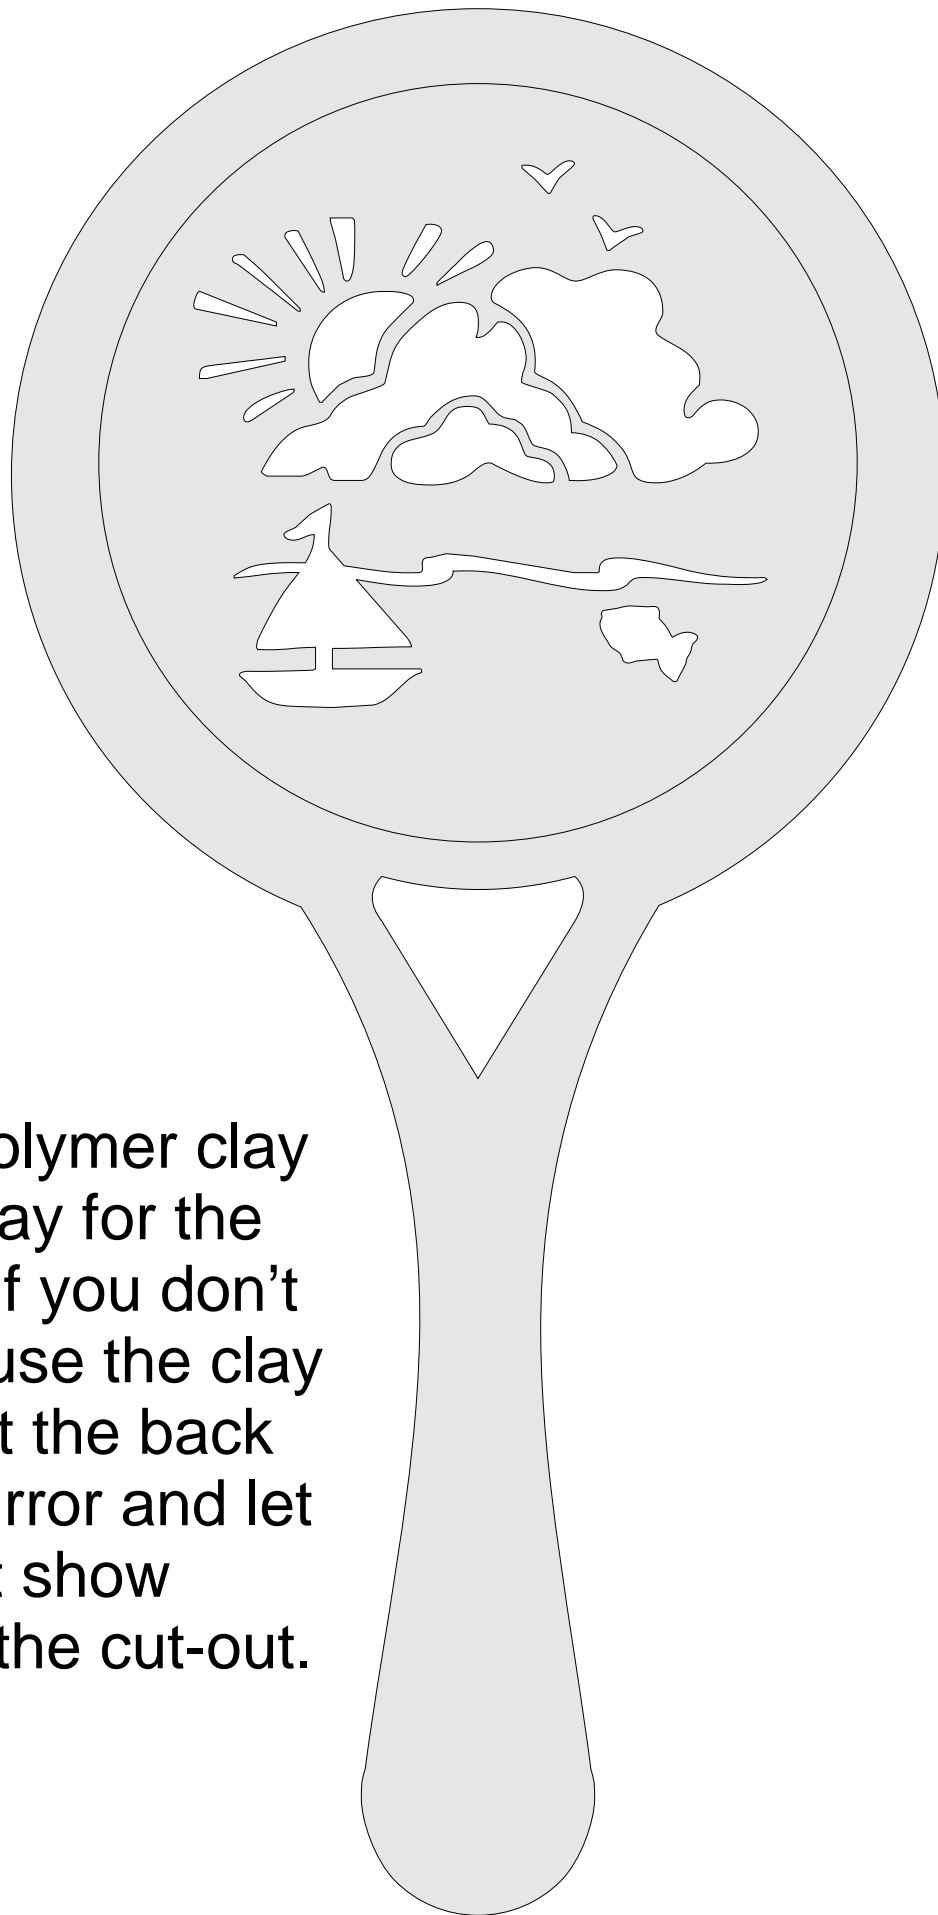

I used polymer clay as an inlay for the cut out. If you don't want to use the clay just paint the back of the mirror and let the paint show through the cut-out.

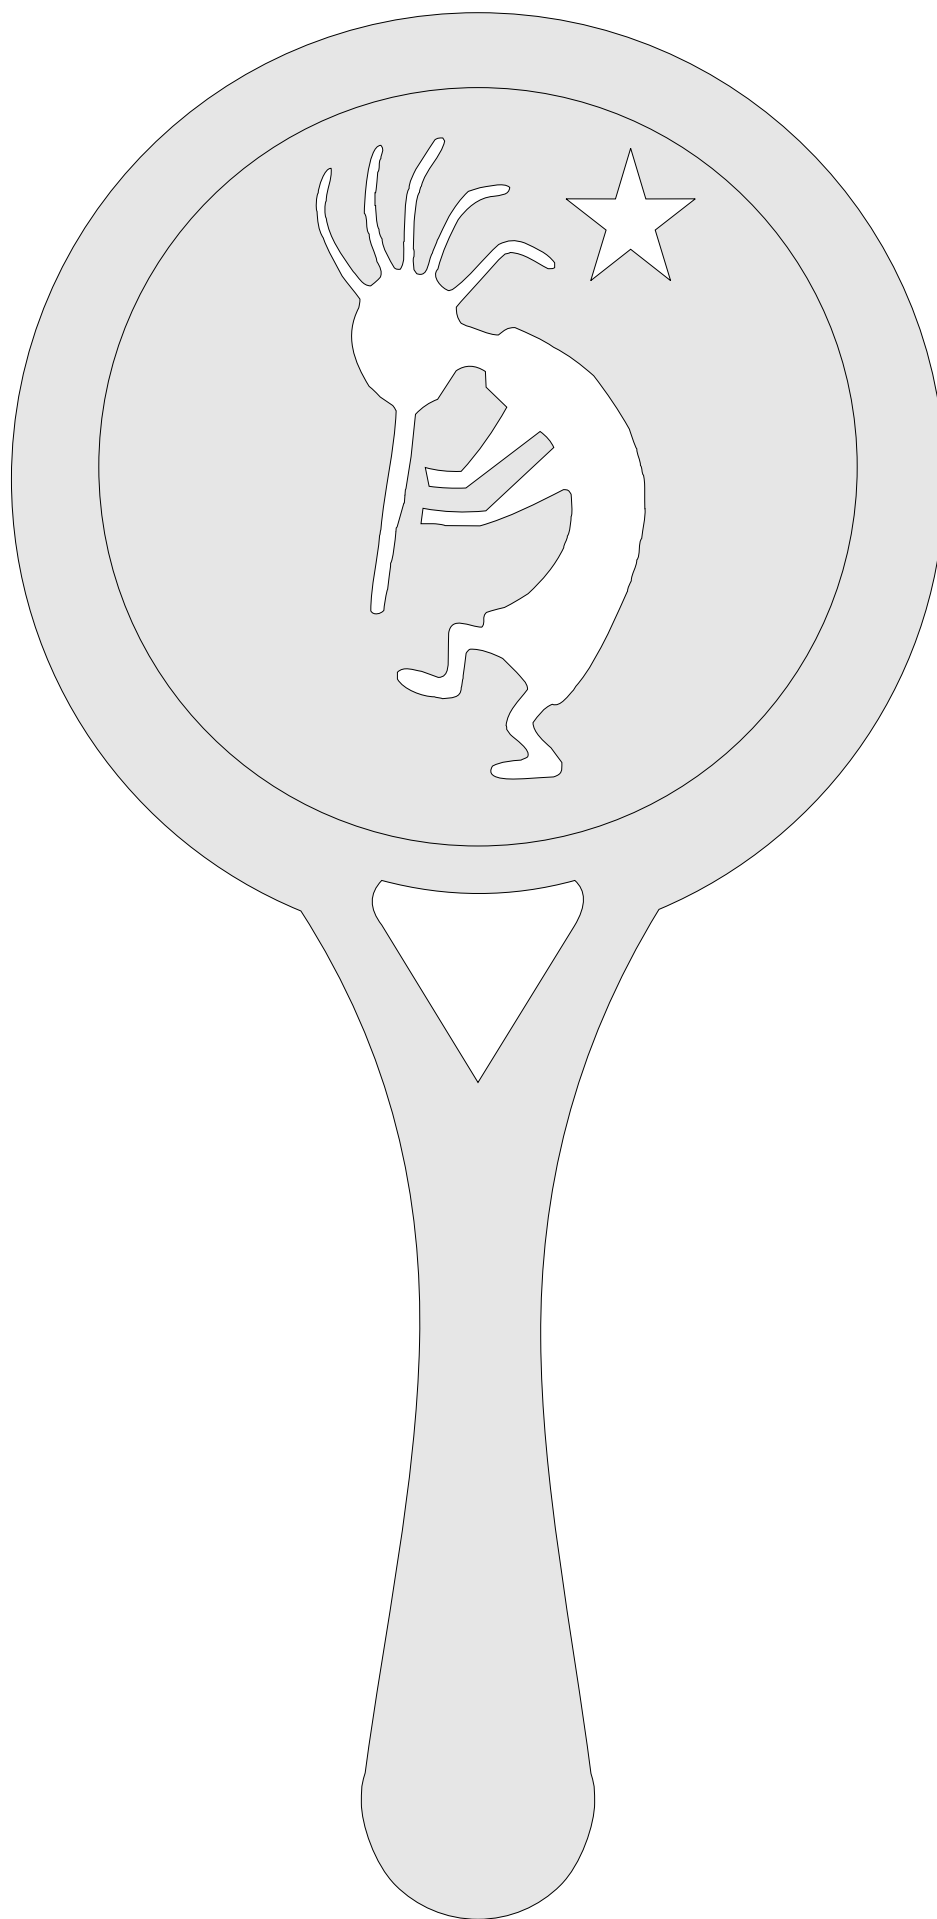

Blank mirror for your own design

