Digital Patterns

Designed by
Steve Good

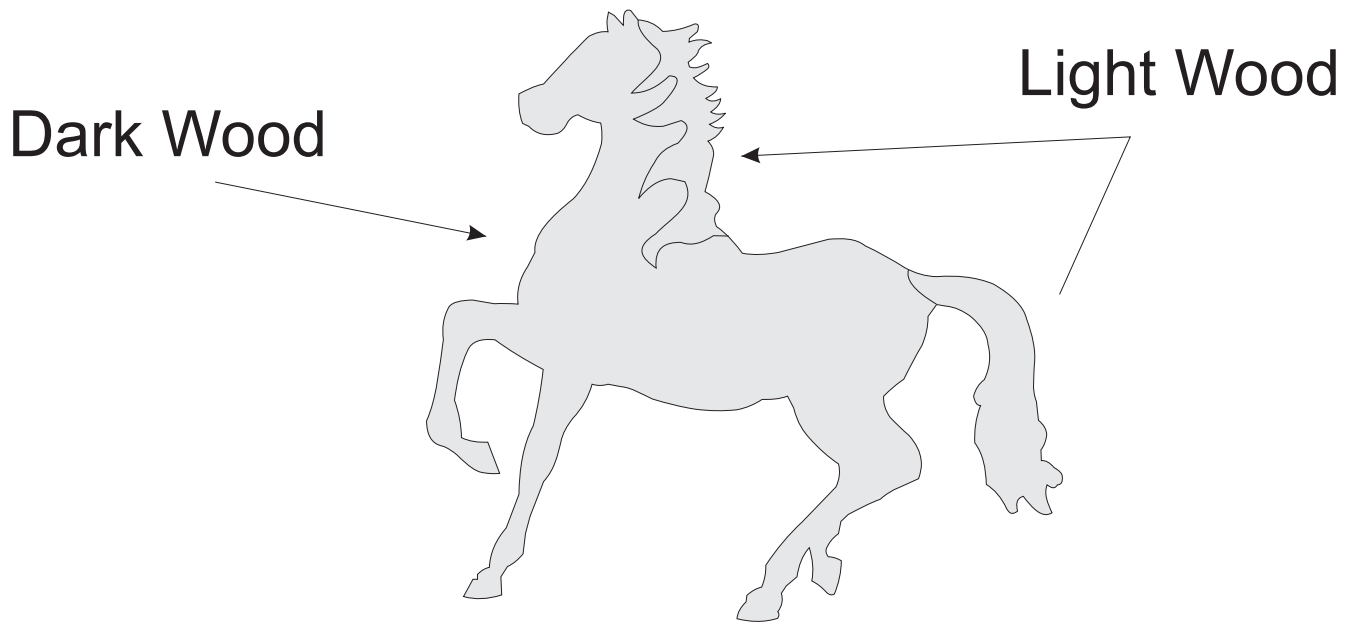# www.scrollsawworkshop.blogspot.com

Home of Scroll Saw Pattern Printer

Segmented Horse Box
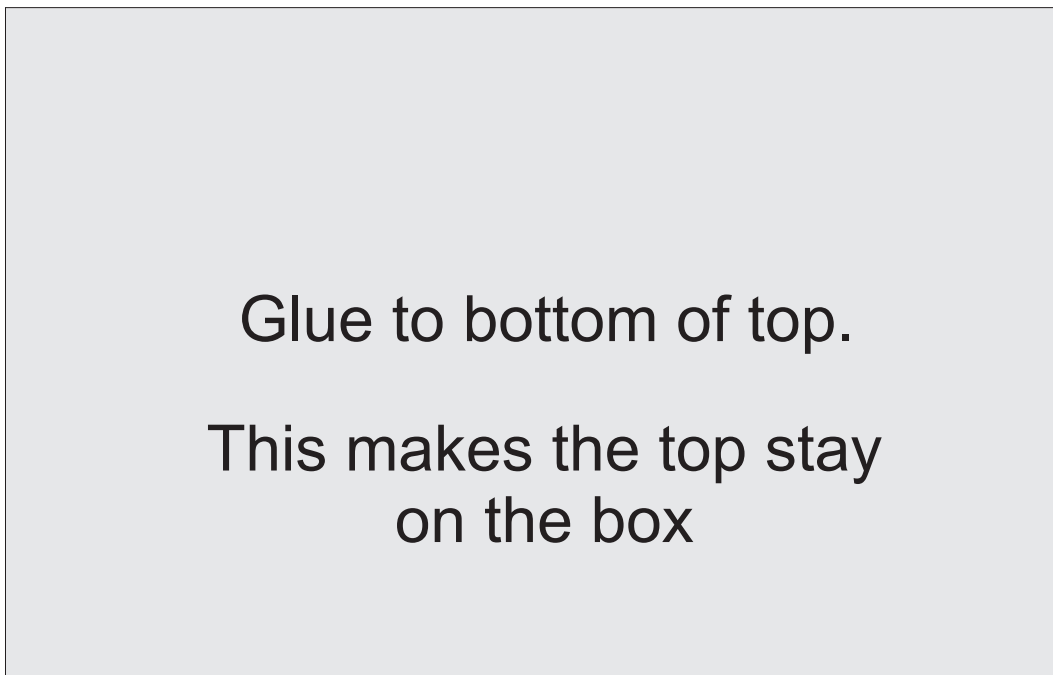
1/4" wood

Light Wood

Dark Wood

Use two blanks of contrasting wood. Stack cut the pattern above. Use the darker wood for the body and the lighter wood for the main and tail. This way you get two horses.

Top

1/4" Wood

Glue to bottom of top.

This makes the top stay
on the box

Bottom 1/4" Thick

Box Walls 1 3/4" or thicker