



Digital Patterns

Designed by
Steve Good

www.scrollsawworkshop.blogspot.com


Home of Scroll Saw Pattern Printer



Hummingbird Mini Clock



Use a 1 3/8" forstner bit to cut the
hole for a 1 7/16" mini clock insert

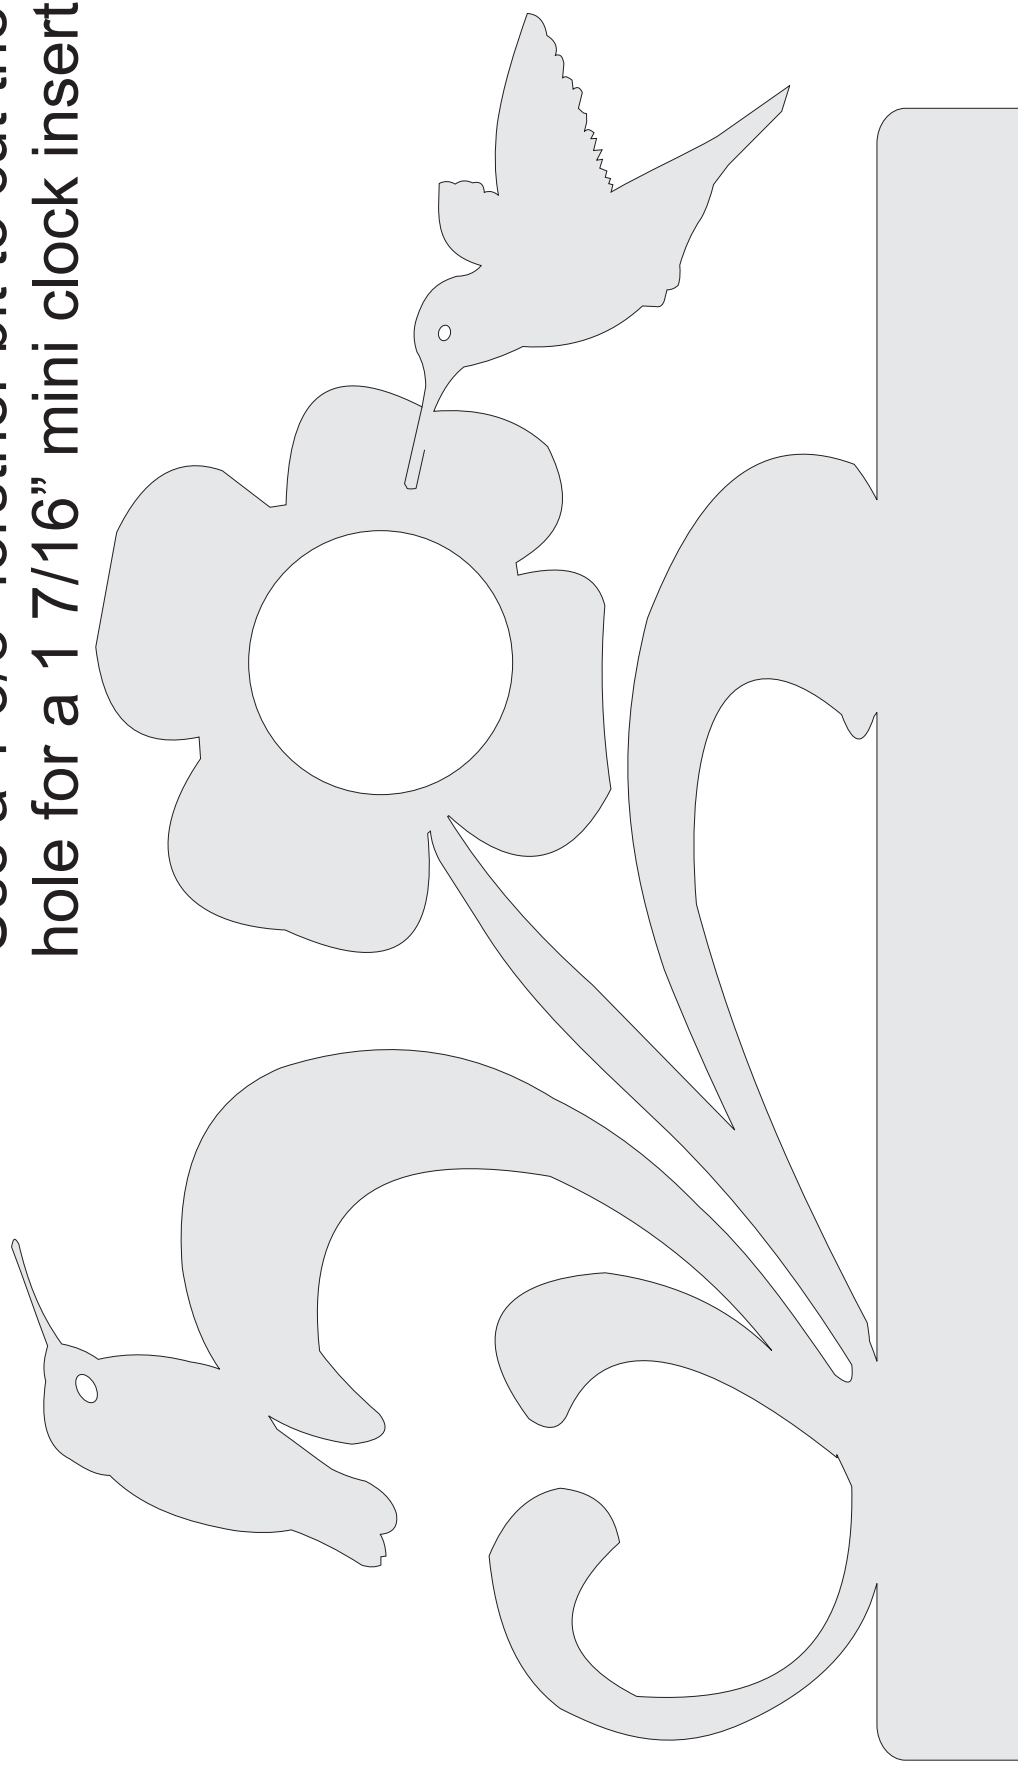

The pattern can be cut from 1/2"
or 3/4" wood.