



Digital Patterns

Designed by
Steve Good

www.scrollsawworkshop.blogspot.com

Home of Scroll Saw Pattern Printer




Inlay Box




For instructions to cut the inlay box
pattern please visit
www.scrollsawworkshop.blogspot.com
The Blog post for June 19th 2008
has video instructions and tips.



1/4"

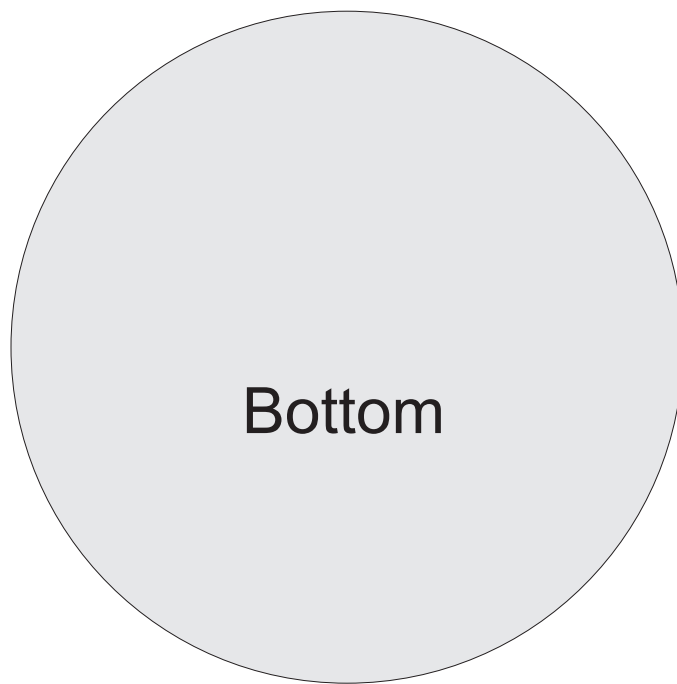

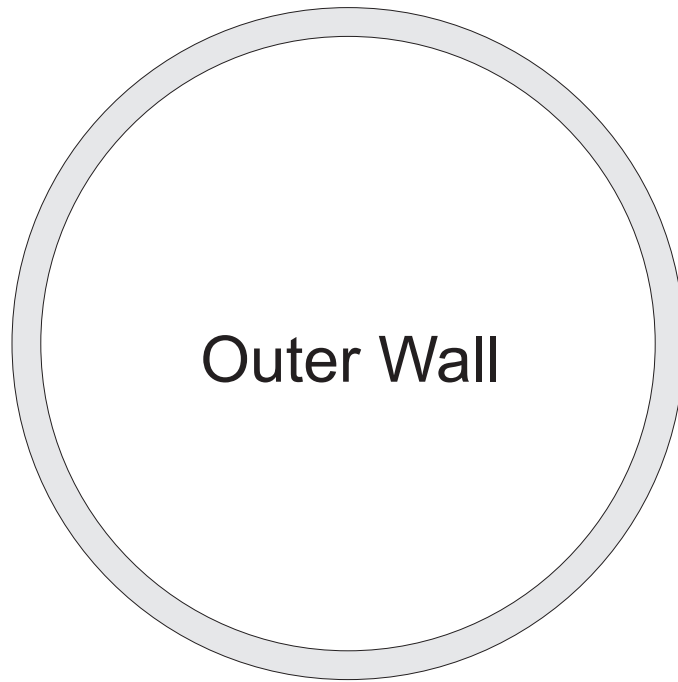

3/4" or thicker. 1" preferred.

