



Digital Patterns

Designed by
Steve Good

www.scrollsawworkshop.blogspot.com

Home of Scroll Saw Pattern Printer




Desk Clock and Letter Opener







Cut with a 1 3/8"
forstner bit.
Do not cut all the
way through.
Just deep enough
for the clock
insert

3/8" thick
Sharpen edges
with a belt
sander

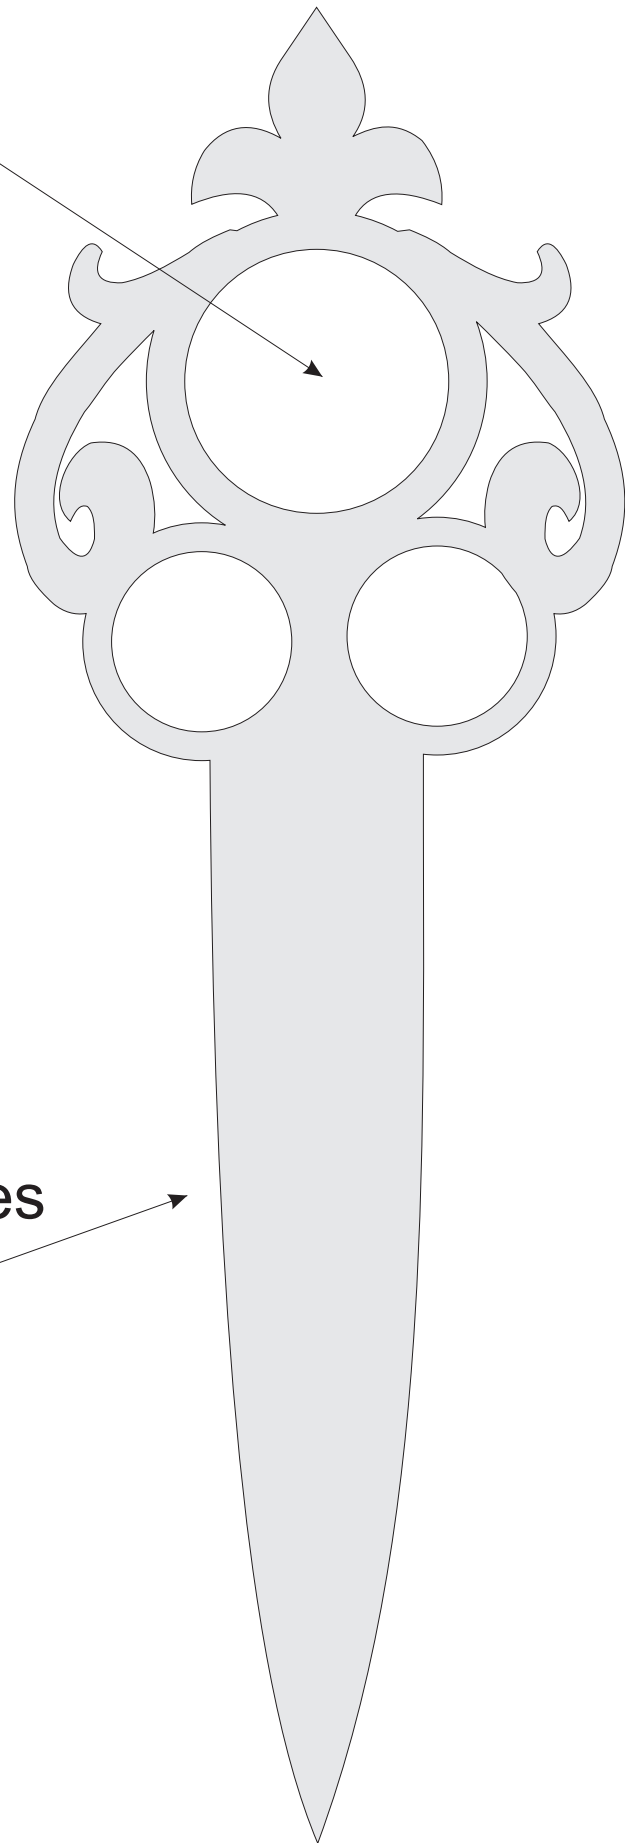


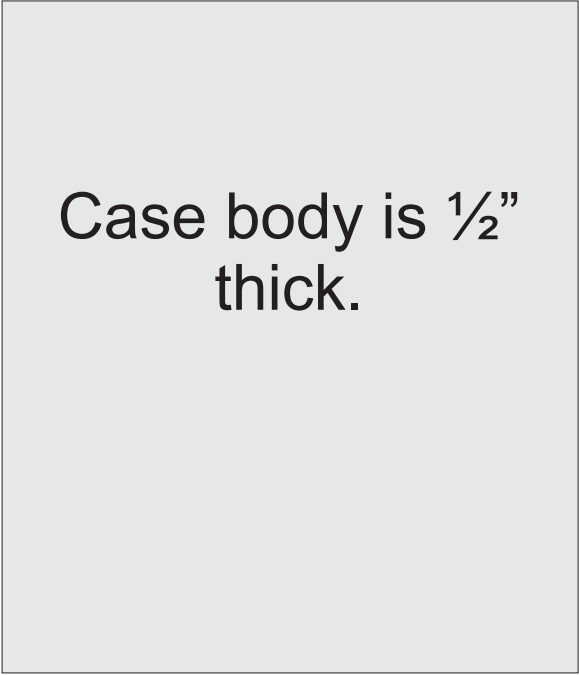

Case body is $\frac{1}{2}$ "
thick.

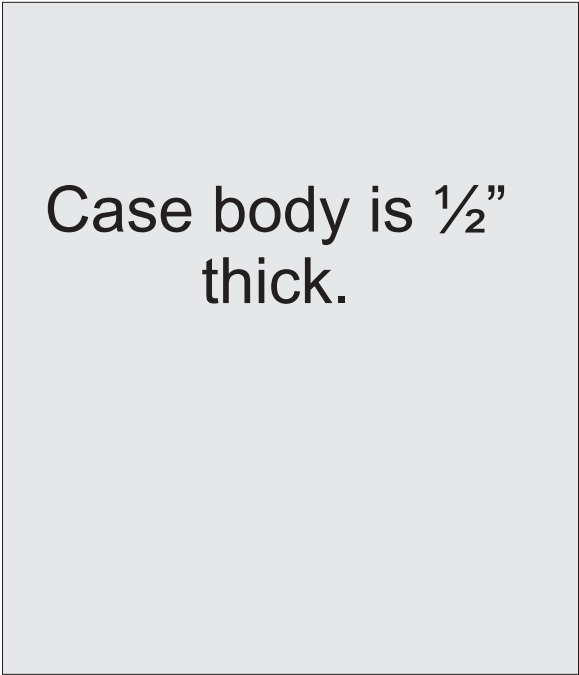

Case body is $\frac{1}{2}$ "
thick.

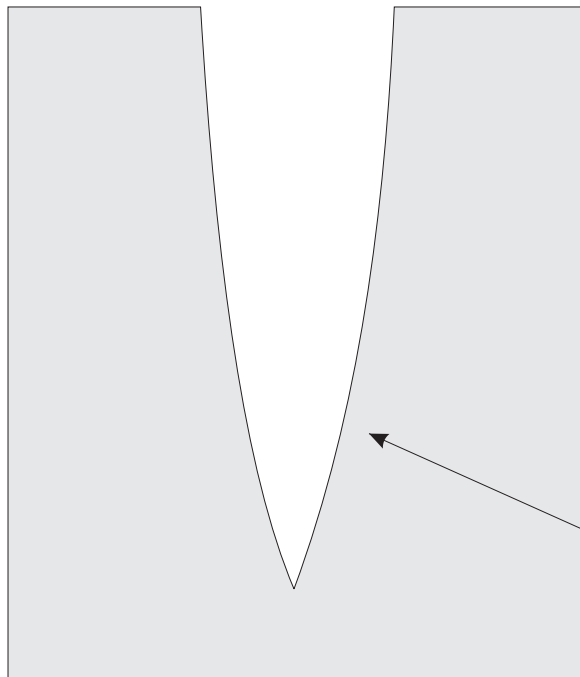

Make this piece the
same thickness
as the letter opener.

This cut insures the clock
stays vertical.

A B C D

E F G H I

J K L M

N O P Q

R S T U V

W X Y Z

Base $\frac{1}{2}$ "thick