



Digital Patterns

Designed by
Steve Good

www.scrollsawworkshop.blogspot.com

Home of Scroll Saw Pattern Printer
and the Scroll Saw Key Chain Printer



Note to commercial print employees: I give my permission to print as many of this pattern book as your customer requires.

20 inch man cave handsaw.






Cut all the parts

Glue the handle parts to the blade.




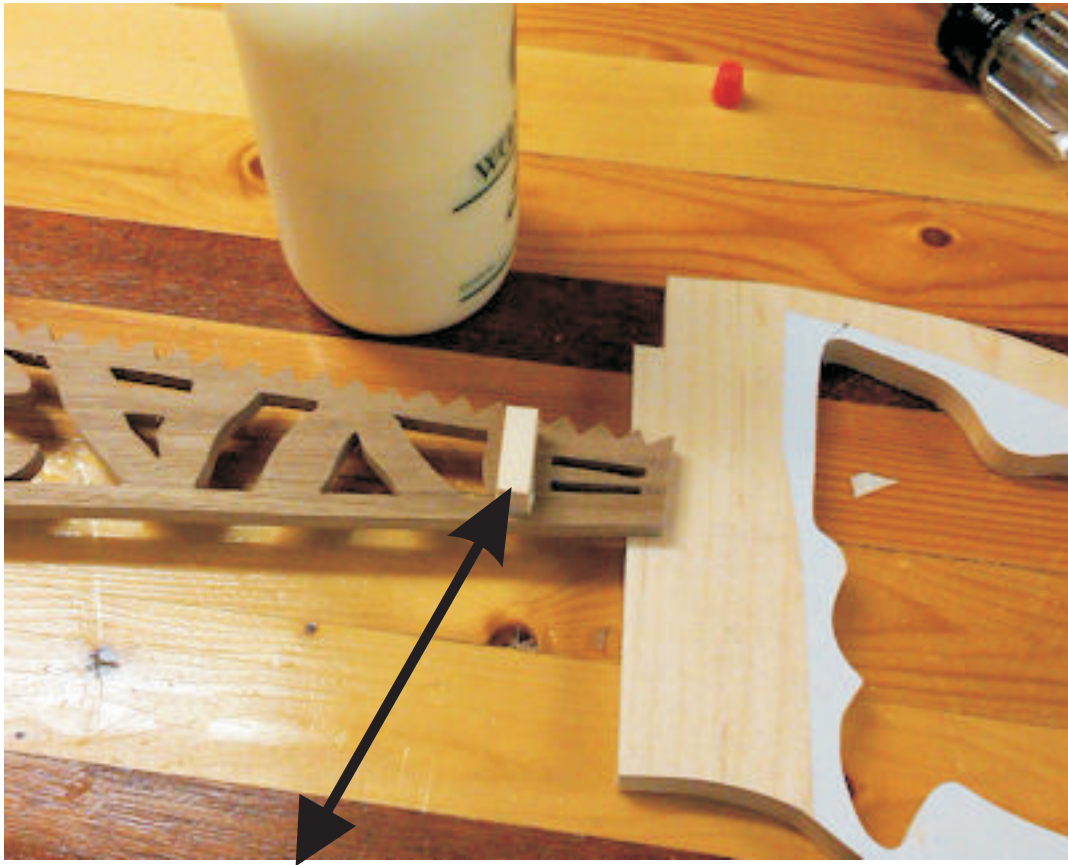

Use this spacer if you plan to hang the sign on the wall.

With the spacer the saw will lay flat on the wall.



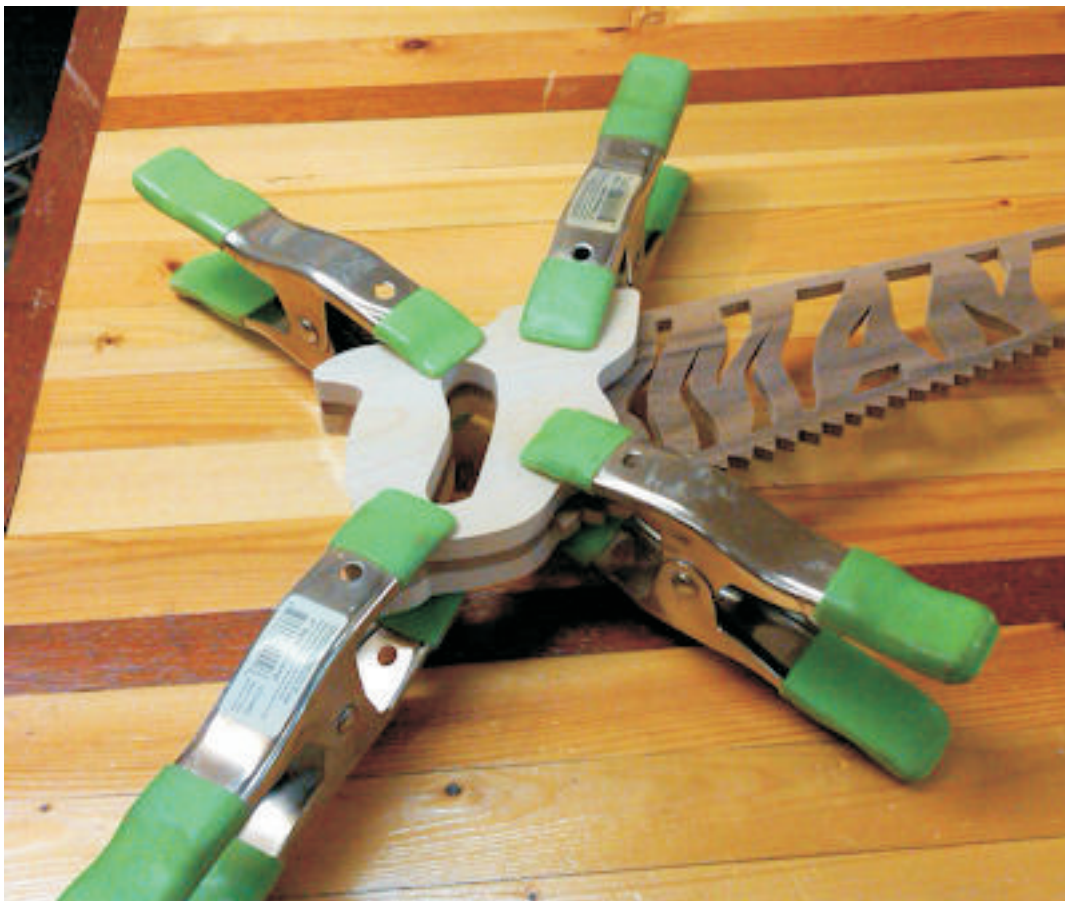

Clamp and let the glue dry.

Cut three dowels long enough to go through the handle.







Drill 1/4" holes in the handle.

Drive the dowels with a mallet






Trim and sand the dowels flush.

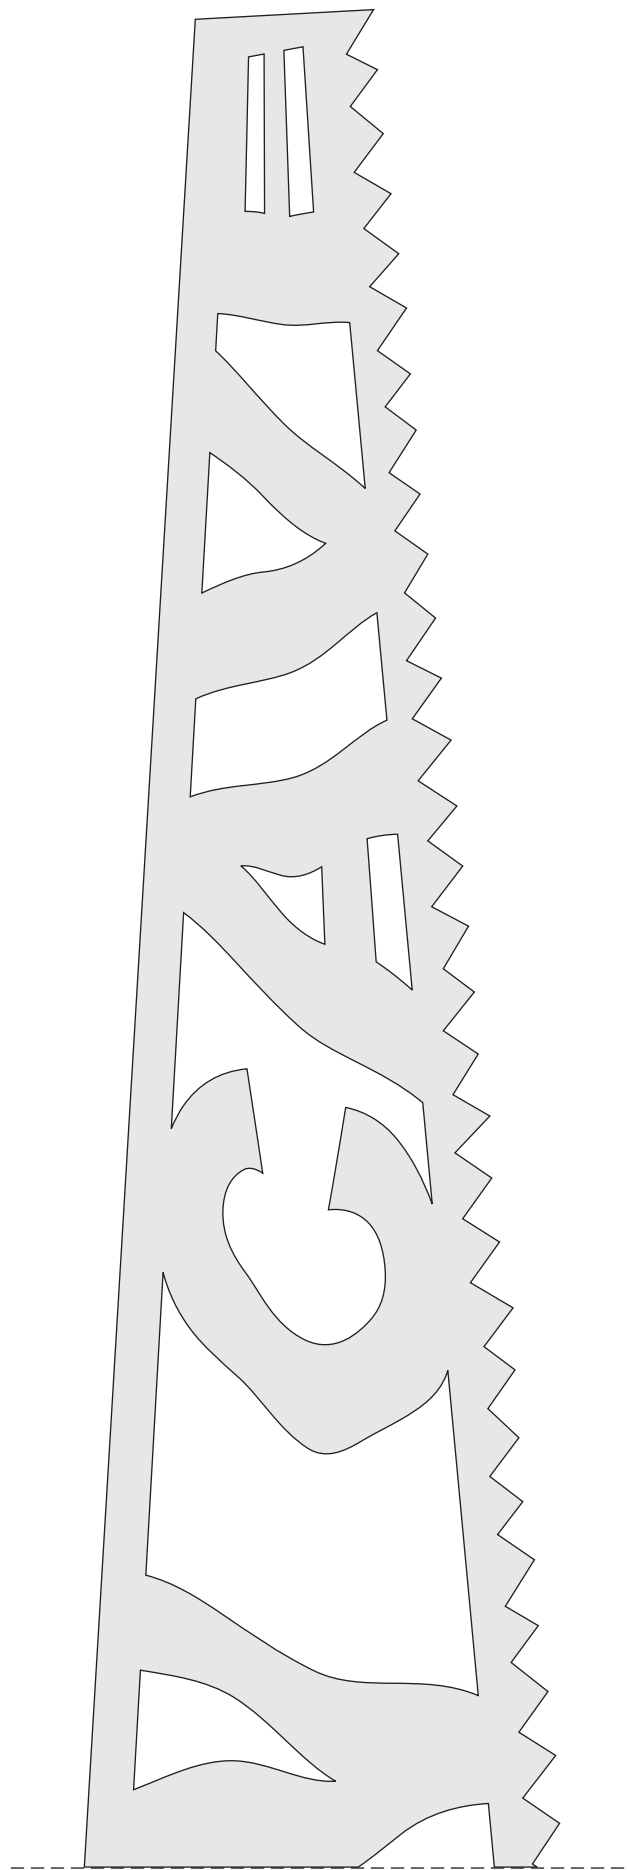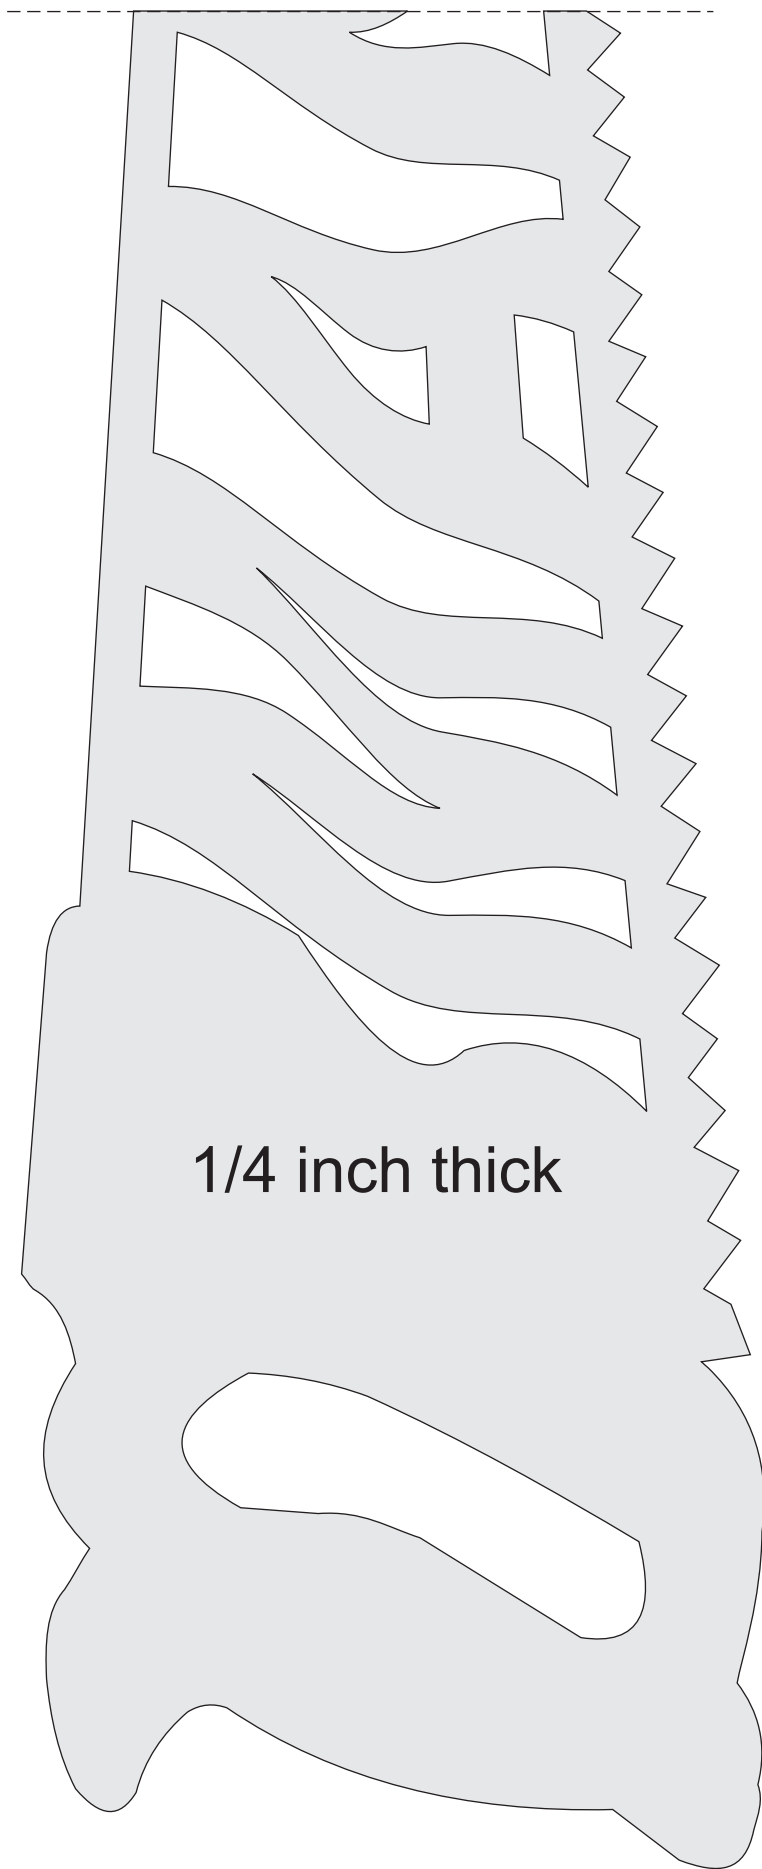

After the saw is assembled you can
drill the holes and insert 1/4" diameter
dowel in the holes.

Wall spacer

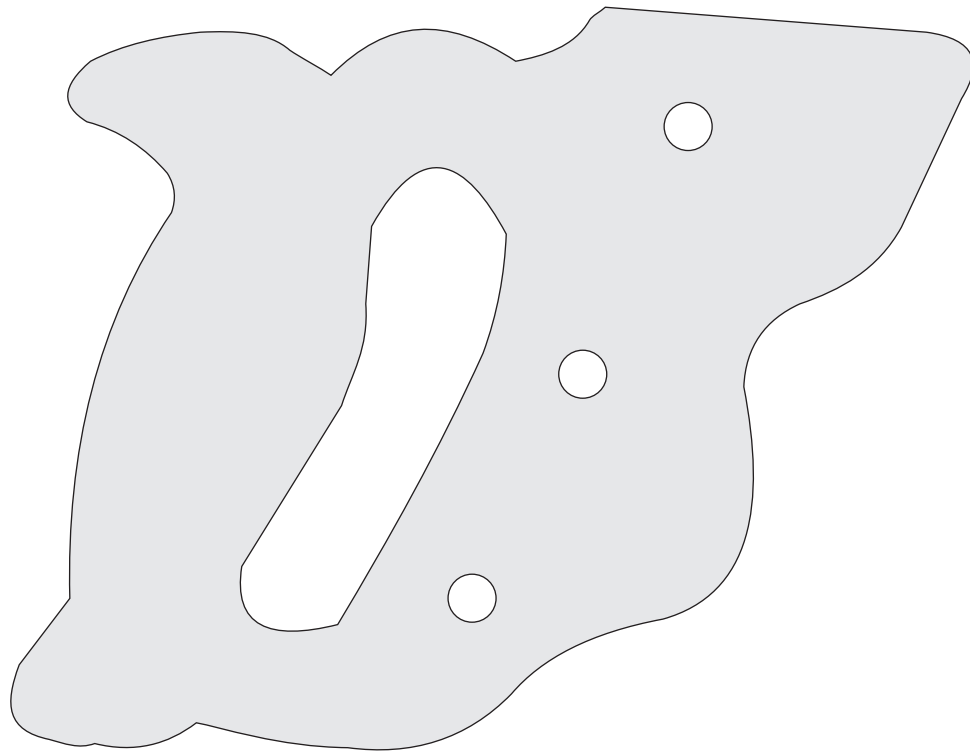

1/4 inch thick

