

## Digital Patterns

Designed by Steve Good

www.scrollsawworkshop.blogspot.com


Home of Scroll Saw Pattern Printer and the Scroll Saw Key Chain Printer



Note to commercial print employees: I give my permission to print as many of this pattern book as your customer requires.

## Mini Alarm Clock



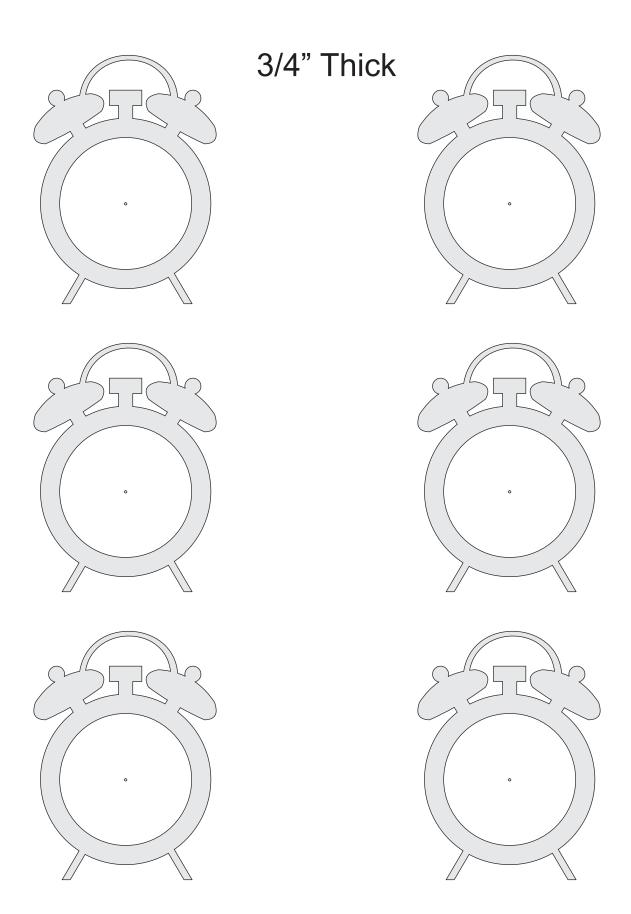

Use a 1 3/8" forstner bit to drill the hole to depth. Requires a 1 7/16" mini clock insert.