



Proud SAW Member

# Digital Patterns

Designed by  
Steve Good

[www.scrollsawworkshop.blogspot.com](http://www.scrollsawworkshop.blogspot.com)


Home of Scroll Saw Pattern Printer



## Mini Dragon Clock



Requires a  $1 \frac{7}{16}$ " mini clock insert.  
Use a  $1 \frac{3}{8}$ " forstner bit to drill the  
hole for the clock.

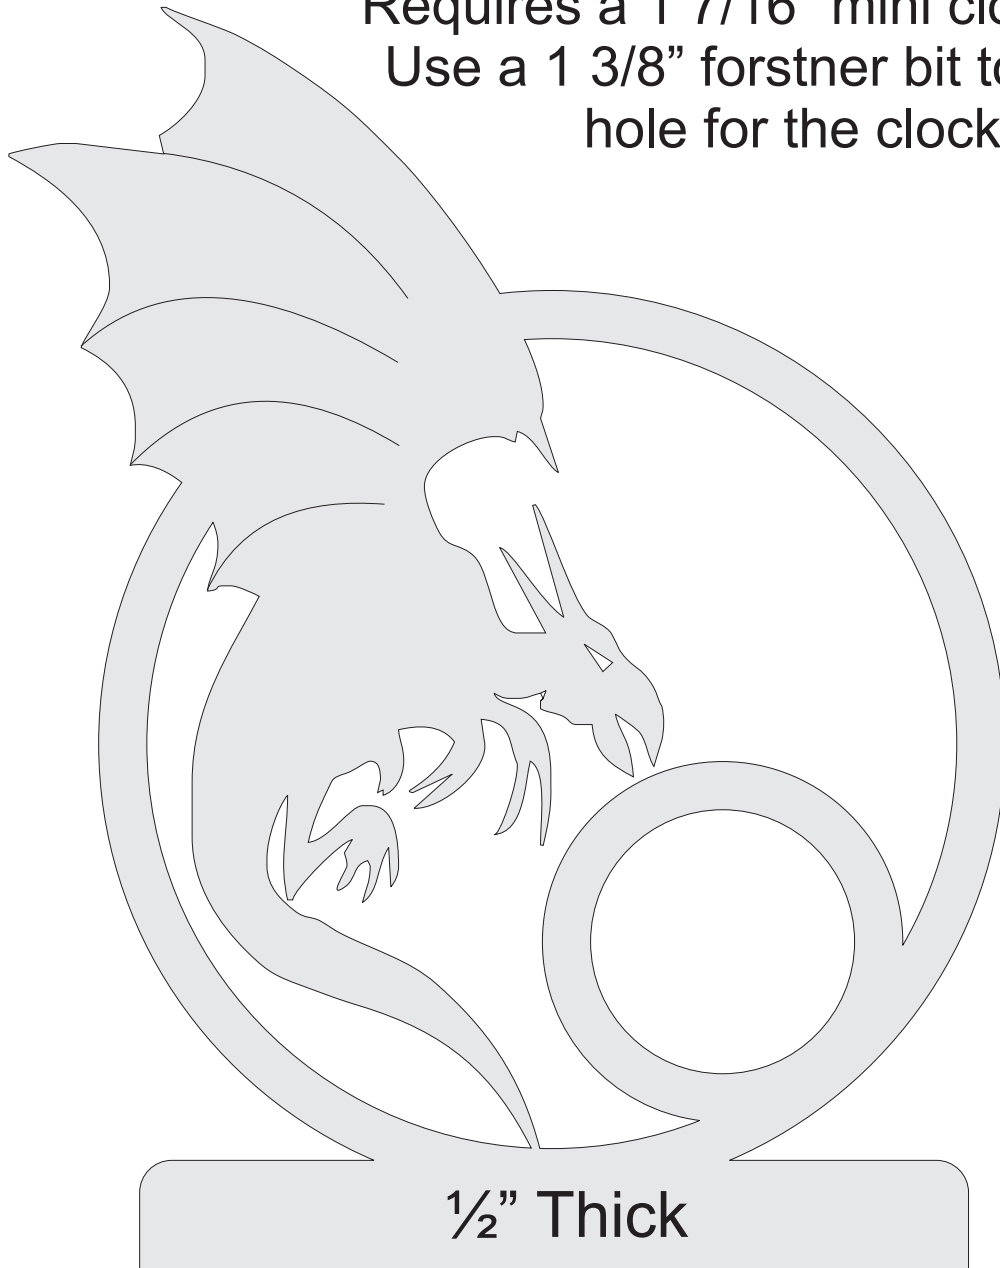

$\frac{1}{2}$ " Thick