




Digital Patterns

Designed by
Steve Good

www.scrollsawworkshop.blogspot.com


Home of Scroll Saw Pattern Printer

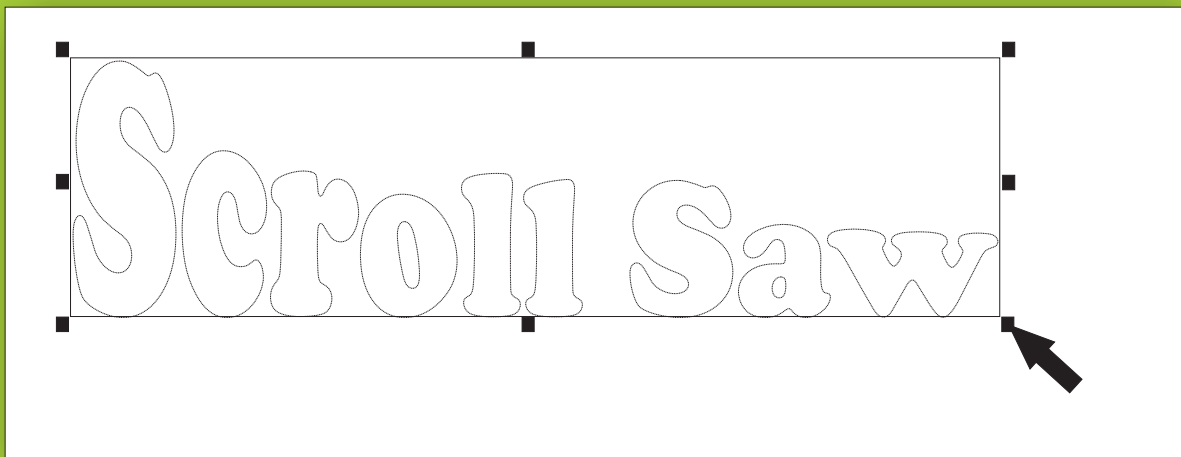


Six more mini clocks



All patterns require a $1 \frac{7}{16}$ " mini clock insert.
Use a $1 \frac{3}{8}$ " forstner bit to cut the hole.

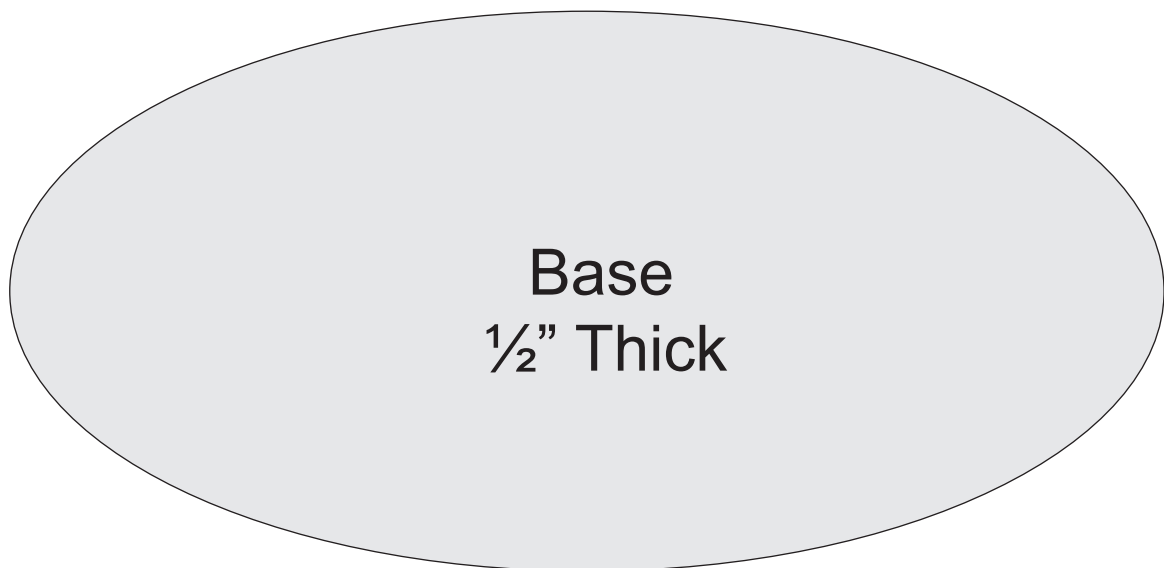



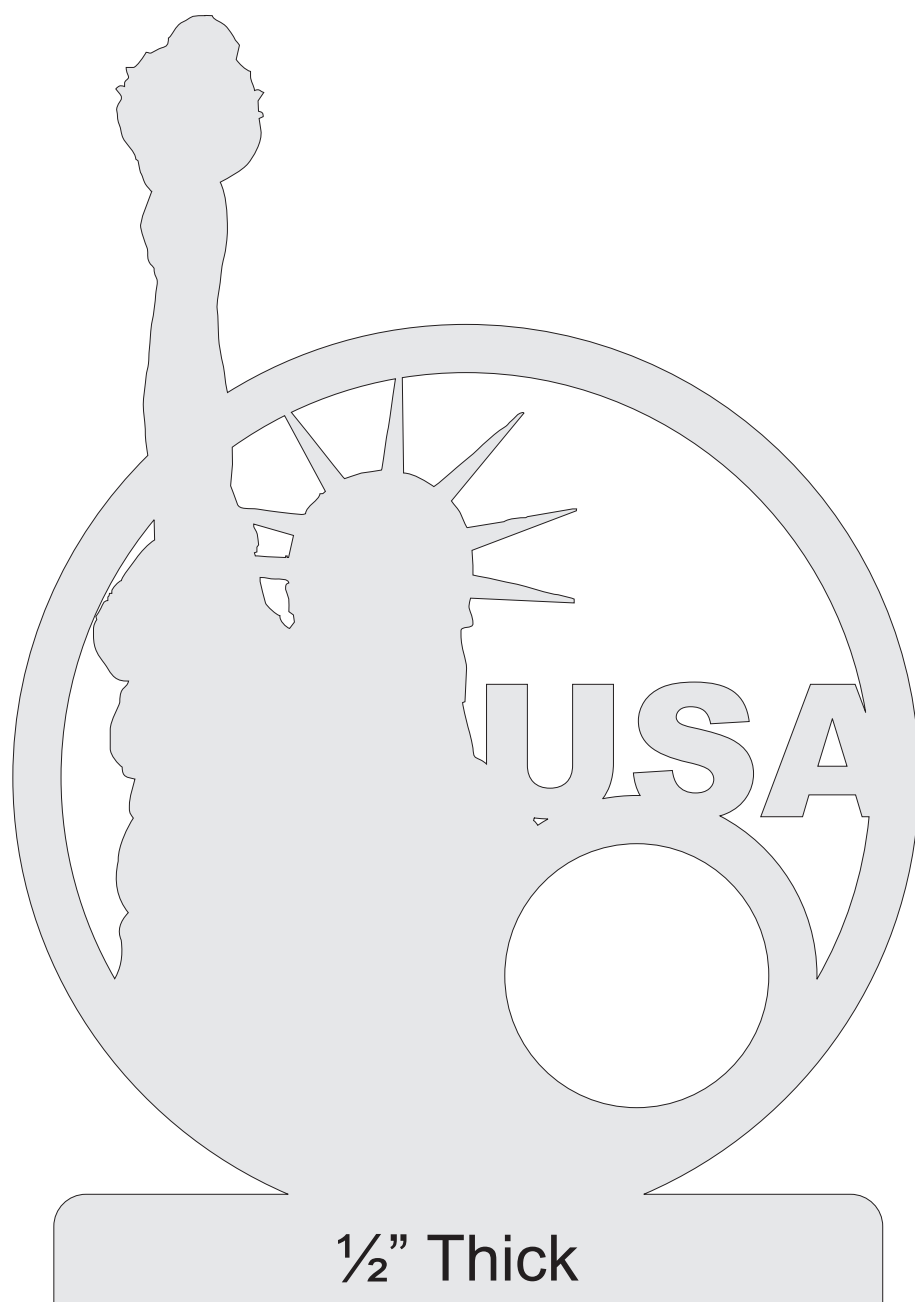







1/2" Thick