




Digital Patterns

Designed by Steve Good

www.scrollsawworkshop.blogspot.com


Home of Scroll Saw Pattern Printer

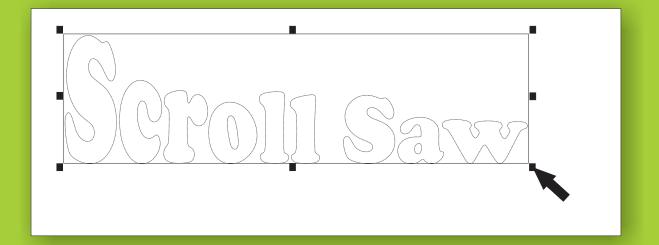






Perfume Tray



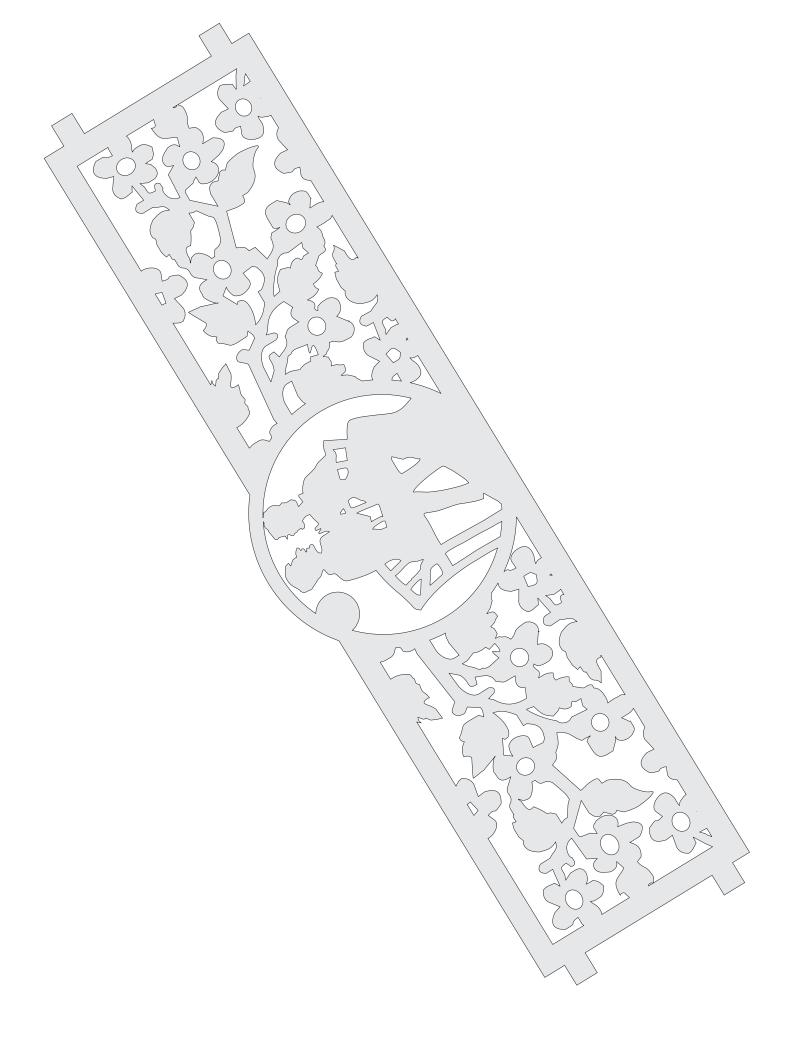

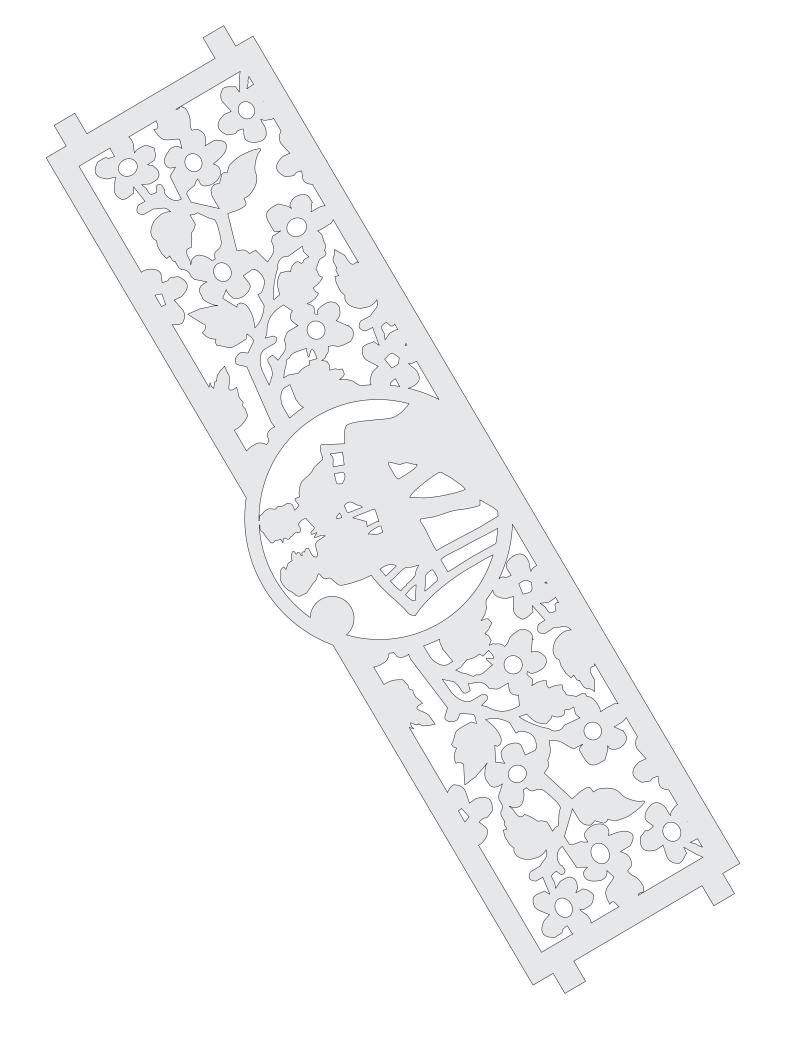

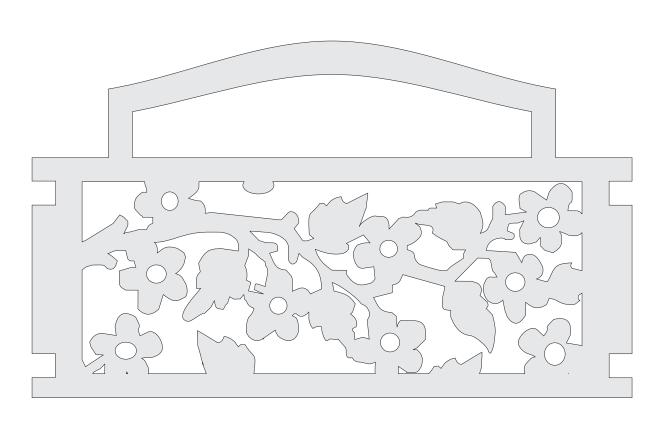

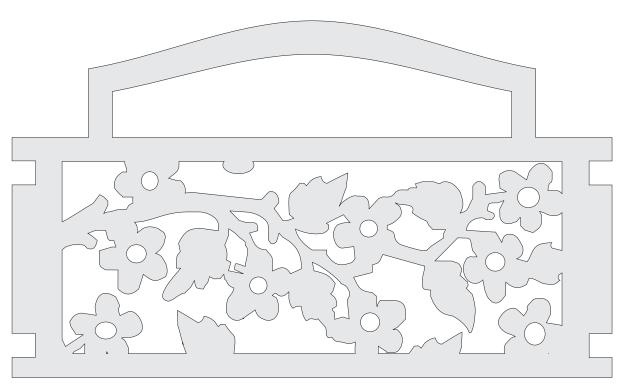

Cut the bottom to the dimensions below. I used a router to put a small cove detail around the bottom.

11" x 6 3/4"

Bottom NOT TO SCALE

