Digital Patterns



Designed by Steve Good

www.scrollsawworkshop.blogspot.com

Home of Scroll Saw Pattern Printer and the Scroll Saw Key Chain Printer




Note to commercial print employees: I give my permission to print as many of this pattern book as your customer requires.

steve@stevedgood.com

Copyright Steve Good 2012



Requires a 2 3/4 inch clock insert with a 2 3/8 inch mounting hole.

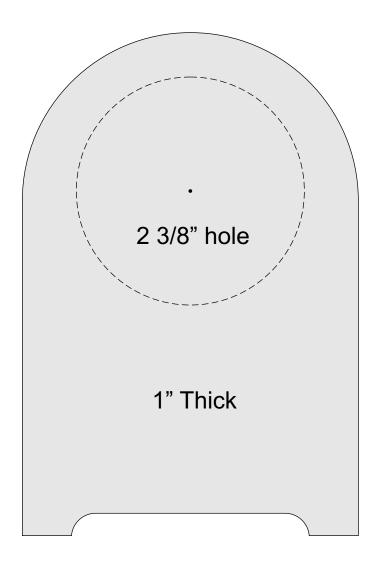

Insert hole is best cut with a 2 3/8 forstner bit. If you do not have one that size you can cut the hole with your scroll saw. Just cut slightly inside the line and sand to a snug fit. One advantage of the forstner bit is you do not have to cut the hole all the way through. This give the back a better apperance.