



Proud SAW Member

# Digital Patterns

Designed by  
Steve Good

[www.scrollsawworkshop.blogspot.com](http://www.scrollsawworkshop.blogspot.com)

Home of Scroll Saw Pattern Printer



## Pocket Watch and Holder

Requires a 1 7/16" mini clock insert.  
Woodcraft Part #125116



Requires a Pocket watch pull and chain.  
Woodcraft Part #145955

<http://www.woodcraft.com>










You want to sand the watch body to give it a nice rounded back.

After you cut and assemble the watch holder  
bevel the bottom 10 -15 degrees and mount it  
to the base.




Drill Hole for watch pull.

Watch body  
 $\frac{1}{2}$ " Thick

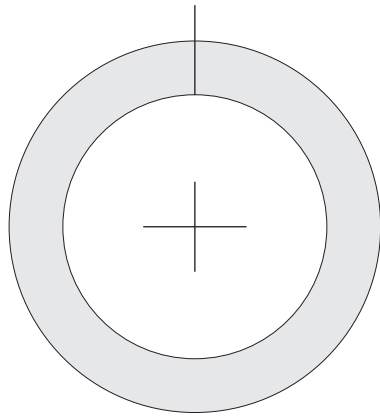

Use a  $1 \frac{3}{8}$ " Forstner bit  
for the clock insert.  
Only drill  $\frac{1}{4}$ " deep.

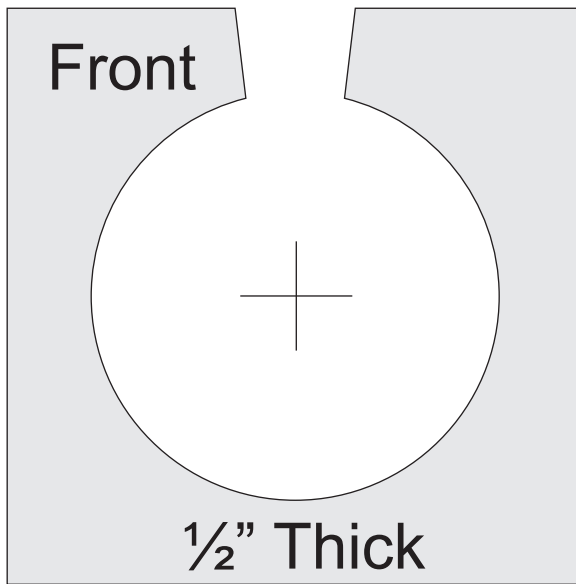

Use a  $2 \frac{1}{8}$ " Forstner bit for the holder.  
Drill all the way through.

