



Digital Patterns

Designed by
Steve Good

www.scrollsawworkshop.blogspot.com

Home of Scroll Saw Pattern Printer
and the Scroll Saw Key Chain Printer




Note to commercial print employees: I give my permission to print as many of this pattern book as your customer requires.


Relief Cut Cross




To make the relief cut set the table to around 2 - 3 degrees. Make test cuts on scrap wood until you get a relief of about 1/4" in depth. Start at point 1 and make the first relief cut. Don't remove the pieces when you finish a cut. They will help keep the project strong as you make the next cut. Continue with cuts 2 and 3 at the same angle. For cut 4 set the table back to 90 degree for the final cut. After you finish all cuts and remove the pattern spread the bottom and apply glue. cut the base on the next page and assemble. Sand and finish.

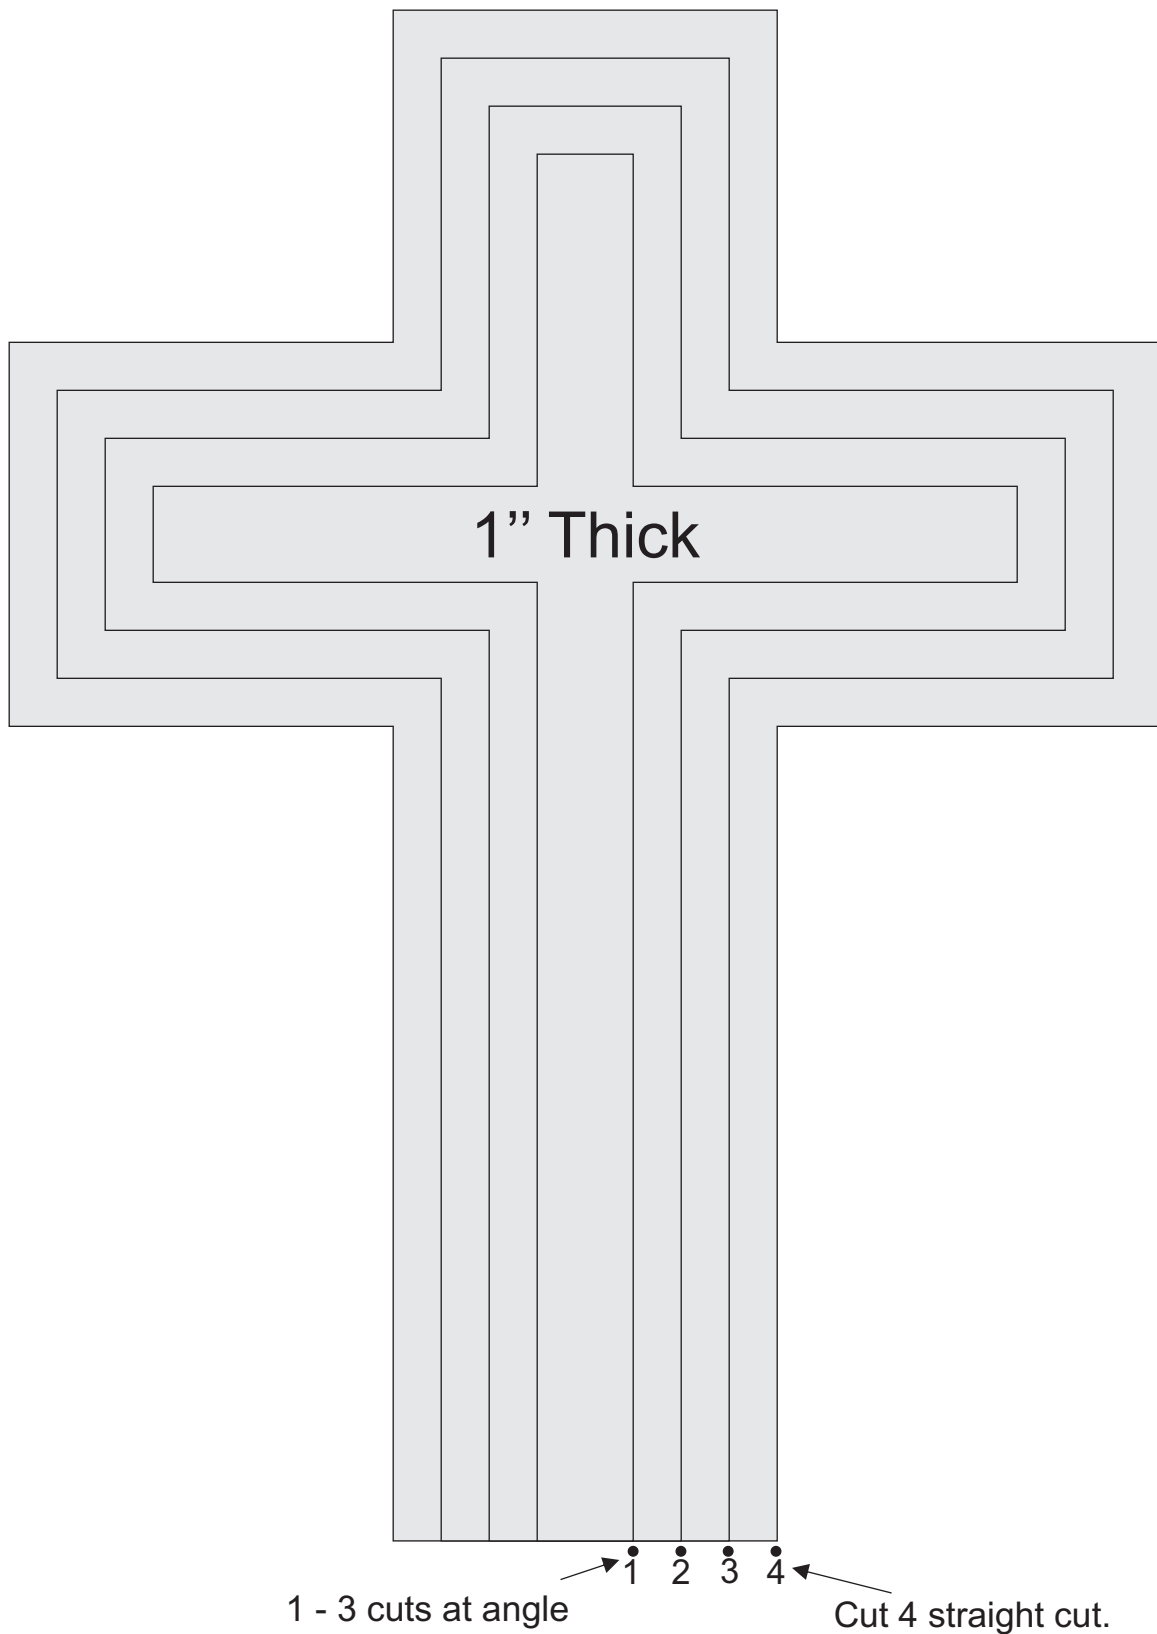

Depending on your relief cuts you may need to adjust the size of the base.



Base
 $\frac{1}{2}$ " Thick

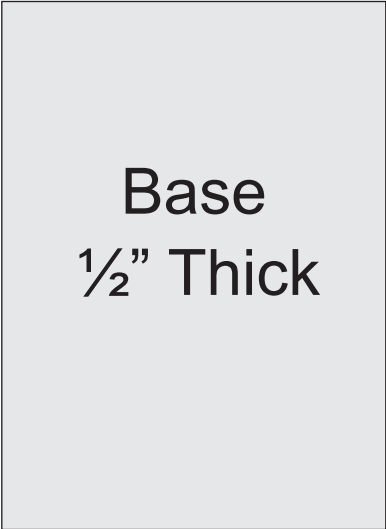

Base
 $\frac{1}{2}$ " Thick